170.00 mm

bioby

Multi-Function Electric Swing

USER MANUAL

IMPORTANT! KEEP IT FOR FUTURE REFERENCE.

Before installing and using, please follow the instructions carefully to ensure the safety of your baby.

125.00 mm

Product Contents

Product Introduction ---------- 2
- Product Specification ---------- 2
- Product Features ---------- 2

Parts Instruction ---------- 3

Installation ---------- 4
- For Base Bracket ---------- 4
- For Pillow and Seat Cover ---------- 4
- For Canopy With Toys ---------- 5
- Safety Belt Instruction ---------- 5

Assemble Instructions ---------- 6

User Instruction ---------- 7
- Button Description ---------- 7
- Motion Lock ---------- 7
- Remote Control ---------- 8
- Power Supply ---------- 8

WARNING ---------- 8

WARNING ---------- 9

Clean & Maintenance ---------- 9
- Clean ---------- 9
- Maintenance ---------- 9

Troubleshooting ---------- 10

After-sales Service ---------- 11

Product Introduction

Product Specification:

Product Name:	Multi-Function Electric Swing
Model(No.Price):	DB2060A
Input Voltage:	100-240V~
Output Voltage:	5V
Output Current:	1A
Frequency:	50/60Hz
Application:	Children up to a weight of 9 kgs or stable to sit up unaided
Main Material:	90% underoiled fiber and an aluminum base bracket
Certificate:	EN12790, EN12232, ASTM F2088-20, ASTM F963-17

Product Features:

1. Swinging from side to side, with five gears mimicking human movement.
2. Protecting baby's spine design on the basis of human engineering.
3. Power supplied by safe 5V low voltage adapter.
4. One-button installation and disassembly, simple and convenient to use.
5. Seat cover made of environmental friendly super soft fabric and non-toxic cotton, breathable and safe & removable and machine washable seat fabric.
6. Made of aluminum alloy base with light weight and strong hardness guaranteeing safety for baby.
7. Controlled by hand ring remote or remote controller, easy to operate.
8. With motion lock and safety belt for protection.
9. With built-in soft music and with Bluetooth enabled for music.

Parts Instruction

Make sure that all of the following parts listed and included in the box. If any part is missing, please contact customer operating. No tools are required for assembly.

1) Multi-toy *2
2) Pillow*1
3) Sleeping net with canopy*1
4) Seat cover
5) Remote controller
6) Adaptor*1, 2 meters of USB cable*1
7) Seat harness*1
8) Base bracket*1

Installation

For Base Bracket

Assembling the frame in the base with ⌭ shape components aligned.

Disassembling: Pull out of the sheet metal and pull up the seat frame.



For Pillow and Seat Cover

Installation: Put the seat cover on the seat frame and fasten the snap button on the back. Attach the pillow to the top retaining ring of the seat frame and press the velcro of the pillow.

Removing: Pull off the velcro to detach the pillow and unfasten the snap button to remove the seat cover.

For Canopy With Toys

Installation: Attach the toys on canopy and fasten the clasps to the pipe of the seat frame, and attach mosquito net to the bottom of the seat frame.

Dismantling: Pull out of the clasps to remove the canopy.



Safety Belt Instruction

Place the baby into the swing and let his legs across both sides of the crotch support. Meanwhile, then turn the crotch support cover up. Adjust the seat belt on both sides and buckle up.

Note: Be sure to use the safety belt correctly when your baby lie on the baby swing for the safety of your child. Buckle off when you take your baby out of swing.

Assemble Instructions

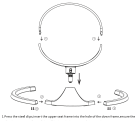

1.Press the seat down from the upper seat frame into the hole of the sheet metal pieces on the base to lock it. Both left and right sides must be locked.

2.Insert left and right plastic interlock angles ensure that the four holes is aligned with the screw holes of the sheet metal on the bottom.

3.Fix screws onto the four holes.

Warning:
Guardian should take good care of your child, prohibit to play accessories and avoid to get hurt or swallow !

User Instruction

Button Description

1. Power button: Plug in and the indicator light is on. Press the button to turn the swing off.
2. Touch the button to play the built-in music. Touch it again to turn the sound off. *Turn on the bluetooth on smart phone and connect with "BT_speaker". Pair swing sleeps, and then disconnect to new connection wait. Then the music will play on the swing.

*Power priority: Bluetooth > Built-in music

3. Touch the button to make swing settings. There are five swing gears indicated by the lights.
4. Touch the button to set the timer. The time is on will have the swing stop swing automatically. The timer is set to 15 minutes. Swing for 15 minutes, and the timer will head swing for 30 minutes.
5. Touch the button to play the next song.
6. Touch the button to increase the volume gradually.
7. Touch the button to decrease the volume gradually.

Motion Lock

Push the motion lock down to lock the seat frame and stop movement.

Pull the motion lock up to unlock the seat frame and let baby swing with swing gears.

Remote Control

Power on/off	Play/pause
Time setting	Previous song
Built-in music/ Bluetooth music	Next song
Volume up	Volume down
1 2 3 4 5	Five swing gears
Swipe make presses once sleep mode/gear 2 with lower 15 minutes.	
Swipe swing sleeps stop swing and press any gear key to restart the swing.	

Power Supply

1.DC plug can be inserted into 100-240V ~ 50/60Hz AC power socket.

2. Adapter output parameters: voltage is 5V and current is 1A.

⚠ WARNING

- The power terminal must not be short-circuited.
- Do not use adapters other than those supplied with this product to power the product.
- Keep children away from working adapter.
- Check the adapter cable connection regularly.

⚠WARNING

1. Number for 3C certification
2. Do not touch the plug or your hands if your hands are wet or damp, to avoid electric shock and injury.
3. Keep the product away from heat sources.
4. Keep your hands and feet away from the swing.
5. Always use the mesh cover.
6. Do not place the product near any heat source and avoid direct sunlight to prevent damage to the product.
7. Do not climb up and sit on the product.
8. Do not use or lift the product with the baby inside.
9. Do not use the product if the baby is sick. Stop using the swing if the baby is feeling uncomfortable.
10. Do not use product in any components are broken or missing.
11. Do not use accessories or replacement parts that are not approved by the manufacturer.

FCC and CE Marks, EU, UK, CA, AU, NZ, CN laws and Rules Compliance

- Only for indoor use, not for outdoor use.
- 2.4GHz Frequency band of Swing.
- Swing sleeps and remote controller are designed to be used at a distance of 10 meters.
- The remote control device only. The product is not intended to respond to voice or other sounds.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Clean & Maintenance

Clean

1. Wash the base bracket and seat frame with wet cloth and a mild detergent. Dry thoroughly then. Please do not use corrosive cleaner.
- Wash the seat cover by hand or machine.
- Wash fabric: Clean it with wet cloth and a mild detergent, and dry it.
- Canopy: Take it off and put a little cleaner, wash it gently by hands. Rinse it with water and dry it. Do not twist or wring the canopy to avoid damage.
- Pillow: Pour the velcro off and take the pillow off. Put a little cleaner, wash it gently by hands, and then rinse it with clean water. Hang it avoiding sun exposure.

Maintenance

1. Please check the baby swing regularly. Make sure of each part is well connected and well installed. Stop using for poor connection and connect it again after tightening.
2. The product contains electronic components, which shall not be used in water or in a humid environment. Please ensure the product is dry and store it in a cool and dry place, including direct sunshine for a long time.

Troubleshooting

Find self-inspection solution below.

No.	Trouble	Solution
1	Not energized	Check whether the adapter and DC cable are connected firmly. Check whether the power socket is in a good condition and can supply 100-240V power. If adapter and cable are damaged, please contact customer service.
2	The swing sleeps stops swing	Do not handle sleeps with a vibration degree of 9 kg or more.
3	Motion lock issues	Check the motion lock if it is in a locked position.
4	Overstrong Whine	Power off and restart it again

Note: For other trouble, please contact us customer service for help.
Never disassemble and repair the swing by yourself.

After-sales Service

Thank you for purchasing our products. If there is any quality problem, please contact with the distributor.

Note:
1. From the purchase date, normal users can enjoy one year's free maintenance service for the circuit board components and one year's free replacement of parts for the whole machine.
2. Other consumables and accessories are not covered by the warranty.

Non-warranty Coverage:
1. Improper use
2. Damage caused by natural disasters and other inexplicable forces