成型尺寸：52*89mm
材质：80G双胶纸
颜色+工艺：1C+双面印制+风琴褶

User Manual
True Wireless Earbuds
FCC ID: 2ABMR-EP-TW3

Thank you for purchasing the EP-TW3 True Wireless Earbuds. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number.

Package Contents
True Wireless Earbuds
Charging Case
USB-A to C Cable
User Manual

Product Diagram

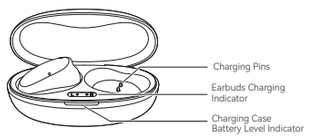



Specifications
Earbuds

Model	EP-TW3
Bluetooth Version	V5.3
BT Solution	7006F4
Technology	HSP, HFP, A2DP, AVRCP
Driver (each channel)	10mm Driver Speaker
Sensitivity	107.9dB ±3dB (at 1kHz/0.126mV)
Frequency Range	20Hz – 20kHz
Impedance	16Ohm ±15%
Microphone Type	MEMS (microphone chip)
Microphone Sensitivity	-38dB
Microphone Frequency Range	100Hz – 8kHz
Charging Time	About 1.5 Hours
Battery Life	Music playback 7h and call 5h (50% volume)
Battery life time - at Standby mode	≥60h
Battery Type	Polymer Battery
Operating Range	10m
IP Rating	IPX4
Weight	4g

Charging Case

Charging Input	DC 5.0 +/- 0.25V
Charging Time	About 2 Hours
Battery Type	Polymer Battery (320mAh)
Number of Earbuds Recharges	2 times
Weight	27g

Getting Started
Note: Remove the protective film from the charging case when using for the first time.

Charging
Fully charge the charging case before the first use. To charge, connect the charging case to a USB charger or charging port with the included USB-A to C cable to charge the charging case. When the LED Charging indicator on the outside of the charging case turns on white, the case is fully charged. Charging takes about 2 hours, offering an additional 2 charges to the earbuds. The earbuds should be stored in the case when not in use.

Turn On / Off

Turn On	Open the lid of the charging case or hold on the touch-sensitive panels on both earbuds for 2 seconds when they are turned off
Turn Off	Return both earbuds to the charging case and close the lid or hold on the touch-sensitive panels on both earbuds for 5 seconds when they are turned on

Pairing
Starting with the earbuds in the case:
1. Open the lid of the charging case
2. Turn on the pairing function on the device you want to pair with the earbuds
3. From the list of available devices find and select "EP-TW3"

Regular Use After Pairing
Once the earbuds are successfully paired with your device, they can be switched on and off as follows:
- Open the lid of the charging case, then both earbuds will turn on and connect with your device automatically
- To turn off, long press the left/right earbud touch-sensitive panel for 2s to turn on, and it will automatically reconnect after turning on

Using the Left/Right Earbud Only
Starting with the earbuds in the case:
1. Take the left/right earbud out
2. Turn on the pairing function on the device you want to pair with the earbud
3. From the list of available devices, find and select "EP-TW3"

Reset the earbuds
Starting with the earbuds in the case:
1. Open the charging case and take earbuds out of charging case
2. Five-Tap the touch-sensitive panel on either earbud, there will be alarm sound "du", indicating that the record is successfully cleared.

Note: Remove the protective film from the charging case when using for the first time.

CHARGE THE EARBUDS AND CHARGING CASE BEFORE USE

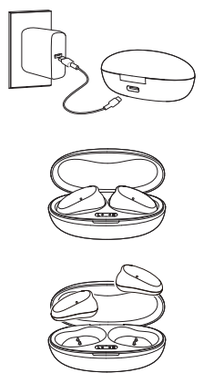

Model: EP-TW3

FCC ID: XXXXXXX

PAIRING
1.Open the lid of the charging case,both earbuds will then turn on and enter pairing mode

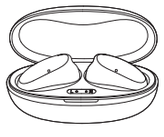

WEAING INSTRUCTIONS
2.Take out the left/right earphones (the L/R mark on the inside of the earphones), snap the earphones into the outer auricle, and rotate the earphones according to the direction of the arrow to make the earphones wear more stably.

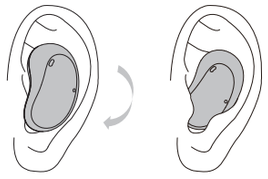

3.Turn on BT on your device



4.Select EP-TW3



Notes
- When you turn on the earbuds, they will be automatically reconnected to the previously paired device or enter pairing mode if no paired device is found
- Either left or right earbud can be used individually once connected to your device, if you keep the other one inside the charging case
- If a single earbud exceeds the connection range for 3 minutes, the earbud will turn off, if both earbuds exceed the connection range for 3 minutes, the earbud will turn off.

Controls & LED Indicators
Streaming Audio
Once paired, you can wirelessly stream audio on your device via the earbuds. Music will automatically get paused when you receive an incoming phone call and will be resumed once the call ends.

Play or Pause Music	Double-Tap the touch-sensitive panel on either earbud
Skip to Previous Track	Long Press the touch-sensitive panel 2 seconds on the left earbud
Skip to Next Track	Long Press the touch-sensitive panel 2 seconds on the right earbud
Music/Game Mode	Three-tap the touch-sensitive panel on either earbud
Increase Music Mode Volume	When you are on music mode, tap the touch -sensitive panel on the right earbud once
Decrease Music Mode Volume	When you are on music mode, tap the touch -sensitive panel on the left earbud once

Taking Calls

Activate Siri or other Voice Assistants	Four-tap the touch-sensitive panel on either earbud
Answer the Call	Double-tap the touch-sensitive panel on either earbud
Reject an Incoming Call	Long press the touch-sensitive panel 2 seconds on either earbud
End the Call	When you are on a call, double-tap the touch-sensitive panel on either earbud
Increase Call Volume	When you are on a call, tap the touch -sensitive panel on the right earbud once
Decrease Call Volume	When you are on a call, tap the touch -sensitive panel on the left earbud once

Earbuds Charging Indicator	Status
The Right White Light flashes 3 times	Return Right earbud to the charging case
The Left White Light flashes 3 times	Return Left earbud to the charging case

LED Battery Level Indicator	Status
The Light Flashes White Quickly	<20% battery remaining
The Indicator White Light Flashes	Charging case charging
The Indicator White Light Solid Light	Charging case fully charged

FAQ
The earbuds are on, but not connecting to my device
For the earbuds and your device to establish a connection, you need to put them both in pairing mode. Please follow the instructions in the "Pairing" section of this manual.

I've connected the earbuds with my smartphone but can't hear any sound
Double-check the volume level on your smartphone and the earbuds. Some smartphones require you to set up the earbuds as an audio output device before the audio can be transmitted. If you're using a music player or other device, please make sure it supports the A2DP profile.

The sound isn't very clear or the caller can't hear my voice clearly
Adjust the volume on your smartphone and the earbuds. Try moving closer to your smartphone to rule out the possibility of interference or wireless range-related issues.
The maximum range is 10m. However, the actual range depends on environmental factors. For optimal performance, keep your device connected within a range of roughly 4m to 8m and make sure that there are no major obstacles (like reinforced steel walls) between the earbuds and your device.

The earbuds won't turn on
Try charging the earbuds for a while. If the earbuds still won't power on, please contact our support team at the email address given in Warranty &

Customer Support.

I put the earbuds back in the charging case, but the earbuds are still connected
The charging case is probably out of power. Try charging it.

Product Care & Use
- Keep away from liquids and extreme heat
- Don't use the earbuds at high volume for extended periods, as this may cause permanent hearing damage or loss

CE Statement
Max RF power level:
BT classic (2402~2480MHz): 4dBm
RF exposure assessment has been performed to prove that this unit will not generate the harmful EM emission above the reference level as specified in EC Council Recommendation (1999/519/EC).

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Excessive sound pressure from earphones and headphones can cause hearing loss.

Notice: This device may be used in each member state of the EU.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.