9017-SP-0161-B IM说明书 193.5x100mm

64.5mm

100mm

BASS JAMM

Sound Top

Wireless Table Speaker

HI-FI HIGH PERFORMANCE SPEAKER

Instruction Manual

Thank you for purchasing the Sound Top Wireless Table Speaker. This manual provides more information about this wireless speaker, please read the instructions before using.

MAXIMUM WEIGHT LOAD 70.5 KG 90 LBS

Product Overview

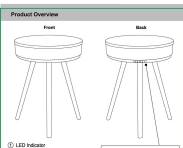

① LED Indicator
② Power On/Off Button
③ Mode Button (Speaker/FM Radio)
④ USB Type-C Charging Port
⑤ Volume Down/Previous Sound Button
⑥ Volume Up/Next Sound Button

Package Contents

Sound Top Wireless Table Speaker x 1
Leg x 3
EVA Sticker x 3
USB Type-C Charging Cable x 1
Instruction Manual x 1

Technical specification

Driver Diameter: 100 mm
Impedance: 4 Ohms
Power: 5 Watts
Li-ion Battery:3.7V 3500 mAh
Playtime: 4.8-9 Hours
Charging Time: 4-5 Hours
Bluetooth Range: 32.8 Feet
Bluetooth Version: 5.0
Built-in Battery, USB Type-C Charging
50cm USB Type-C Charging Cable Included
With FM Radio Function

How To Assemble

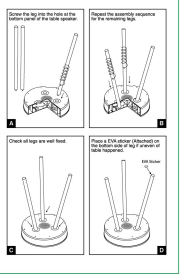

正面

Power On/Off

Power on
Press and hold the Power Button for 2 seconds.

Power off
Press and hold the Power Button for 2 seconds.

Note: Always power off the speaker when not in use.

Pair Wireless speaker with your mobile device

1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 32.8 Feet.
2. Power on the speaker, it will enter pairing mode.
3. Activate the Bluetooth function on your phone within range and select "BT SPEAKER TBL" from the list shown.
4. You will hear a beep sound when pairing is successful.

Reconnect Wireless speaker to your mobile device

When powered on, the wireless speaker will automatically connect with the last successfully paired device.

Change the Mode for the Wireless Speaker

Press the "MODE" Button one time to change to FM Radio mode and press the "MODE" Button one time to change back to Bluetooth mode.

FM Radio

Auto Scan all Channels
Press Power Button once.

Next Channel
Press Up Button once.

Previous Channel
Press Down Button once.

Volume Up
Press and hold Up Button.

Volume Down
Press and hold Down Button.

Charging your Wireless speaker

⚠ For your safety, please always use appropriate 5V input charger/Adapter to charge the product. **DO NOT USE** Quick Charging USB Adapter to charge the product, as it might damage the product.

1. Turn off the Power Button of the speaker.
2. Connect the USB Type-C plug to USB Type-C charging port on the speaker, then connect the USB plug to a USB port on a computer or wall adapter to begin charging.
3. The LED Indicator will turn orange while charging and will turn off once fully charged.

NOTE:
- You must select a qualified charger from a regular manufacturer.
- Please fully charge the Wireless speaker if it has been not used for more than 6 months.

⚠ **CAUTION:** The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.

FAQ

- **If the Wireless speaker cannot be paired with your device, please try the following:**
  Ensure that your speaker is in pairing mode or reconnection mode.
  Ensure that Bluetooth search function of your mobile device is activated.
- **If the Wireless speaker cannot be recharged:**
  If you use a power outlet, ensure that the power supply is connected securely and that power is on. If you use a computer, ensure that is connected and the USB port is powered.

⚠ Safety instructions for the lithium battery and the product

-Make sure the product is cleaned thoroughly before using.
-Clean only with a slightly damp, lint-free cloth.
-Do not use abrasive, alcohol, or acetone to clean.
-In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.
-Only charge the product at ambient temperatures between 10 °C/ 50 °F and 45 °C/113 °F.
-Do not heat above 70 °C/158 °F, eg. Do not expose to sunlight or those into fire.
-Switch off the product after use.
-Never put heavy objects or sit on the table, it's only handle less than 30 lbs.
-Do not use the product in humid conditions, such as in the bathroom, or in the sea outdoors.
-This product has no waterproof function, so please do not put it in water or use it where there is water.
-Do not store or use the product at high temperature, humidity, and near the source of the fire.
-Don't disassemble, repair and transform them.
-Improper operation of the product or the lithium battery pack can lead to explosion, heat generation, fire development or smoke development.
-Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2ADMS-SP-0161B

ITEM# SP-0161-B

Distributed by 1616 Holdings, Inc.
701 Market Street, Suite 200
Philadelphia, PA 19106
Made in China

Keep All Relevant Information For Future Reference

背面