COROS™

# User Manual

www.getcoros.com

# Index

# About Coros LIVE

```
                    ┌──────────────┐
                    │              │  ○── Up
                    │ ┌──────────┐ │
                    │ │          │ │  ○── Select
                    │ │ Display  │ │
          Back ──○  │ │          │ │  ○── Down
                    │ └──────────┘ │
                    │              │
                    └──────────────┘
```

- Up and Down button: Press "Up" and "Down" button to select time mode when the device is standby. Read long message in warning mode.

- Select button: Press "Select" button to the main menu and use "Up" and "Down" button to set up Bluetooth, Music Control ,Camera, Alarm, Display and Time.

- Back button: Display the mode when the device is standby. Cancel message reading in warning mode. Turn off the vibrating when you get a call. Save and quit menu settings.
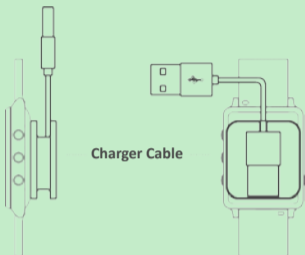
**Charger Cable**

- Reset device: Connect with charger and press "Up" and "Down" button, then all the data will be Reset.

- Please use standard usb cable to charge your device.

- Your device is 30 meters waterproof. It can be used for outdoor sports and water sports. Please use wet and soft cotton cloth to clean device.
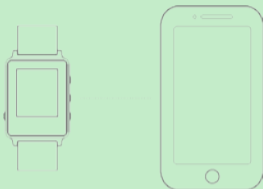
• Step1:

**Download "Coros" app**

 iOS users: Search "Coros" in App Store. Compatible with iPhone6plus,iphone6 ,iPhone5s,iPhone5,i Phone4s which higher than iOS 7.1.

 Android users: Search "Coros" in Google Play Store. Compatible with Android 4.4, and Bluetooth 4.0 inside.

• Step 2 :
Press "Back" button to get the ID of your device.LaunchCoros application. **Select the matched ID and connect with it.**

**Notifications**-Receive the notice of messages,calls and mails.

**Music Control**- Press"Select" button to play and pause music.Switch songs with "Up" and "Down" button.

**Camera Control**-Switch photo and video mode with"Up"and"Down"button. Take photo and record video with "Select" button.

**Fitness** - Count information of exercise for everyday.Check sports information of a week with"Up"and"Down"button.

**Find Phone**- Connected with your phone, press confirm to ring.

**Reset**-Reset Coros LIVE to defaults.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Hereby, **Coros Wearables Inc.**, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Please visit Coros Official Website for
more information:

www.getcoros.com