12*7cm

EasyAcc

Quick Start Guide

Basic Information

Thank you for choosing the EasyAcc MC2 Bluetooth Speaker. Please read this manual carefully before use and keep it for future reference.

Product Overview

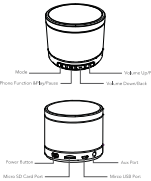

Usage Tips

Product Features

- Bluetooth 4.1
- Telephone function
- AUX function
- FM radio
- Auto save present volume, FM or playing position of SD card

Package Contents

MC2 Bluetooth Speaker	x1
Charging cable	x1
3.5mm AUX cable	x1
User manual	x1

Technical Specifications

Bluetooth Version	V4.1	Lithium Battery Capacity	1800mAh
Frequency Range	20Hz-20KHz	Speaker Specification	φ72mm 4Ω 5W
Operating Range	≤10M	Stand-up Affect	≤80%
Operating Voltage	5.2V	Response Frequency	140Hz-8k
Charging Voltage	DC 5V	Response Rate	180mV/W
Product Dimension	101*65*65mm	Play Time	18h
Product Weight	275g	Working Temperature	0~+50℃

Usage Tips

How to Use

1. Turn on the speaker. You will hear a prompt tone, and the LED indicator will flash continuously, indicating that the speaker is ready for pairing.
2. Enable Bluetooth on your device and search for the speaker.
3. Select the newly detected speaker(EasyAcc MC2).
4. Press Mode button for 3 seconds to delete pairing records in Bluetooth mode.

Note:

1. Once Bluetooth is enabled, the speaker will automatically connect to the last device it was connected to while disconnected within 10 minutes; it should be noted that the speaker will come into sleep mode after 10 minutes and its Bluetooth function should be re-activated by pressing the Play/Pause button.
2. The speaker can be connected to two devices at the same time, only if the two devices have been successfully connected before.

Playing Music

Press the Play/Pause button to play/pause your music. Press the button to go to the previous track and the + button to go to the next track.

Volume Adjustment

Long press the - or + button to adjust volume.

Playing Music via a 3.5 mm AUX Cable

Connect one end of the 3.5 mm AUX cable to the speaker's AUX port and the other end to your device. You can now play the music on your device.

Usage Tips

Telephone Function

1. Answering a call: Press the Telephone button to answer an incoming call.
2. Ending a call: Press the Telephone button to end a call.
3. Press Telephone button for 2 seconds to answer an incoming call by cellphone, instead of the speaker.
4. Double press the Telephone button to re-dial the last phone number.

Note: The maximum effective distance of the built-in microphone is 20 cm (0.65 ft)

SD Card Music Playing

1. No SD card in the slot: insert the SD card and the speaker will automatically play the music stored in the card.
2. SD card in the slot: press the Mode button to switch the speaker to SD card mode and play the last paused song in the card.

FM Function

1. Insert the Aux cable into Aux port as an antenna.
2. Press the Mode button to enter FM mode.
3. Press the Play/Pause button for 2 seconds then the speaker will automatically search and save the channels.
4. Press +/- to switch channels.
5. The channel currently listening to will be saved by activating the FM mode or turning off the speaker.

Recharging

1. Insert the micro USB end of the charging cable into the charging port to charge the speaker.
2. The red indicator will be on while being charged and be off when fully charged.
3. When the battery is lower than 10%, the red indicator will flash for 3 times every 10 seconds.

Usage Tips

Usage Tips

1. Make sure your devices are Bluetooth-enabled.
2. Make sure the speaker is fully charged before using it for the first time.
3. Turn the speaker off when it is not in use.
4. Obstructions such as walls and pillars may influence the operating range of the speaker. These should be avoided in order to ensure a stable connection.
5. In order to protect the circuitry of the speaker and ensure the long-term performance of the built-in battery, do not play music while charging the speaker.
6. To protect the long-term performance of the built-in battery, do not use or keep the speaker in a hot environment (above 60℃/140℉), such as in a hot vehicle or under direct sunlight.
7. Do not expose the speaker or any of its accessories to liquids.

FAQ

Why won't the speaker connect to my device?

1. Make sure your device's Bluetooth function is enabled and not connected with other devices.
2. Make sure your device is within 1m/3ft of the speaker.
3. Delete the speaker's pairing record from your device if step 1 and 2 do not solve the problem. Then re-pair your device with the speaker.

Why can't I play music and charge my speaker at the same time?

To ensure the long-term performance of the battery, the speaker should be charged while off, especially when the battery is low.

Notes

Warranty

EasyAcc offers a 12-month warranty effective from the date of purchase. Any damage or malfunction resulting from improper use or unauthorized disassembly or repair will not be covered by our warranty. We also take no responsibility for products purchased from unauthorized retailers. For detailed information, please contact our customer service.

Contact Us

If you have any questions or comments, please contact us at support@easyacc.com.

Manufacturer： EASYACC TECHNOLOGY CO., LIMITED
Model： EasyAcc MC2
Contact： Jason Xie
Address： Rosenstrasse 5, 24768 Rendsburg
Tel： +49 175 4161168
Email: support@easyacc.com

Hereby, EasyAcc declares that this Mini Cannon 2 Bluetooth speaker "EasyAcc MC2 "is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The Certificate of Conformity and the Declaration of Conformity for this product can be found on the link below by clicking the "Download".
www.easyacc.com/CP/declarationandconformity

Notes

Caution

This device complies with Part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment

This radio transmitter (identify the device by certification number or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

EasyAcc

support@easyacc.com
www.EasyAcc.com