尺寸:50*70MM

TWS Earbuds

S42,S43,S47,S48,S49



User Manual

Please read it carefully before use.

Specifications:

BT Version	V5.3
Frequency	2.402~2.480 GHz
BT Range	10feet without obstacle
Support Mode	HSP/HFP/A2DP/AVRCP
Earbud Battery	3.7V 50mAh
Charging Case Battery	3.7V 300mAh
Earbud Working current	4~6mA
Typec port Charging Current	DC 5V 250mA
Charging port	Type-C
Type-C port Charge Time	About 2 hours
Earbuds Work Time per Charge	About 5 hours

Package Include:

Please put the earbuds into the case to charge. Up before first use.

Power On: When the earbuds are in the case, open the case to power on.

Power Off: When the case has power, put the earbuds into the case and close it, the earbuds will power off and start charging automatically.

Diagram & Operations:

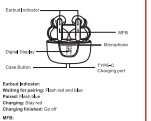

Earbud Indicator:
Pairing and pairing: Flash red and blue.
Paired: Red or blue.
Charging: Stay red.
Charging finished: Go off

MFB:
Play/Pause music/Answer phone call: Touch once.
Hang up/Reject phone call: Touch and hold for 2 seconds
Previous/Next Track: Touch L/R earbud twice
Volume Down: Touch L/R earbud 3 times
Activate phone voice control: Touch 4 times
Power on: Touch and hold for 3 seconds(When the earbuds are outside of the case, and in power off state).
Power off: Touch and hold for 5 seconds(When the earbuds are outside of the case, and BT not paired to phone.)

Digital Display:
Show case battery level: Press case button, it will display 5 seconds and then go off.
Show earbud charging: The L & R flash ➡ Solid.
Show case charging status: The number flash from 1 to 100 when charging, stay 100 when finished charging.

Case Button:
Correspondingly open the L & R earbuds: Press and hold for 10 seconds when the case is open, the display will flash 5 times
Clear pairing history: Press and hold for 5 seconds when the case is open, the display will flash 3 times
Type-C charging Port:
Use DC 5V power adapter only. (Do not use power supply higher than 5V.)

Pairing:

1. Earbuds Pairing: Open the case, the L & R earbuds will enter pairing mode and pair

One earbud indicator flash blue, while another one flash red and blue means L & R are paired.

2. Earbuds Pair with Phone: Turn on the Bluetooth of your phone, search for "S42" and pair.

The earbuds indicator both flash blue means they are paired with phone.
Auto-Pair: The earbuds will auto pair the last paired phone when power on next time. (Turn on the BT of your phone first, and then power on the earbuds.)

3. Open you phone music player and hit play, now you can enjoy music wonderfully.

Auto Power Off:

The earbuds will power off automatically if not paired in 3 minutes.

Charging:

Earbuds battery low reminder: There will be an audio prompt every 1 minute.
Earbuds charging: When the case has power, put the earbuds into the case and close it, the earbuds will power off and charge automatically.

Case charging:
Type-C Charging:
Use pre-stored Type-C cable to charge the case with DC5V power adapter only. (Do not use power supply higher than 5V, it may damage the product this can't be charged.)

The display will flash when charging, show 100 after charging finished.
Note: Please maintain a charge at least every 3 months, if the product will not be in use for a long time, to keep the battery active and prolong the life.

FAQ:

Q1: The product can't pair with my phone.
1. Please turn off the BT of other devices, make sure the earbuds are in pairing mode.
2. Open the pairing history of the earbuds and your phone, Turn off the BT then turn on, and try again.

Q2: The BT range or the sound quality is not good.
1. BT signal can be blocked by surrounding objects that affect the audio quality, if no obstacle between the product and your phone, the range and sound quality will be better.
2. Keep away from other BT devices, microwave, wireless routers, and other electronics.

Q3: Why there is a delay?
There is a data transmission process from your phone to the product, so sometimes you can feel a delay. It is a common issue for all the BT devices, and BT V5.3 already made it better than the old versions.

Q4: Why the case can't charge the earbuds, or the earbuds won't power off after put back in case?
1. Make sure the earbuds and charging contacts are clean, please clean the case, and make sure nothing after the case has power.
2. Please make sure you didn't put the right & left earbuds in the opposite place, and the magnet contacts well.
3. If the earbuds come with charging insulation sticker on the metal contacts, please make sure you removed them before charge.

Q5: Why people can't hear me in the call?
Please make sure you wear 2 earbuds when making calls, and check if there is any dirt blocked the microphones.

Q6: Only 1 earbud pair with my phone.
1. You need to pair the L & R earbuds pair first, and then turn on phone Bluetooth to pair with the earbuds.
2. If the L & R earbuds can't pair with each other, please do the corresponding pair operation: press and hold the case button for 10 seconds when the case is open, the display will flash 5 times, then try again.

Q7: The voice is low.
Please make sure you have tune your phone volume to max level, and the earbud caps fit well into your ear.

FCC Compliance Statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Warning Statements:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CORRECT DISPOSAL OF THIS PRODUCT

(Waste Electrical & Electronic Equipment

This marking shown on the product or in literature, indicates that it should not be disposed with other household wastes at the end of its working life.
To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.
Household user should contact the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.
Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

FCC ID: 2AMBA-S43

TWS耳机

用户手册

使用前请仔细阅读。

规格：

蓝牙版本：	V5.3
频率：	2.402~2.480 GHz
蓝牙范围	10米无障碍
支持模式	HSP/HFP/A2DP/AVRCP
耳机电池	3.7V 50mAh
充电仓电池	3.7V 300mAh
耳机工作电流	4~6mA
Type-C接口充电电流	DC 5V 250mA
充电接口：	Type-C
充电时间	约2小时
耳机单次充电最长工作时间：	约5小时

包装配件：

注——为使用前，请将耳机放入充电仓中充满电。
开机：当耳机在充电仓中时，打开充电仓即可开机。
关机：当您将充电仓关闭，耳机将放入充电仓并且上，耳机将自动关机并开始充电，也从耳机仓中时，打开充电仓即可开机。

示意图：

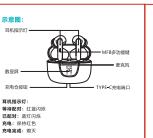

耳机指示灯：
等待配对：红蓝闪烁
已配对：红灯闪烁
充电：保持红色
充电完成：熄灭

多功能键：
播放/暂停音乐/接听电话：按键一次
挂断/拒接电话：按住两秒钟2 秒
上一曲/下一曲：连续两次 L/R 耳机单次
音量+/音量-：按键 L/R 耳机三次
激活语音助手：按键4次
开机：长按两秒（当耳机在充电仓外且处于无连接状态）
关机：长按两秒（当耳机在充电仓外，且处于未导开配对状态）

数显：
显示充电仓电量：按下充电仓按键，显示5秒后熄灭
显示耳机充电：左右盒闪烁
显示充电仓充电状态：充电时数字从1闪烁到100，充电时保持100完成充电
充电仓按钮：
按住配对长/短两秒：打开耳机仓时保持10 秒，显示闪烁5次 5 次
清除配对历史记录：打开充电仓时按住 5 秒，显示闪烁闪烁 3 次
Type-C 充电端口：
仅使用 DC 5V 电源线充电，（请勿使用电子 5V 以外电源。）

配对：

1. 耳机配对：打开充电仓，左右耳机进入配对模式并配对

一个耳机指示灯闪烁蓝色，另外一个闪烁红色和蓝色表示 左耳和右耳已配对。

2. 耳机与手机配对：打开手机蓝牙，搜索"S42"并配对。

耳机指示灯双蓝色闪烁，表示已与手机连接。
自动配对：下次开机时，耳机会自动配对上次配对的手机。（先打开手机蓝牙，再打开耳机。）

3. 打开手机音乐播放器，动全精彩，享受无线笑音悦享。

自动关机：

超过 3 分钟未配对，耳机将自动关机。

充电：

耳机电池电量低提醒：每 1 分钟会有一次音频提示。
耳机充电：当将耳机放入充电仓并关上，耳机会自动关闭并充电。

充电仓充电
Type-C充电：
使用随机的C型电线仅使用DC5V电源适配器为此耳机充电。（不要使用电子5V以外电源，否则会损坏产品，造成无法充电。）

充电时显示屏会闪烁，完电后显示显示100。

注意：请保持至少每 3 个月充电一次，如果产品长时间不使用，以保持电池活跃；延长使用寿命。

注意事项：

问题1：耳产品无法与我的手机配对。
1. 请关闭其他设备的蓝牙，确保耳机处于配对模式。
2. 请取消耳机和手机的蓝牙历史记录，关闭蓝牙然后打开，然后再连接。

问题2：音质不理想或信号不好。
1. 蓝牙信号可能被周围物体阻挡，从而影响音频质量。如果产品和手机之间没有障碍物，信号和音质会更好。
2. 远离其他蓝牙设备、微波炉、无线路由器和其他电子设备。

问题3：为什么会出现延迟？
从音频传输到"耳机"——到扬声器过程，因此有时会会感到延迟。这是所有蓝牙音频设备可以知道，蓝牙 V5.3已经比旧版本产品强多。

问题4：为什么充电仓不连续指示灯亮，或者数据充电仓显示不亮？
1. 长期充电后闪烁，会出现以上问题，请检查电池充电，充电仓清洁后正常。
2. 请确保您未将左右耳机放在错误的位置，并且磁铁接触良好。
3. 如果耳机的金属触点上带有充电隔离贴，请确保在充电前将其撕下。

问题5：为什么人们在通话中听不到我的声音？
打电话时请确保佩戴上 2 个耳塞，并检查麦克风是否有灰尘堵塞。

问题6：我的手机只有一只耳机有声音。
1. 您需要先让左右耳机配对，然后打开手机蓝牙与耳机配对。
2. 如果左右耳机不能相互配对，请进行强制配对操作：打开充电仓后按住充电仓按钮 10秒，显示单会闪烁五次，然后重试。

问题7：声音很小。
请确保您已将手机音量调至最大音量，并且耳机塞牢固在您的耳朵。

FCC合规声明：

未经负责合规方的一方明确批准的变更或修改可能会使用户无法操作该设备的权限。根据FCC规则第15部分的规定，该设备已经过测试，符合有限度分类数字设备的限制。这些限制旨在提供合理的保护，防止在安装中的有害干扰。本设备产生，使用并且能够辐射射频能量，如果不按照说明书安装和使用，可能对无线电通信造成有害干扰。然而，不能保证在特定安装中不会发生干扰。如果本设备确实对无线电接收造成有害干扰（可通过关闭和打开设备来确定），则鼓励用户采取以下一项或多种措施来纠正干扰：
- 调整接收天线的方向或位置。
- 增加设备和接收器之间的间隔。
- 将设备连接到与接收器所连接的电路上。
- 请咨询经销商或有经验的无线电/电视技术人员以获取帮助。

射频暴露合规声明：

本设备符合FCC针对非受控环境规定射频辐射暴露限值。此发射器不得与任何其他天线或发射器共置或一起工作。

正确处理本产品

（适用于电气设备）产品或其文献上显示的这种标记表示这款物品在其使用寿命结束时，不应与其他生活垃圾一起处理。为防止不受控制的废物处置可能对环境或人类健康造成危害，请将其与其他废弃物进行分开，并负责任地实现回收。以负责任的方式回收产品，可以促进对资源的可持续再利用。家庭用户应联系他们购买该产品的零售商或当地政府办公室，了解他们在何处以及如何使用此产品进行环保回收这种物品。商业用户应联系其供应商并检查购买合同的条款和条件。本产品不得与其他商业废弃物混合处置。