PRESS LOCK AND UNLOCK BUTTONS
AT THE SAME TIME AND SHORT
LED FLASH 1 TIME
MEMORY 1
LED FLASH 2 TIMES:
NO MEMORY
LED FLASH 3 TIMES:
MEMORY 2
DEFAULT CONFIG:NO MEMORY
BAT+
mm

mm

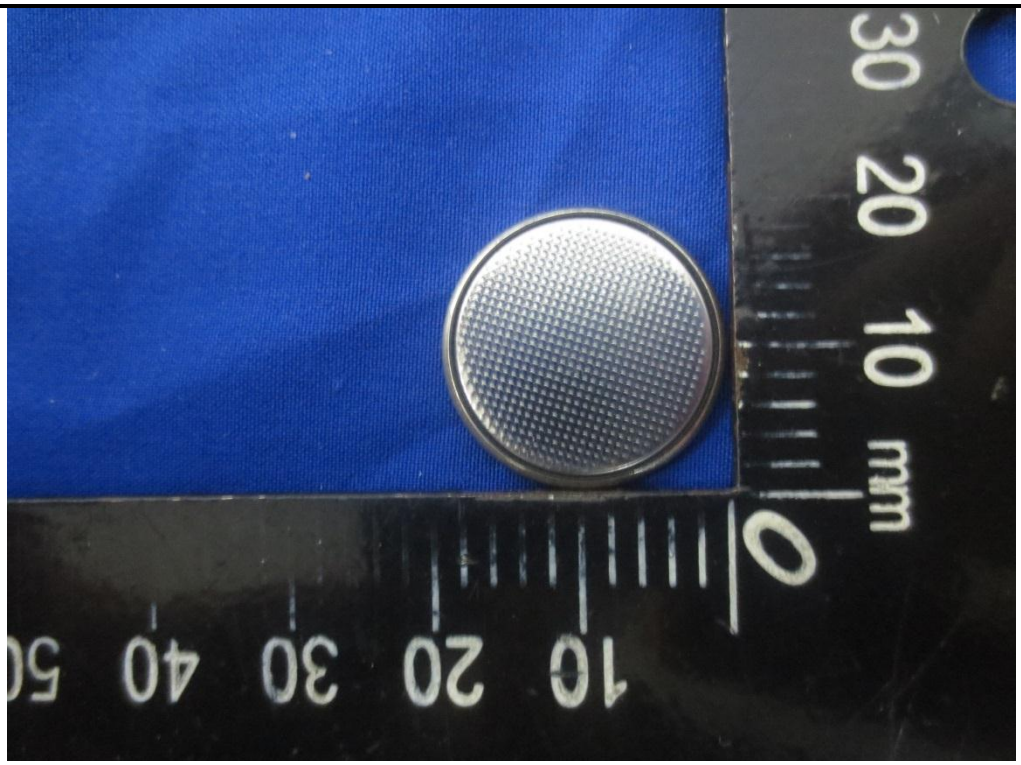
30
20
10
mm
0
10
20
30
40
50

リチウムバッテリー
LITHIUM BATTERY
CR2025
3V
30
20
10
mm
0

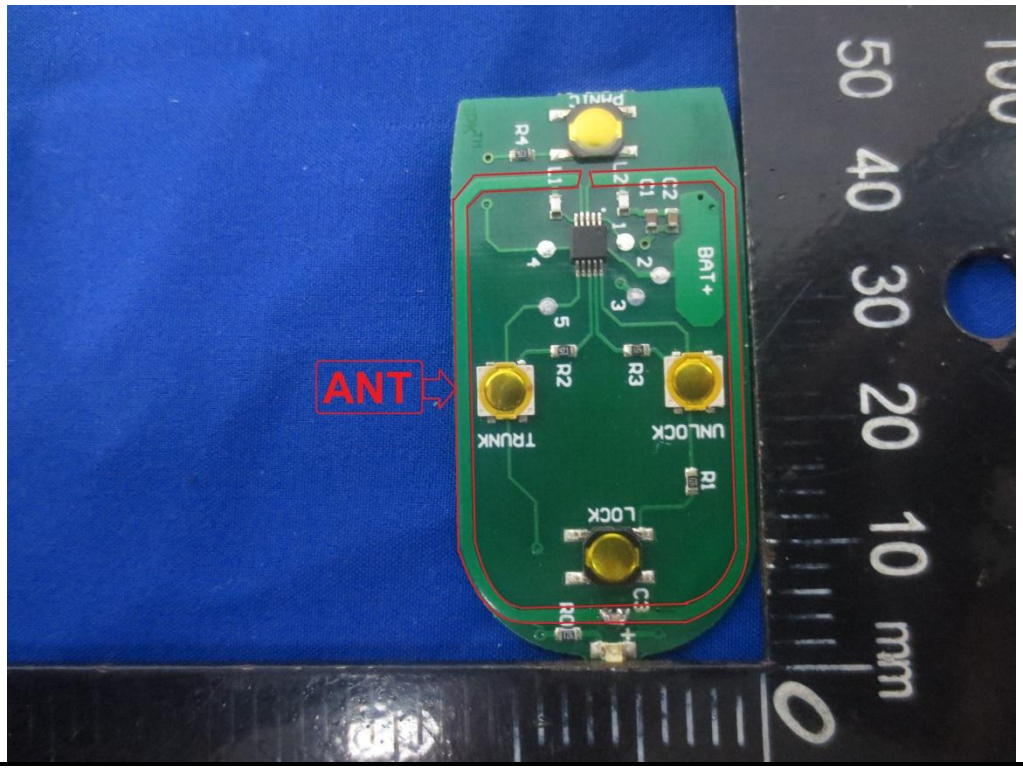
ANT
TRUNK
UNLOCK
LOCK
BAT+
R1
R2
R3
R4
C1
C2
C3
L1
L2
mm

------End of report------