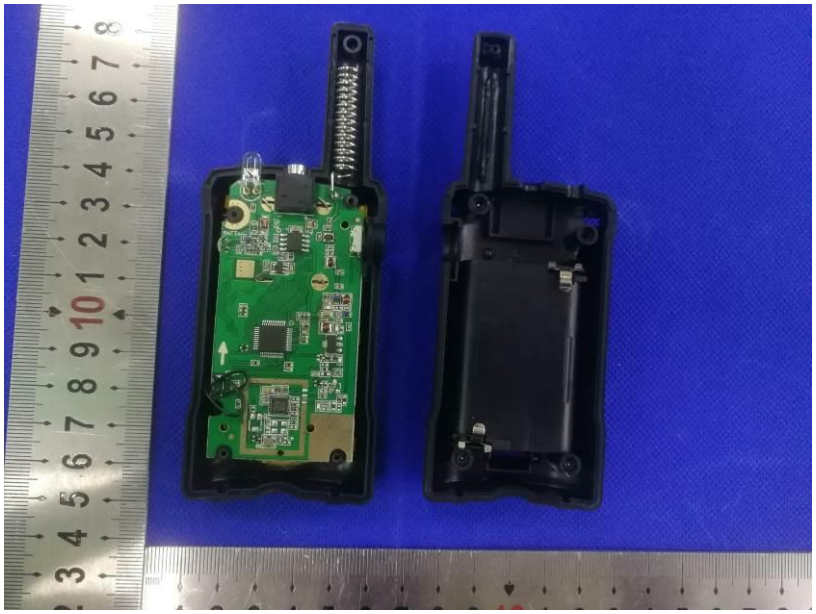

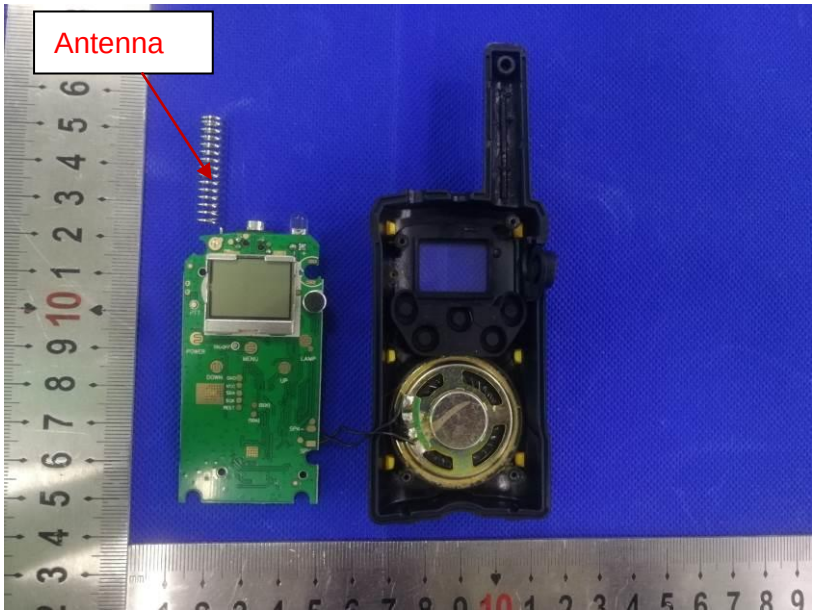
Antenna

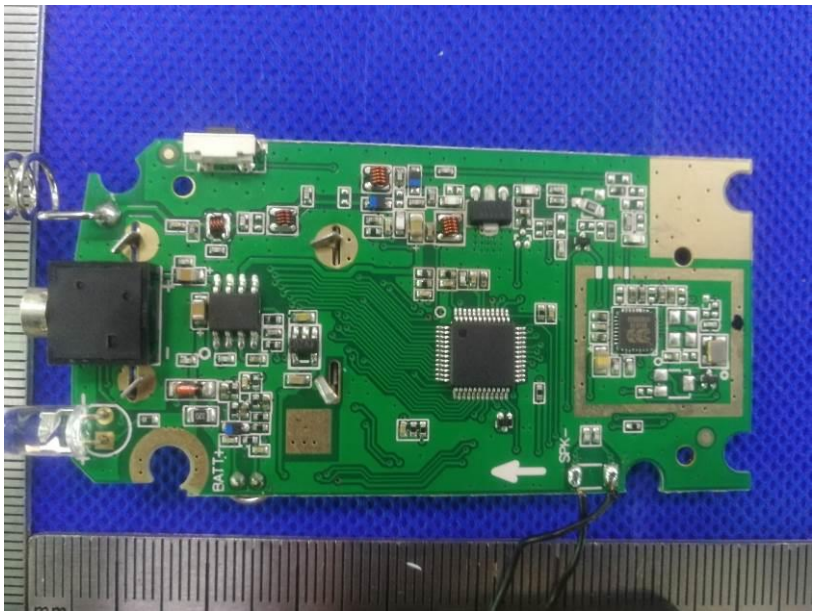
BATT+
SPK-

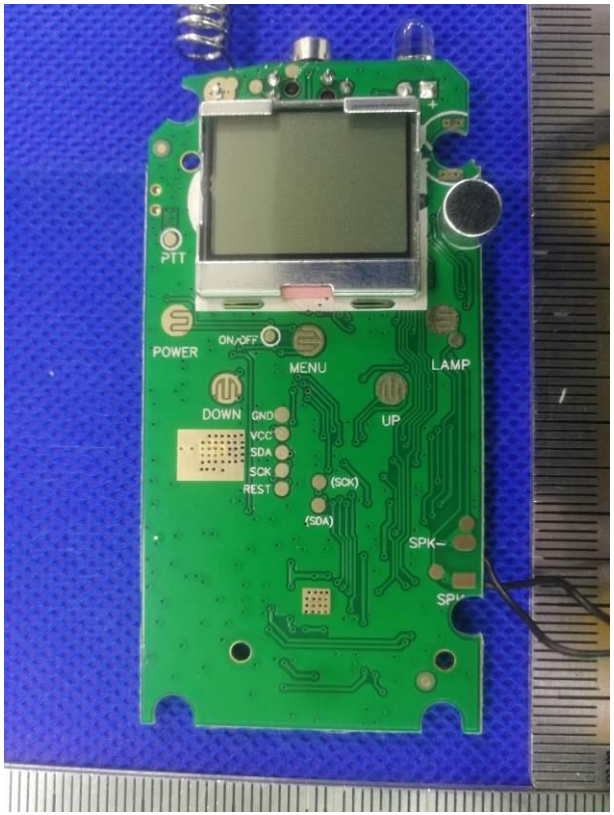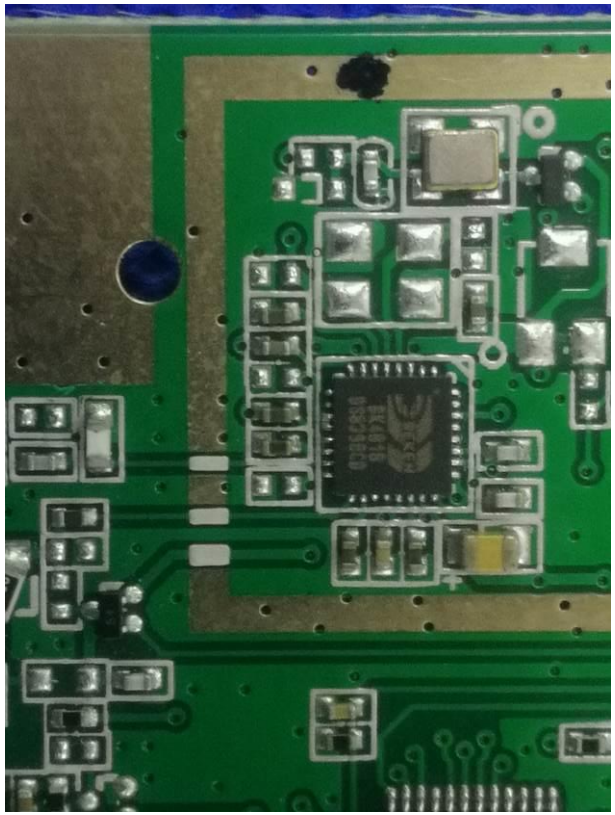
PTT
POWER
ON/OFF
MENU
LAMP
DOWN
UP
GND
VCC
SDA
SCK
REST
(SCK)
(SDA)
SPK−