PRESS LOCK AND UNLOCK BUTTONS
AT THE SAME TIME AND HOLD
LED FLASH 1 TIME:
MEMORY 1
LED FLASH 2 TIMES:
NO MEMORY
LED FLASH 3 TIMES:
MEMORY 2
DEFAULT CONFIG:NO MEMORY
BAT+
444MA
mm

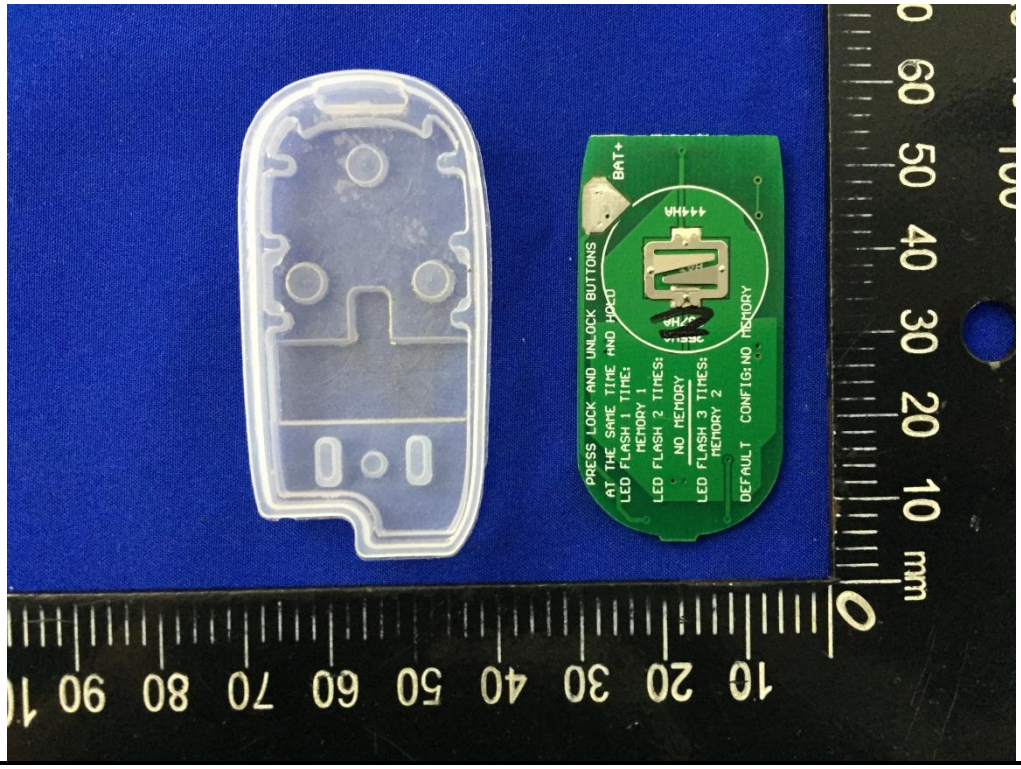
PRESS LOCK AND UNLOCK BUTTONS
AT THE SAME TIME AND HOLD
LED FLASH 1 TIME:
MEMORY 1
LED FLASH 2 TIMES:
NO MEMORY
LED FLASH 3 TIMES:
MEMORY 2
DEFAULT CONFIG:NO MEMORY
BAT+
444MA
mm

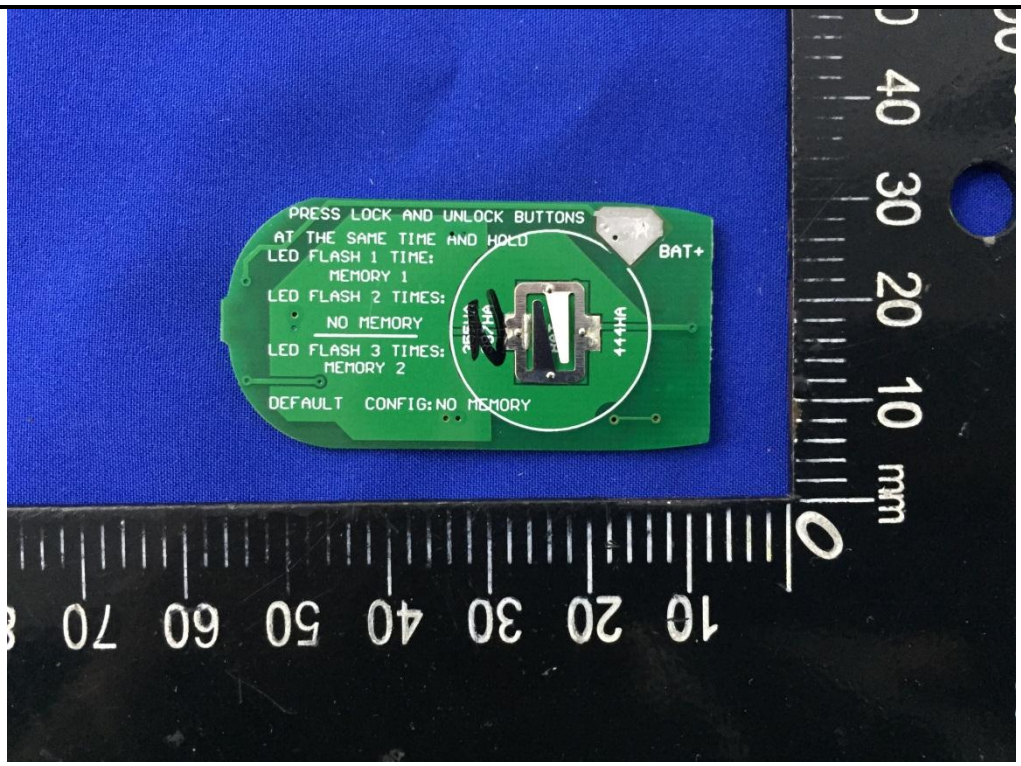
PRESS LOCK AND UNLOCK BUTTONS
AT THE SAME TIME AND HOLD
LED FLASH 1 TIME:
MEMORY 1
LED FLASH 2 TIMES:
NO MEMORY
LED FLASH 3 TIMES:
MEMORY 2
DEFAULT CONFIG: NO MEMORY
BAT+

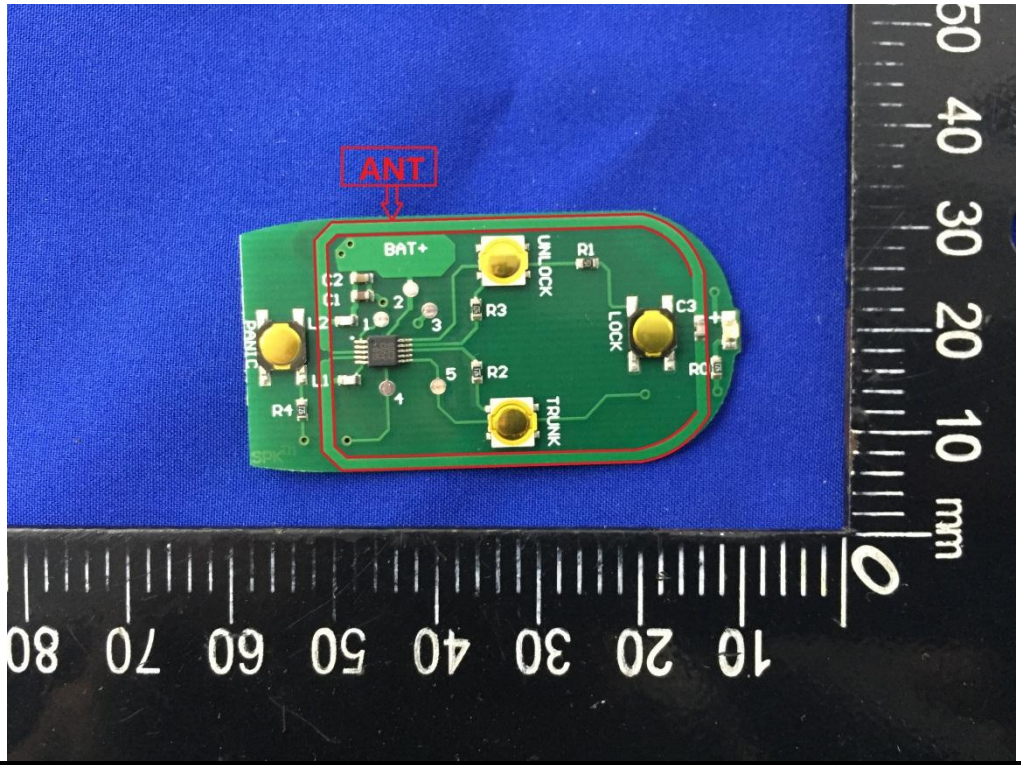
ANT
BAT+
UNLOCK
R1
R3
LOCK
C3
PANIC
R2
TRUNK
R4

リチウムバッテリー
LITHIUM BATTERY
CR 2025
3V

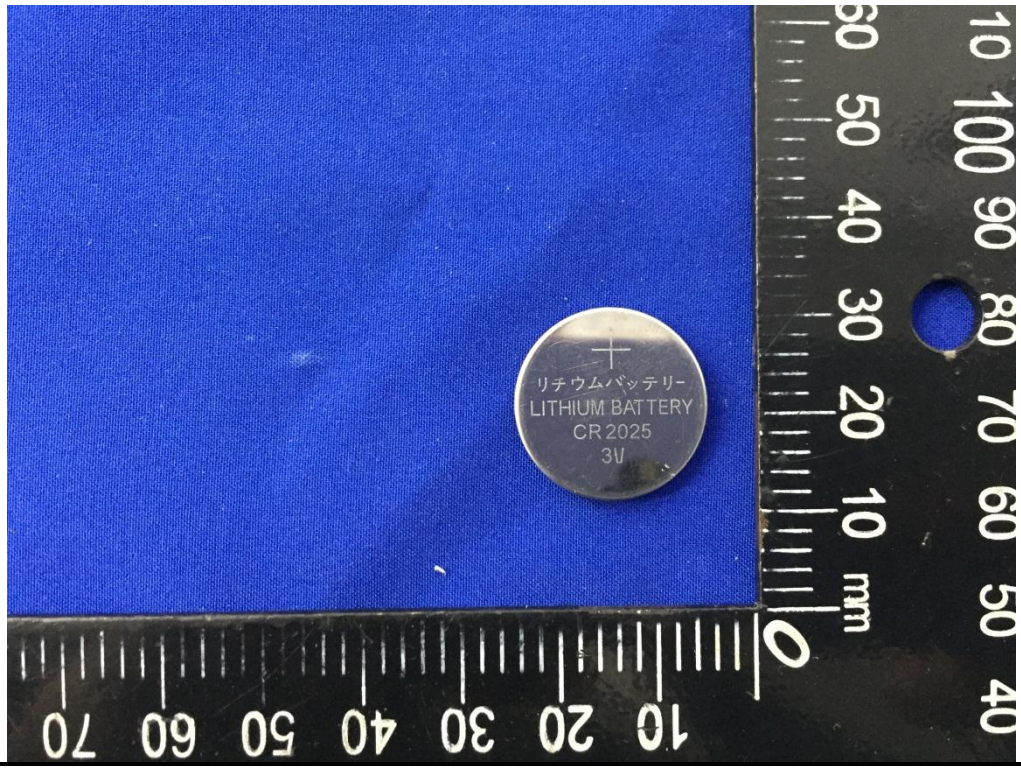
リチウムバッテリー
LITHIUM BATTERY
CR 2025
3V

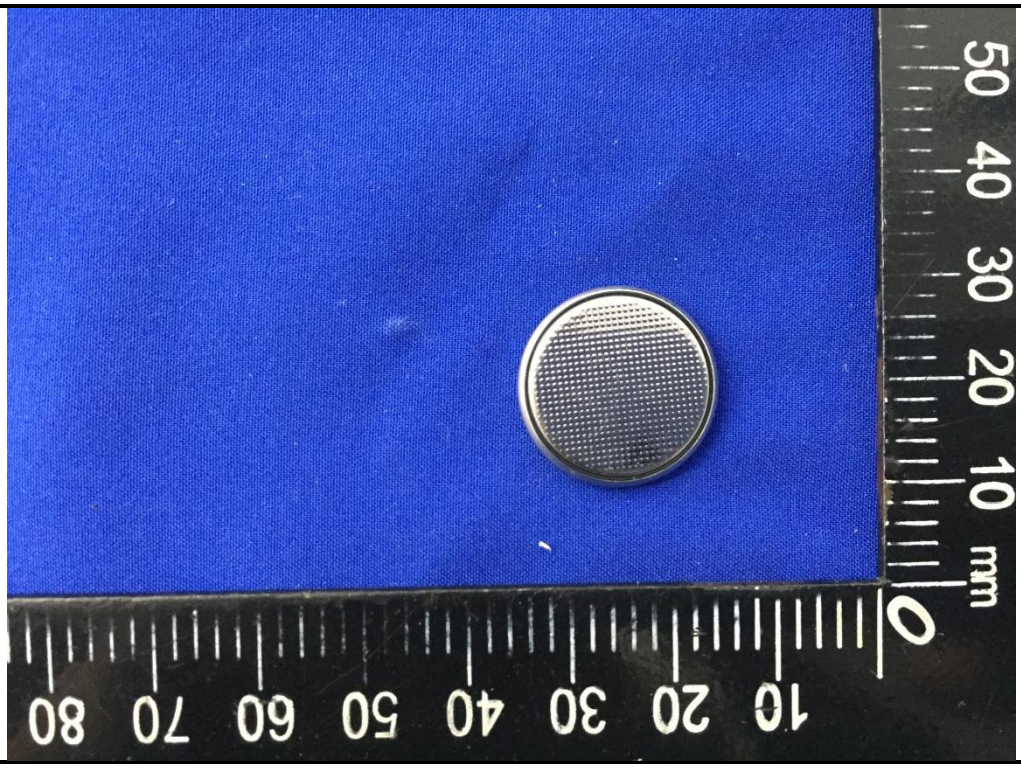

------End of report------