User manual of Euclid Bluetooth Cable / V1.0

Material: 128g art paper , Size: 70 x 108mm
Note : folding but without nail

COVER

EUCLID BLUETOOTH CABLE
USER GUIDE

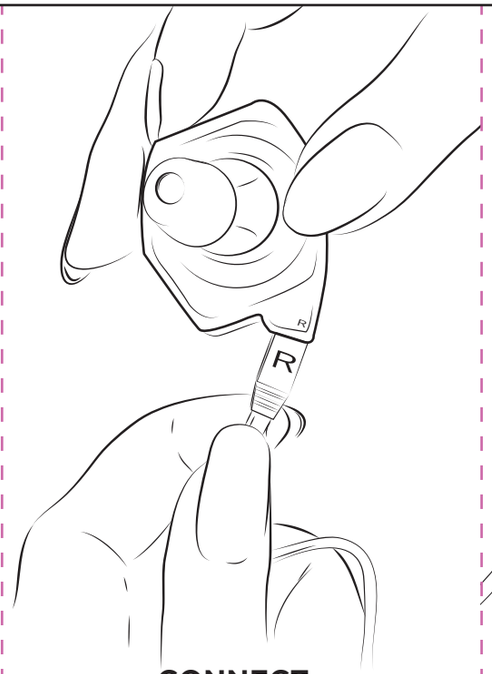

CONNECT
RELIER

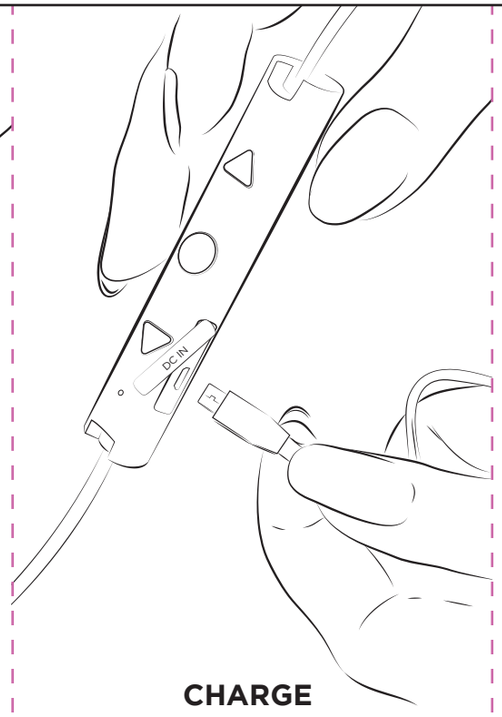

CHARGE

1. "To prevent possible hearing damage, do not listen at high volume levels for long periods."
2. "Fully understand user manual before use."
3. "Ensure your player at low volume levels or power off before you leaving."

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

WARNING!

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Never disassemble, hit with force, squeeze batteries or dispose of batteries in fire.
- Do not expose batteries in conductive materials, liquid, fire or heat.
- Do not let metal object contact two battery poles. If the battery looks swollen, leaking, discolored, having odor or any abnormal appearance, stop using it.
- Do not use the battery after immersed in water.
- Improper use of battery may lead to explosion or leakage, causing skin burn or other injuries; in the event of battery leakage, handle it with care and immediately dispose of the battery in the manner in compliance with applicable laws and regulations in your locality.
- The battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

BACK

www.audeze.com

V1.0

© 2020 Audeze LLC All Rights Reserved.

ACC1085

EUCLID FUNCTIONS

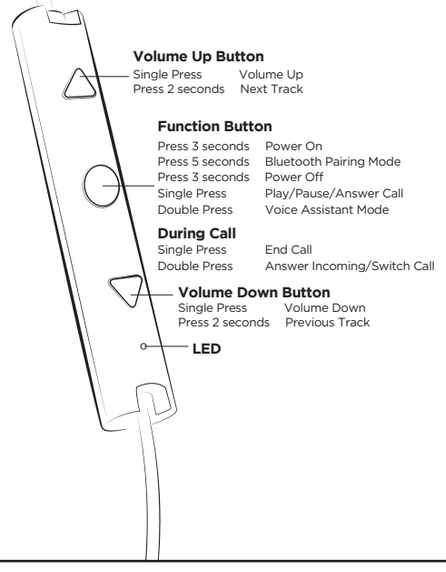

Volume Up Button
Single Press — Volume Up
Press 2 seconds — Next Track

Function Button
Press 3 seconds — Power On
Press 5 seconds — Bluetooth Pairing Mode
Press 3 seconds — Power Off
Single Press — Play/Pause/Answer Call
Double Press — Voice Assistant Mode

During Call
Single Press — End Call
Double Press — Answer Incoming/Switch Call

Volume Down Button
Single Press — Volume Down
Press 2 seconds — Previous Track

LED

POWER ON Press second button and hold	HOLD 3 SECONDS
POWER OFF Press second button and hold	HOLD 3 SECONDS
BLUETOOTH PAIRING Press second button and hold	HOLD 5 SECONDS
PLAY / PAUSE Press second button	PRESS
VOLUME UP Press third button	PRESS
VOLUME DOWN Press first button	PRESS
PREVIOUS TRACK Press first button and hold	HOLD 2 SECONDS
NEXT TRACK Press third button and hold	HOLD 2 SECONDS
ANSWER / END CALL Press second button	PRESS
REJECT CALL Press second button and hold	HOLD 2 SECONDS
DURING CALL - END CALL Press second button	PRESS
DURING CALL - ANSWER INCOMING Press second button twice	PRESS 2X
DURING CALL - SWITCH CALL Press second button twice	PRESS 2X
VOICE ASSISTANT Press second button twice	PRESS 2X

EUCLID FUNCTIONS

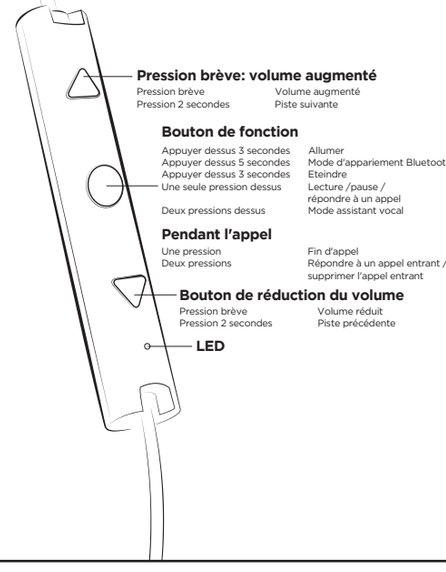

Pression brève: volume augmenté
Pression brève — Volume augmenté
Pression 2 secondes — Piste suivante

Bouton de fonction
Appuyer dessus 3 secondes — Allumer
Appuyer dessus 5 secondes — Mode d'appariement Bluetooth
Appuyer dessus 3 secondes — Eteindre
Une seule pression dessus — Lecture /pause / répondre à un appel
Deux pressions dessus — Mode assistant vocal

Pendant l'appel
Une pression — Fin d'appel
Deux pressions — Répondre à un appel entrant / supprimer l'appel entrant

Bouton de réduction du volume
Pression brève — Volume réduit
Pression 2 secondes — Piste précédente

LED

ALLUMER Appuyez sur le deuxième bouton et maintenez-le enfoncé	PRESSION 3 SECONDES
ÉTEINDRE Appuyez sur le deuxième bouton et maintenez-le enfoncé	PRESSION 3 SECONDES
BLUETOOTH PAIRING Appuyez sur le deuxième bouton et maintenez-le enfoncé	PRESSION 5 SECONDES
JOUER / PAUSE Appuyez sur le deuxième bouton	PRESSION BRÈVE
MONTER LE SON Appuyez sur le troisième bouton	PRESSION BRÈVE
BAISSER LE VOLUME Appuyez sur le premier bouton	PRESSION BRÈVE
PISTE PRÉCÉDENTE Appuyez sur le premier bouton et maintenez-le enfoncé	PRESSION 2 SECONDES
PISTE SUIVANTE Appuyez sur le troisième bouton et maintenez	PRESSION 2 SECONDES
RÉPONSE / FIN D'APPEL Appuyez sur le deuxième bouton	PRESSION BRÈVE
REJETER UN APPEL Appuyez sur le deuxième bouton et maintenez-le enfoncé	PRESSION 2 SECONDES
PENDANT L'APPEL - FIN D'APPEL Appuyez sur le deuxième bouton	PRESSION BRÈVE
PENDANT L'APPEL - REPONSE ENTRANT Appuyez deux fois sur le deuxième bouton	DEUX PRESSIONS
PENDANT UN APPEL - SUPPRIMER L'APPEL ENTRANT Appuyer deux fois sur le deuxième bouton	DEUX PRESSIONS
ASSISTANT VOCAL Appuyez deux fois sur le deuxième bouton	DEUX PRESSIONS