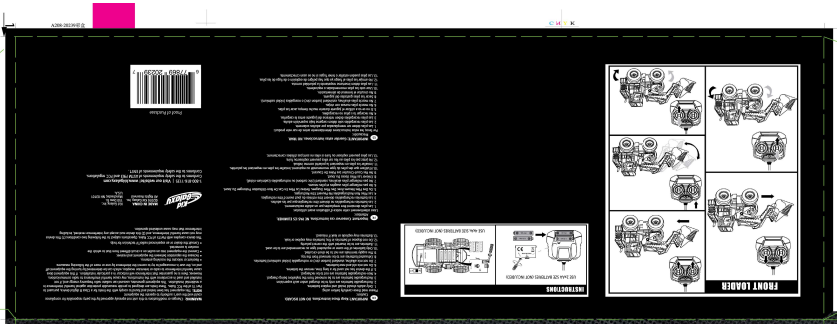
FRONT LOADER
R/C CONTROLLER
SCOOPING ACTION!
Kid Galaxy
FRONT LOADER R/C VEHICLE
RUGGED CONSTRUCTION!
• RUGGED TREADS
R/C
49 MHz
FRONT LOADER R/C VEHICLE
RUGGED CONSTRUCTION!
INSTRUCTIONS
USE 3 AA (4.5V) BATTERIES (NOT INCLUDED)
USE 4AA (6V) BATTERIES (NOT INCLUDED)
WARNING: Remote Control Vehicle Instructions: Keep these instructions for future reference.
Remove all packaging before use. Check for any missing parts before using product.
Do not use if any parts are missing or damaged.
Do not use batteries of different types, old and new batteries or different capacities together.
Do not short circuit the battery terminals.
Do not dispose of batteries in fire.
Do not charge non-rechargeable batteries.
Remove batteries when not in use.
Remove batteries when the product is not used for a long period of time.
Remove batteries before disposing of the product