Flysocks

User Manual

English 1

Deutsch 27

Package Contents 1
Safety Information 2
How to Use 11
FAQ 21
Technical Specifications 23
Warranty 24

ENGLISH

PACKAGE CONTENT



Note

Before using the camera, make sure that the memory card is inserted and formatted with the camera.

SAFETY INFORMATION

Please read carefully and refer to this manual for use. Keep this manual for future reference. This chapter contains important safety information. Failure of these instructions may result in fire, malfunction, electric shock, illness, injury or property loss. Children are not allowed to use the unit and accessories alone, as it may cause injury to the user or damage to surroundings.

Fire and Electric Shock
- If the camera is damaged, has water risk, or is also wounded, please power it off immediately and remove the battery.
- Do not use the camera if power supply, keep it dry and clean, and do not crack.

Battery Use
- Please use the camera under special fire or explosion, and plug in accessory. Use 5V 1A or 2A adapter to avoid heat or fire risk to the camera caused by according to the markings. Rechargeable 3.6 lithium battery (Usually 1.2V) is not included.
- Do not use damaged or leaking battery.
- Do not place or store near high temperature.
- Do not disassemble, recast, squeeze, puncture, crackle and do not transfer the battery.

Charge the Camera
- The camera is equipped with a Type-C power battery and protection to charge. Please use the original charging cable to charge the camera to avoid the risk of fire and battery damage caused by incompatible charging cables.
- Additionally, the camera comes with a standard cord. When the camera is exposed to water and dust, please ensure that the cover is closed to protect the camera's ports.
- Charging Reminder Light: The indicator light shows the charging status. Red indicates charging, and green indicates the battery is fully charged.

Computer System Requirements
- Windows: Windows 10 or higher version on computer, make sure your computer meets or exceeds the following specifications:
- Processor: Intel Core i5 or higher, dual-core at 2 GHz or faster
- Operating System: Windows 10 or later
- RAM: Minimum 8GB of RAM
- Graphics Card: DirectX 11 compatible or higher
- Storage: 500GB or more of free disk space
- USB Interface: Standard USB 3.0 or higher
- Screen Resolution: 1920x1080 pixels or higher

Please note that if your computer does not meet these specifications, it may not function properly when connected to the camera.

Environmental Requirements
- Operating environment: temperature 14°F to 104°F (-10°C ~ 40°C).
- Storage environment: temperature 14°F to 140°F (-10°C ~ 60°C).
- Do not use or store in wet environment with strong vibration or dust.

Waste disposal
- It is forbidden to throw away the camera and accessories at will. Please dispose of waste according to local laws.

Other warnings
- For cameras with WiFi or Bluetooth, please use them in places with good signal. Poor signal may cause camera malfunctions, missed disconnections, or other issues.
- Please keep the camera and accessories out of the reach of children.
- Please observe any local laws and regulations on the use of wireless devices.
- Please observe any local laws and regulations on the use of privacy protection.

Check before use
- To ensure your safety and use, please take a test shot to check before use.
- We are not responsible for additional losses caused by improper use or camera failure.

About the manual
- The manual is for your reference only. The final is always the content in camera. If the product is updated, please refer to the actual product.
- To improve the user experience, the app may be upgraded without prior notice. There will be no reminder in the manual.
- All rights reserved for this manual. Partial or total unauthorized copy, reproduction or distribution is prohibited.

PRODUCT INTRODUCTION



1. Lens hole
2. Magnet
3. Battery cover lock toggle base
4. Toggle base
5. Metal screw hole



1. Lens hole
2. Magnet
3. Battery cover lock toggle base
4. Toggle base
5. Metal screw hole

FRONT COVER OPEN VIEW



1. Screen
2. Indicator light
3. Menu Button
Short press: Menu, Previous Menu/Return to Shooting Interface
4. Up Button/Message Page Forward
Short press: Switch, Zoom in/Move up in Menu
5. Down Button/Zoom Down/Page Down
6. Mode Button/Confirm
Short press: Switch Shooting Mode in Video Mode, Switch Photo Mode in Photo Mode, Confirm in Menu, Playback/Pause in Playback Mode
7. On/Open WiFi Switch
Short press: Turn on/off WiFi, Long press: Turn on/off WiFi and Bluetooth

INSTALLATION GUIDE

Download the Flysocks app

Follow the instructions in the app to connect the camera to WiFi. You can then use the app to operate the camera, adjust settings, preview, and download files.

Memory Card Installation

Before the first use, open the cover, and insert the memory card (sold separately) into the camera's card slot according to the direction shown.

When the memory card is correctly inserted, the memory card can be clearly identified on the screen.

Note

1. Ensure the memory card is standard and tested before the first use.
2. Do not insert or remove the memory card while the camera is powered on. Let it shut down completely before inserting or removing the card.
3. Use a SD or higher U3 memory card with a 4K shooting mode and keep a spare for the camera to work properly.

E306WH说明书

*本页仅对专用，不能调用

meross

型号	品名	料号
E306WH	4K	XXXXXXXXXXXX

版本更改记录		
日期	内容	设计
XX/XX/23	新版	李雪飞

校对：宋佳璐　　日期/版本：
批准：林文龙　　1.0/A.0/1.9
日期：20240528　　档案：Meross产品说明书

Battery Installation

The camera is powered by a 1.5V AA (LR6) batteries. Rechargeable AA batteries are recommended for optimal performance. Follow the steps below to install the batteries:

1. Release the battery compartment cover toggle base, open the cover, and insert the batteries according to the label. Apply protective sheets inside the battery compartment.
2. Close the battery compartment cover down, lock the cover, and flatten the toggle base.
3. Use the ON/◀2.5S▶/OFF switch for 1S to 2S. If the screen turns on, it means the batteries are correctly inserted.

Note

1. Do not mix old and new batteries.
2. Please connect battery inserter to avoid damaging the camera.
3. After inserting the batteries, screw it before the toggle base.
4. If the camera will not be used for an extended period, remove all batteries.

Connect to PC

The camera can be connected to a computer and used as a USB flash drive.

1. Connect the camera to the computer using a USB cable.
2. When the connection is successful, the camera will display "Removable Disk" indicating that it can be used as a USB flash drive.

Note

Only connect the USB cable to the camera, and then to the computer. Ensure that the cable is fully connected.

Mount and fix the camera

1. The camera can work in rain, but should not be submerged in water. Access to the camera's ports should be closed.
2. When shooting the camera, ensure that the top of the camera is oriented vertically upward.
3. Loosen the mounting screw, insert the strap of the camera's mount, and tighten the screw.
4. Adjust the camera's angle, turn the up and down fixed buttons of the camera's mount to the appropriate angle, and tighten the straps as needed.

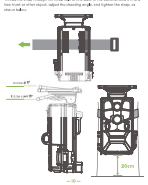

HOW TO USE

Power on

Use the ON/◀2.5S▶/OFF switch to TEST, the screen will turn on, indicating that the camera is powered on. If the camera does not turn on, please check the battery and ensure it is charged. If you have not set the time with the camera, it is recommended to use the mobile app.

Change Preview Mode

When the ON/◀2.5S▶/OFF switch is set to TEST, you can change the preview mode. Press MODE to cycle through "Photo Mode" → "Video Mode" → "Network Mode". In each mode, the corresponding icon is displayed in the upper-left corner of the screen.

- Icon: "Photo Mode"
- Icon: "Video Mode"

Pressing MODE will change the preview mode, not the camera's work mode. To change the camera's work mode, you must operate and save the settings in the menu.

Test

To ensure the normal operation of the camera, please take some shots before use.

1. Slide the ON/◀2.5S▶/OFF switch to TEST, and press OK to take a photo.
2. Press MODE to enter Video mode, and press OK to record a video.
3. Press MODE to enter Network mode, and use the mobile app to connect to the camera and check whether the camera is working properly.

Monitor Shooting

Set the camera's orientation in the bracket. Make sure the camera's lens is ahead of the shooting area.

Slide the ON/◀2.5S▶/OFF switch to ON, the working indicator light is green, and the camera starts working. If the camera is in motion detection mode, it will enter standby mode. When the camera detects a moving object, the camera automatically detects and shoots moving animals or people.

Power Off

Before powering off the camera, you must slide the ON/◀2.5S▶/OFF switch to TEST, and then slide the ON/◀2.5S▶/OFF switch to OFF. If you do not follow this step, it will cause the camera to enter a malfunctioning shooting state. Here, the camera automatically detects and shoots moving animals or people.

PHOTO MODE

Slide ON/◀2.5S▶/OFF switch to TEST , the camera enters Photo mode, and the screen displays as follows:

1. Photo mode
2. Photo resolution
3. Memory used
4. Auto lens compensation
5. Number of shots remaining
6. Battery Level Indicator
7. Battery Level Indicator
8. Current Battery Level for the Active Battery / Power Source
9. Date
10. Time

VIDEO MODE

Press MODE to enter the menu, set the mode to video mode, and the screen displays as follows:

1. Video mode
2. Sound recording
3. Video resolution
4. Memory used
5. Auto lens compensation
6. Remaining video recording time
7. Battery Level Indicator
8. Battery Level Indicator
9. Current Battery Level for the Active Battery / Power Source
10. Date
11. Time

PLAYBACK MODE

The Playback by the connection to the Flysocks app on the screen. You can click Playback to go to the ON/◀2.5S▶/OFF switch to 1080P and press MODE to enter Playback mode.

Type	Description	Notice
View Files	In playback mode, the screen displays the photos or videos in the memory card. You can in the upper left corner to view the current file number.	
	Switch photos and videos.	
	Playback Menu.	
Delete Files	In playback mode, press the up and press MENU to enter the option menu. Select to delete one or all files.	Files cannot be restored after deletion. Please operate with caution.

MENU and PARAMETER SETTINGS

This chapter facilitates configure camera parameters.

Press MENU in the Live Preview. Press MENU again to switch between the three menus: Shooting Parameters, Device Settings, and Network Settings. Use the forward or backward keys ON to confirm. After configuring a specific page, press MENU to return to the previous operation. After completing your settings, press MENU to exit the menu. The parameters for different settings in the images are the same.

Slide the ON/◀2.5S▶/OFF switch to on ON for the camera to operate according to the configured parameters.

Menu Type	Parameter	Setting Options	Description	Notice
Shooting Parameters	Video Resolution	4K/2K/1080P/720P	Set the video resolution. Higher resolutions result in larger file sizes.	
	Video Loop Recording	Off/1 min/3 min/5 min	Set the duration for each video segment. When the storage is full, the oldest files will be overwritten.	
	Photo Resolution	32M/16M/12M/8M/5M	Set the photo resolution. Higher resolutions result in larger file sizes.	
	Photo Burst	Off/3 photos/5 photos/10 photos	Set the number of photos taken in burst mode.	
	Photo Interval	1s/2s/3s/5s/10s/30s/60s	Set the interval between photos in burst mode.	
	Motion Detection	On/Off	Enable or disable motion detection. When motion is detected, the camera will start recording.	
	Motion Detection Sensitivity	Low/Medium/High	Set the sensitivity of motion detection. Higher sensitivity will trigger recordings more easily.	
	Motion Detection Duration	10s/30s/60s	Set the duration for motion detection recordings.	
	Time Lapse Photography	Off/1s/2s/5s/10s/30s/60s	Set the interval for time-lapse photography. The camera will take photos at the specified intervals.	
	Time Lapse Video	Off/1s/2s/5s/10s/30s/60s	Set the interval for time-lapse video recording. The camera will record video at the specified intervals.	
	Time Lapse Video Duration	10s/30s/60s	Set the duration for time-lapse video recordings.	
Device Settings	Time Zone	-12:00 ~ +12:00	Set the time zone for the camera.	
	Date & Time	Auto/Manual	Set the date and time for the camera.	
	Language	English/Deutsch/Français/Español/Italiano/Nederlands/Polski/Português/Svenska/Suomi/Dansk/Norsk/Čeština/Magyar/Română/Slovenčina/Slovenščina/Hrvatski/Ελληνικά/Русский/Українська/Български/Srpski/Eesti/Latviešu/Lietuvių/Türkçe/日本語/한국어/繁體中文/简体中文	Set the language for the camera's menu and prompts.	
	Video Output Format	NTSC/PAL	Set the video output format for the camera.	
	Screen Brightness	Low/Medium/High	Set the brightness of the screen.	
	Screen Timeout	Off/30s/1min/3min/5min	Set the screen timeout duration. The screen will turn off after the specified time.	
	Indicator Light	On/Off	Enable or disable the indicator light.	
	Key Tone	On/Off	Enable or disable key tone.	
	Format	Cancel/Confirm	Format the memory card.	
	Factory Reset	Cancel/Confirm	Restore the camera to factory settings.	
	Firmware Version	—	Display the current firmware version.	
Network Settings	WiFi	On/Off	Enable or disable WiFi.	
	Bluetooth	On/Off	Enable or disable Bluetooth.	
	Connect to Device	—	Connect to the camera via the app.	
	Disconnect	Cancel/Confirm	Disconnect the app from the camera.	
	Reset Network	Cancel/Confirm	Reset network settings.	

Menu Type	Parameter	Setting Options	Description	Notice
Shooting Parameters	Video Resolution	4K/2K/1080P/720P	Set the video resolution. Higher resolutions result in larger file sizes.	
	Video Loop Recording	Off/1 min/3 min/5 min	Set the duration for each video segment. When the storage is full, the oldest files will be overwritten.	
	Photo Resolution	32M/16M/12M/8M/5M	Set the photo resolution. Higher resolutions result in larger file sizes.	
	Photo Burst	Off/3 photos/5 photos/10 photos	Set the number of photos taken in burst mode.	
	Photo Interval	1s/2s/3s/5s/10s/30s/60s	Set the interval between photos in burst mode.	
	Motion Detection	On/Off	Enable or disable motion detection. When motion is detected, the camera will start recording.	
	Motion Detection Sensitivity	Low/Medium/High	Set the sensitivity of motion detection. Higher sensitivity will trigger recordings more easily.	
	Motion Detection Duration	10s/30s/60s	Set the duration for motion detection recordings.	
	Time Lapse Photography	Off/1s/2s/5s/10s/30s/60s	Set the interval for time-lapse photography. The camera will take photos at the specified intervals.	
	Time Lapse Video	Off/1s/2s/5s/10s/30s/60s	Set the interval for time-lapse video recording. The camera will record video at the specified intervals.	
	Time Lapse Video Duration	10s/30s/60s	Set the duration for time-lapse video recordings.	
Device Settings	Time Zone	-12:00 ~ +12:00	Set the time zone for the camera.	
	Date & Time	Auto/Manual	Set the date and time for the camera.	
	Language	English/Deutsch/Français/Español/Italiano/Nederlands/Polski/Português/Svenska/Suomi/Dansk/Norsk/Čeština/Magyar/Română/Slovenčina/Slovenščina/Hrvatski/Ελληνικά/Русский/Українська/Български/Srpski/Eesti/Latviešu/Lietuvių/Türkçe/日本語/한국어/繁體中文/简体中文	Set the language for the camera's menu and prompts.	
	Video Output Format	NTSC/PAL	Set the video output format for the camera.	
	Screen Brightness	Low/Medium/High	Set the brightness of the screen.	
	Screen Timeout	Off/30s/1min/3min/5min	Set the screen timeout duration. The screen will turn off after the specified time.	
	Indicator Light	On/Off	Enable or disable the indicator light.	
	Key Tone	On/Off	Enable or disable key tone.	
	Format	Cancel/Confirm	Format the memory card.	
	Factory Reset	Cancel/Confirm	Restore the camera to factory settings.	
	Firmware Version	—	Display the current firmware version.	
Network Settings	WiFi	On/Off	Enable or disable WiFi.	
	Bluetooth	On/Off	Enable or disable Bluetooth.	
	Connect to Device	—	Connect to the camera via the app.	
	Disconnect	Cancel/Confirm	Disconnect the app from the camera.	
	Reset Network	Cancel/Confirm	Reset network settings.	

WARRANTY

Flysocks products are covered by a 24-month limited warranty starting date of purchase. The warranty is extended to all non-consumer buyers as required by local regulations.

The limited warranty covers one full process for one year after the original purchase date. We may apply for a warranty extension after free online service, technical, and customership when operated incorrectly and conditions.

Applicability of warranty

This warranty does not apply if:

- The product has been tampered with or the assembly and hardware removed or damaged.
- The product has been altered or modified by someone other than Flysocks.
- The product is used in a manner that is not in accordance with the product's documentation purposes, and any claim is void if there is the product, if proof of purchase can't be provided, or warranty period claim has expired or the product is lost.
- Flysocks is not responsible for any damages that may occur during transportation.
- Flysocks has no obligation to repair any products that can not be get covered under warranty.

Replacement Procedure

If a product is found to be eligible for warranty, repair, or a customer replacement, it will be sent as a prepaid product free of charge. The maximum limit is extends to the original product. If we have a product that is found to be defective and is still covered under this warranty, we will repair or replace the product at our discretion. Once a product is replaced, it will be shipped back to the customer at our expense. If we cannot locate a suitable replacement product, we will refund the purchase price of the product, excluding any shipping charges previously incurred by the customer and their agents (if applicable) for the remaining portion of the warranty period specified for the original product.

If a claim is denied and it is found to be defective and is still covered under this warranty, we will repair or replace the product at our discretion. Once a product is replaced, it will be shipped back to the customer at our expense. If we cannot locate a suitable replacement product, we will refund the purchase price of the product, excluding any shipping charges previously incurred by the customer and their agents (if applicable) for the remaining portion of the warranty period specified for the original product.

If a claim is denied and it is found to be defective and is still covered under this warranty, we will repair or replace the product at our discretion. Once a product is replaced, it will be shipped back to the customer at our expense. If we cannot locate a suitable replacement product, we will refund the purchase price of the product, excluding any shipping charges previously incurred by the customer and their agents (if applicable) for the remaining portion of the warranty period specified for the original product.

FCC COMPLIANCE INFORMATION STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

EU DECLARATION OF CONFORMITY

Hersteller:	Meross Innovation Co.,Limited
Adresse:	Room 1101, 11/F, Tower 1, Kowloon Commerce Centre, 51 Kwai Cheong Road, Kwai Chung, N.T., Hong Kong
Telefonnummer:	(0)7460507 (0)7461383 (0) +(852)-(0)-(0)
Faxnummer:	(0)7460507 (0)7461383 (0) +(852)-(0)-(0)
Produktbeschreibung:	4K PANORAMA WIFI CAMERA
Modellbezeichnung:	4K PANORAMA WIFI CAMERA, Meross Smart Wi-Fi Camera
Produktbeschreibung:	Meross Smart Wi-Fi Camera
Modellbezeichnung:	E306WH
Handelsmarke:	Flysocks
Name und Anschrift des Herstellers:	Meross Innovation Co.,Limited

Hiermit erklärt Meross Innovation Co.,Limited, dass der Funkanlagentyp E306WH der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.meross.com/Declaration

Frequenzbereich:	2412-2472MHz
Maximale Sendeleistung:	20dBm

Hersteller: Meross Innovation Co.,Limited
Adresse: Room 1101, 11/F, Tower 1, Kowloon Commerce Centre, 51 Kwai Cheong Road, Kwai Chung, N.T., Hong Kong
Telefonnummer: (0)7460507 (0)7461383 (0) +(852)-(0)-(0)
Faxnummer: (0)7460507 (0)7461383 (0) +(852)-(0)-(0)

Package Contents 1
Safety Information 2
How to Use 11
FAQ 21
Technical Specifications 23
Warranty 24

DEUTSCH

PACKUNGSINHALT

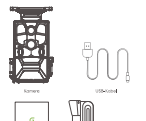

Hinweis

Bevor Sie die Kamera verwenden, stellen Sie sicher, dass die Speicherkarte eingelegt und mit der Kamera formatiert ist.

Anbringen und Befestigen der Kamera

1. Die Kamera kann bei Regen weiterarbeiten, sie darf nicht in Wasser getaucht werden. Bitte befestigen Sie die Kamera, so wenn nötig.
2. Achten Sie bei der Verwendung der Kamera darauf, dass die Oberseite der Kamera vertikal nach oben gerichtet ist.
3. Lösen Sie die Befestigungsschraube, schieben Sie sie ein, dass sich die Schraube in der Kamera befestigen und ziehen dann diese festschrauben.
4. Je nach Bedürfnissen der Kamera stellen Sie sie ein, dass die Kamera fest passt. Stellen Sie die Kamera in die gewünschte Position und ziehen Sie die Schraube fest, um sie sicher zu befestigen.

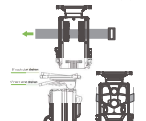

Einschalten und Ausschalten der Kamera

Schieben Sie den ON/◀2.5S▶/OFF-Schalter auf TEST. Die Kamera schaltet sich ein und zeigt den Live-Vorschaubildschirm an. Wenn die Kamera nicht einschaltet, laden Sie sie bitte auf. Wenn Sie noch keine Zeit mit der Kamera eingestellt haben, empfehlen wir, die Zeit mit der Kamera einzustellen.

Ändern des Vorschaumodus

Wenn der ON/◀2.5S▶/OFF-Schalter auf TEST gestellt ist, können Sie den Vorschaumodus ändern.

Drücken Sie MODE, um zwischen "Fotomodus" → "Videomodus" → "Netzwerkmodus" zu wechseln. In jedem Modus wird das entsprechende Symbol in der oberen linken Ecke des Bildschirms angezeigt.

- Symbol: "Fotomodus"
- Symbol: "Videomodus"

Durch Drücken von MODE wird nur der Vorschaumodus geändert, nicht der Arbeitsmodus der Kamera.

Um den Arbeitsmodus der Kamera zu ändern, müssen Sie die Einstellungen im Menü bedienen und speichern.

Test

Um den zu testen, machen Sie Kamera zu gewährleisten, machen Sie bitte vor dem Gebrauch eine Testaufnahme.

1. Schieben Sie den ON/◀2.5S▶/OFF-Schalter auf TEST, und drücken Sie OK, um ein Foto aufzunehmen.
2. Drücken Sie MODE, um in den Videomodus zu wechseln, und drücken Sie OK, um ein Video zu aufnehmen.
3. Drücken Sie MODE, um in den Netzwerkmodus zu wechseln, und stellen Sie sich mit einem Softgerät mit der Kamera zu verbinden, um zu prüfen, ob die Kamera ordnungsgemäß funktioniert.

Monitoraufnahmen

Stellen Sie die Kameraausrichtung nach Bedarf ein und achten Sie darauf, dass die Kameralinse vor dem Aufnahmebereich ausgerichtet ist.

Schieben Sie den ON/◀2.5S▶/OFF-Schalter auf ON, die Arbeitsanzeige blinkt grün, die Kamera beginnt mit der Arbeit. Wenn die Kamera im Bewegungserkennungsmodus ist, wechselt sie in den Standby-Modus. Wenn die Kamera ein sich bewegendes Objekt erkennt, erkennt und fotografiert die Kamera automatisch sich bewegende Tiere oder Menschen.

Über das Handbuch

Das Bild dient nur zur Referenz. Wir behalten uns das Recht vor, die Kamera ohne vorherige Ankündigung zu aktualisieren, und es wird keine Hinweise in diesem Handbuch geben. Wenn das Produkt aktualisiert wird, beziehen Sie sich bitte auf das tatsächliche Produkt.

Um das Benutzererlebnis zu verbessern, kann die App ohne vorherige Ankündigung aktualisiert werden. Bitte beachten Sie die neueste Version der Anleitung und stellen Sie sicher, dass Sie die neueste Version der App verwenden.

Alle Rechte vorbehalten. Ohne ausdrückliche Genehmigung darf kein Teil dieses Handbuchs kopiert, reproduziert oder verbreitet werden.

Verbindungsanleitung für Datenübertragung

Sie können die Kamera über einen geeigneten Kabel mit dem Computer verbinden, um Daten zu übertragen. Nachdem die Verbindung hergestellt ist, können Sie die Kamera als Wechseldatenträger verwenden, um Dateien zu verwalten.

Computer-Systemanforderungen

Stellen Sie vor der Verwendung sicher, dass Ihr Computer die folgenden Anforderungen erfüllt oder übertrifft:

- Betriebssystem: Windows 10 oder höher
- Prozessor: Intel Core i5 oder höher, getaktet mit 2 GHz oder schneller
- Arbeitsspeicher: 8GB RAM oder mehr
- Grafikkarte: DirectX 11 kompatibel oder höher
- Speicherplatz: 500GB oder mehr freier Festplattenspeicher
- USB-Schnittstelle: Standard USB 3.0 oder höher
- Bildschirmauflösung: 1920x1080 Pixel oder höher

Bitte beachten Sie, dass Ihr Computer möglicherweise nicht ordnungsgemäß funktioniert, wenn er die Kamera anschließt, wenn er diese Spezifikationen nicht erfüllt.

Umweltanforderungen

- Betriebsumgebung: Temperatur 14°F bis 104°F (-10°C ~ 40°C).
- Lagerumgebung: Temperatur 14°F bis 140°F (-10°C ~ 60°C).
- Nicht in feuchter Umgebung mit starken Vibrationen oder Staub verwenden oder lagern.

Abfallentsorgung

Es ist verboten, die Kamera und das Zubehör willkürlich wegzuwerfen. Bitte entsorgen Sie den Abfall gemäß den örtlichen Gesetzen.

Andere Anmerkungen

Für Kameras mit WLAN oder Bluetooth nehmen Sie diese bitte an Orten mit guten Empfang. Diese können sonst zu Störungen, verpassten Verbindungen oder anderen Problemen führen.

Bitte halten Sie sich an alle örtlichen Gesetze und Vorschriften für die Verwendung von drahtlosen Geräten.

Bitte halten Sie sich an alle örtlichen Gesetze und Vorschriften für die Verwendung von Geräten mit Datenschutzfunktionen.

Vor der Verwendungsprüfen

Um Ihre Sicherheit zu wahren, machen Sie bitte vor dem Gebrauch einen Testschuss.

Wir sind nicht verantwortlich für zusätzliche Verluste, die durch unsachgemäße Nutzung oder Kamerafehler verursacht werden.

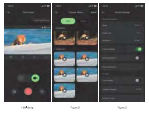

Über das Handbuch

Das Handbuch dient nur als Referenz. Das endgültige Produkt ist immer der Inhalt in der Kamera. Wenn das Produkt aktualisiert wird, beziehen Sie sich bitte auf das tatsächliche Produkt.

Alle Rechte vorbehalten. Ohne ausdrückliche Genehmigung dürfen Kopien, Reproduktionen oder Verbreitungen dieses Handbuchs weder ganz noch teilweise erfolgen.

Anzeigen der Informationen

Drücken Sie MENU, um in den Menümodus zu gehen, und drücken Sie die Tasten oben und unten, um die Optionen zu durchlaufen.

1. Auflösung	2. Auflösung/Bitrate
3. Schleifenaufnahme	4. Fotoqualität
5. Belichtungskompensation	6. Fotoauflösung
7. Automatische Videoaufnahme	8. Bewegungserkennung
9. Automatische Videoaufnahme	10. Bewegungserkennung
11. Automatische Videoaufnahme	12. Bewegungserkennung
13. Automatische Videoaufnahme	14. Bewegungserkennung
15. Automatische Videoaufnahme	16. Bewegungserkennung
17. Automatische Videoaufnahme	18. Bewegungserkennung
19. Automatische Videoaufnahme	20. Bewegungserkennung
21. Automatische Videoaufnahme	22. Bewegungserkennung
23. Automatische Videoaufnahme	24. Bewegungserkennung
25. Automatische Videoaufnahme	26. Bewegungserkennung
27. Automatische Videoaufnahme	28. Bewegungserkennung
29. Automatische Videoaufnahme	30. Bewegungserkennung
31. Automatische Videoaufnahme	32. Bewegungserkennung
33. Automatische Videoaufnahme	34. Bewegungserkennung
35. Automatische Videoaufnahme	36. Bewegungserkennung
37. Automatische Videoaufnahme	38. Bewegungserkennung
39. Automatische Videoaufnahme	40. Bewegungserkennung
41. Automatische Videoaufnahme	42. Bewegungserkennung
43. Automatische Videoaufnahme	44. Bewegungserkennung
45. Automatische Videoaufnahme	46. Bewegungserkennung
47. Automatische Videoaufnahme	48. Bewegungserkennung
49. Automatische Videoaufnahme	50. Bewegungserkennung
51. Automatische Videoaufnahme	52. Bewegungserkennung
53. Automatische Videoaufnahme	54. Bewegungserkennung
55. Automatische Videoaufnahme	56. Bewegungserkennung
57. Automatische Videoaufnahme	58. Bewegungserkennung
59. Automatische Videoaufnahme	60. Bewegungserkennung

PRODUKT EINFÜHRUNG

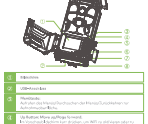

1. Linsenöffnung
2. Linse
3. Deckel-Entriegelung
4. Mikrofonen (Stereoton)
5. Mikrofonen (Stereoton)
6. Infrarotlicht
7. Statusanzeige
8. Mini-USB-Anschluss
9. Lautsprecher

ANSICHT DER ÖFFNUNG DER FRONTABDECKUNG

1. Objektiv
2. Linsenöffnung
3. Mikrofonen
4. Statusanzeige
5. Taste nach oben/Zoom in/Nachricht nach vorne
6. Taste nach unten/Zoom out/Nachricht nach hinten
7. Ein-/Ausschalter/Wechseln des Modus/Zurücksetzen der Kamera
8. Taste nach oben/Zoom in/Nachricht nach vorne
9. Taste nach unten/Zoom out/Nachricht nach hinten
10. Menü-Taste/Zurück
11. Ein-/Ausschalter/Wechseln des Modus/Zurücksetzen der Kamera
12. Lautsprecher
13. Mini-USB-Anschluss
14. Statusanzeige
15. Mikrofonen (Stereoton)
16. Mikrofonen (Stereoton)
17. Infrarotlicht
18. Linsenöffnung
19. Objektiv

INSTALLATIONSANLEITUNG

Laden Sie die Flysocks-App herunter

Folgen Sie den Anweisungen in der App, um die Kamera über WiFi zu verbinden. Sie können dann die App verwenden, um die Kamera zu bedienen, Einstellungen anzupassen, eine Vorschau anzuzeigen und Dateien herunterzuladen.

Einsetzen der Speicherkarte

Entnehmen Sie die Kamera vor der ersten Verwendung und legen Sie die Speicherkarte (separat erhältlich) in den Kartensteckplatz ein, wie in der Abbildung gezeigt, bis sie einrastet.

Schalten Sie Speicherkarte richtig eingesetzt ist, sind die Speicherkarte normal auf dem Bildschirm angezeigt.

Hinweis

1. Vergewissern Sie sich, dass die Speicherkarte vor dem ersten Gebrauch formatiert wurde.
2. Entfernen Sie die Speicherkarte nicht bei eingeschalteter Kamera ein und nehmen Sie sie heraus. Schalten Sie das Gerät vollständig aus, bevor Sie Speicherkarten einsetzen oder herausnehmen.
3. Verwenden Sie eine SD-Karte oder höher, die Kamera ein und bereithalten, um die Kamera ordnungsgemäß zu betreiben.

Anzeigen der Informationen

Drücken Sie MENU, um in den Menümodus zu gehen, und drücken Sie die Tasten oben und unten, um die Optionen zu durchlaufen.

1. Auflösung	2. Auflösung/Bitrate
3. Schleifenaufnahme	4. Fotoqualität
5. Belichtungskompensation	6. Fotoauflösung
7. Automatische Videoaufnahme	8. Bewegungserkennung
9. Automatische Videoaufnahme	10. Bewegungserkennung
11. Automatische Videoaufnahme	12. Bewegungserkennung
13. Automatische Videoaufnahme	14. Bewegungserkennung
15. Automatische Videoaufnahme	16. Bewegungserkennung
17. Automatische Videoaufnahme	18. Bewegungserkennung
19. Automatische Videoaufnahme	20. Bewegungserkennung
21. Automatische Videoaufnahme	22. Bewegungserkennung
23. Automatische Videoaufnahme	24. Bewegungserkennung
25. Automatische Videoaufnahme	26. Bewegungserkennung
27. Automatische Videoaufn