288X290MM

Using the Optical connection

Use an optical cable (included) to connect the TV's OPTICAL OUT Port to the soundbar's OPTICAL Port.



Using the Aux Connection

Use a 3.5mm to 3.5mm stereo audio cable (included) to connect the TV's headphone port to the soundbar's AUX IN port.



Using the Aux Connection

Use a 3.5mm to RCA stereo audio cable (not included) to connect the TV's audio output Port to the soundbar's AUX IN port.



Using the Bluetooth Connection

- Turn on the power, press (⏻) on the unit or remote control to switch the unit to ON mode with a prompt tone.
- Keep the distance of the soundbar and your mobile phone, PC, tablet or other Bluetooth enabled device within 1 meter. This allows the better.
- Ensure Bluetooth is enabled on your device and that your device is discoverable.
- Select the Bluetooth mode on the soundbar:
•Using the remote control, press the Bluetooth button. The indicator light on the soundbar will be flashing blue.
•Alternatively, press the source button on the soundbar until the indicator light is flashing blue.
- Select the Bluetooth search function on your device. Your device should discover the soundbar which is called "onn. 36" 2.1 soundbar".
- Select pairing mode:
•Using the remote control, press and hold the Bluetooth button for 3 seconds until the indicator light is flashing slowly.
•Alternatively, press and hold the source button on the soundbar for 3 seconds until the blue indicator light is flashing slowly.
- Select the Bluetooth search function on your device. Your device should discover the soundbar which is called "onn. 36" 2.1 soundbar".
- Select "onn.36" 2.1 soundbar" your device is paired with the soundbar when the blue indicator light stops flashing and becomes solid.



Connecting to the Power Outlet

- Connect the AC IN port to the power outlet by power cord



⚠ Ensure all audio connections of the unit are connected before connecting to the mains power outlet.

Product Wall Mounting the First Step 01

1. Drill 2 pcs Φ 5x 40 mm Ø 8mm each according to wall type) in the wall. The distance between the holes must be 600mm.



⚠
- Installation must be carried out by qualified personnel only. Incorrect assembly can result in serious injury or property damage. If you cannot understand this product yourself, you must check for installation suitable electrical wiring and plumbing that may be hidden inside the wall, it is the user's responsibility to verify that the wall will safely support the total load of the Soundbar.
- Additional wall anchors (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

Product Wall Mounting the Second Step 02

2. Firmly fix 1 dowel (Φ 8 x 2") 14mm (not included) into each hole in the wall if necessary.

Product Wall Mounting the Third Step 03

3.Insert 1 screw (Ø 4*40mm (not included) into each hole in the wall. Leave a clearance gap between the wall and the screw's head. Lift the unit over the heads of the screws and fasten in place.

Battery Safety Guidelines

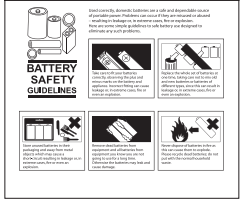

Battery Replacement for the Remote Control the First Step 01

Lift up the back cover to open the battery compartment of the remote control.

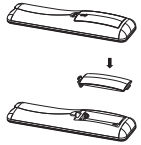

Battery Replacement for the Remote Control the Second Step 02

Insert two AAA size batteries. Make sure the (+) and (–) ends of the batteries match the (+) and (–) ends indicated in the battery compartment.

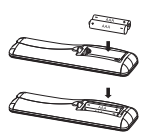

Battery Replacement for the Remote Control the Third Step 03

Close the battery compartment cover.

Remote Control Operation Range

The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 15' away and within a maximum of ± 60 arc.

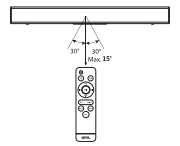

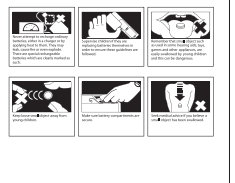

Safty Warnings

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage
- Do not inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit
- Place the unit on a flat level surface and should not be subjected to vibration.
- Do not place the unit on clayed or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.

Temperature
- Do not use in extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames
- Never place any type of candle or naked flame on the top of or near the unit.

Ventilation
- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation
- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Mains Adapters
- The mains adapter will continue to draw electricity if it is left switched on at the mains socket. Switch it in the interests of safety and to avoid unnecessary energy consumption, never leave the adapter plugged in the mains socket while for long periods of time. Disconnect the adapter from the mains socket.
- Working ambient 0°~35°C, voltage input range 198V~264V(for adapter).



Safety

- Always disconnect the unit from the mains supply before connecting/ disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket before a thunderstorm.

Power Cord
- Make sure the unit or unit stand is not resting on top of the mains power cord, or the weight of the unit may damage the cable and create a safety hazard.

Interference
- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit and cause a distorted picture or sound.

Batteries
- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Please dispose of batteries correctly by following the guidelines in this manual.

Supervision
- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN

⚠ The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

⚠ The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service
- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified service personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance
- Ensure the unit is fully unplugged from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.
- No naked flame sources such as lighted candles, should be placed on the apparatus.
- Avoid exposure de flamme nue, telle que des bougies allumées, ne doivent placé sur l'appareil.

Handling the Battery
- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- Do not install new batteries with used ones and do not mix different type of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

Handling the Remote Control
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not get water or any liquid on the remote control.
- Do not place the remote control in direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, self or property damage, and / or fire.
- When the battery is exhausted, the remote control is not function.

Battery Safety Guidelines

Battery Safety Guidelines

Battery Safety Guidelines

Service

How to get service:
- Call 1-800-926-6266, contact Walmart Inc. Walmart.com Bentonville,AR 72716
- Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice), the unit's date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.
- A representative will troubleshoot your problem over the telephone. If it is determined that your unit requires service, the service location will be at the sole discretion of Walmart, Inc. based upon the Walmart, Inc. Limited Warranty Statement.
- At the sole discretion of Walmart, Inc., item will either be repaired at an Authorized Service Center or directly exchanged for a new or refurbished/remanufactured unit. If repaired at an Authorized Service Center, a pre-paid shipping label will be provided and Walmart, Inc. will pay for return shipping.
- Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is evidence that the product is within the warranty period must be presented to obtain warranty service.
- FRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN AUTHORIZED SERVICE CENTER.
- A unit purchased or serviced outside the USA.
- A unit sold (in "As-Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with faults.
- Acts of nature or God, such as but not limited to earthquake or lightning damage.
- Special, incidental or consequential damages.

Warranty

Walmart , Inc. Limited Warranty

LIMITATION OF WARRANTY
- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY WAL-MART STORES, INC. ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. WAL-MART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY AND WARRANTY PERIOD SET FORTH ABOVE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

How State Law relates to this warranty:
- Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your unit outside the United States or seek warranty coverage outside the United States: This warranty does not apply. Contact your store for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

Remote Control Operation Range

Thank you for purchasing your new ONN Soundbar.
We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will find some hints and tips to help you make any issues. Read all the safety instructions carefully before use and keep this instruction manual for future reference.

SOME DOS AND DONTS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO
- read the operating instructions before you attempt to use the equipment.

DO
- ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.

DO
- consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO
- be careful with glass panels or doors on the equipment.

DO
- route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.

DON'T
- remove any fixed cover as this may expose dangerous voltages.

DON'T
- obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DON'T
- allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases.

DON'T
- place hot objects or naked flame sources such as lighted candles or nightlights on, or close, to equipment. High temperatures can melt plastic and lead to fires.

DON'T
- use makeshift stands and NEVER fix legs with wooden screws. To ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided and according to the instructions.

DON'T
- use equipment such as personal stereos or radios that will distract you from the requirements of traffic safety.

DON'T
- listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T
- leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the ON/OFF switch on the equipment or at the mains socket, and make sure you know how to operate any timer device. Special arrangements may need to be made for infirm or handicapped people.

DON'T
- continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way – switch off, remove the mains plug from the mains socket and consult your dealer.

ABOVE ALL...
- NEVER let anyone especially children push anything into holes, slots or any other opening in the equipment – this could result in a fatal electric shock.
- NEVER guess or take chances with electrical equipment of any kind. It is better to be safe than sorry!

Specifications

Model	100015716
Mains Adapter	Input: AC 100-240V~ 60Hz
Total Power	70W
Power Consumption	40W
System Output Power	2x20Wrms @ 3%THD
Net Weight	3.1kg
Dimension	W:Imm(W) x H:mm(H) x D:mm(D)

Features and specifications are subject to change without prior notice.

Hints and Tips

- If sound is distorted, it may often be due to something very mundane, like a loose cable connection.
- When switching to another channel, the Bluetooth will be in disconnected status.
- When LED indicator is flashing slowly, the Bluetooth will be paired and be in disconnected status.
- When LED indicator becomes solid, the Bluetooth will be connected successfully with a paired one.

Problem	Solution
No power	Ensure the mains power cord is connected securely at both ends. Make sure that the ON mode is selected.
The remote control is not functioning	Use the remote control near the unit. Point the remote control at the remote sensor on the unit. Remove any obstacles that may be in the path of the signal. Remove any objects between the remote control and the unit.
Sound from or noise is heard	Fine adjust and isolate one dirty/loose item at a time. Replace with an appropriate new device during adjustment.

If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

1. Read these instructions –
All the safety and operating instructions should be read before this product is operated.

2. Keep these instructions –
The safety and operating instructions should be retained for future reference.

3. Heed all warnings –
All warnings on the appliance and in the operating instructions should be adhered to.

4. Follow all instructions –
All operating and use instructions should be followed.

5. Do not use this apparatus near water –
The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.

6. Clean only with dry cloth.

7. Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Only use attachments/accessories specified by the manufacturer.

10. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

11. Unplug the apparatus during lightning storms or when unused for long periods of time.

12. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

What's in the Box? Check to make sure you have everything below.

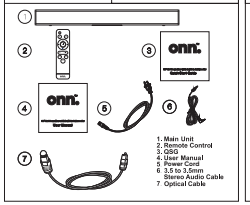

1. Main Unit
2. Remote Control
3. QSG
4. User Manual
5. Power Cord
6. 3.5 to 3.5mm Stereo Audio Cable
7. Optical Cable

Product Overview(Front view) 01



1. Speaker
2. LED Indicator
- Red when the unit is in STANDBY mode.
- Lights up yellow in AUX mode.
- Lights up green in OPTICAL mode.
- Lights up blue in BLUETOOTH mode.
3. Remote Control Sensor
Receives signal from the remote control.

Product Overview(Side View) 02

1. Button Switches the unit between ON and STANDBY modes
2. SOURCE Button Selects the input source.
3. VOL+ Button Increases the volume.
4. VOL- Button Increases the volume.

Product Overview(Back View) 03

1. AUX IN Port 2. OPTICAL Port 3. AC IN Port

Remote Control Overview



1. On Button switches the unit between ON and STANDBY modes.
2. Bluetooth Connection switches to Bluetooth mode, press and hold to enable bluetooth pairing if there is an existing connection then disconnect the devices, unit will enter pairing mode.
3. VOL+ button increases the volume.
4. Mute button skip to previous track in Bluetooth mode.
5. VOL- button decreases the volume.
6. Press AUX button, device will play audio from aux input.
7. Press MUSIC button to select MUSIC mode.
8. ⏯ button mutes the unit or resumes the sound.
9. ⏭ button to play/pause music in Bluetooth mode.
10. ⏭ button skip to next track in Bluetooth mode.
11. Press OPTICAL button, device will play audio from optical input.
12. Press MUSIC button to select MUSIC mode.
13. Press TALK button to select TALK mode.

onn.™

36" 2.1 Soundbar with built-in Subwoofer

User Manual

100015716

6 81131310758

Ver.01Rev.06/12/2019

We'd love to hear from you. Scan with your Walmart app and let us know what you think.