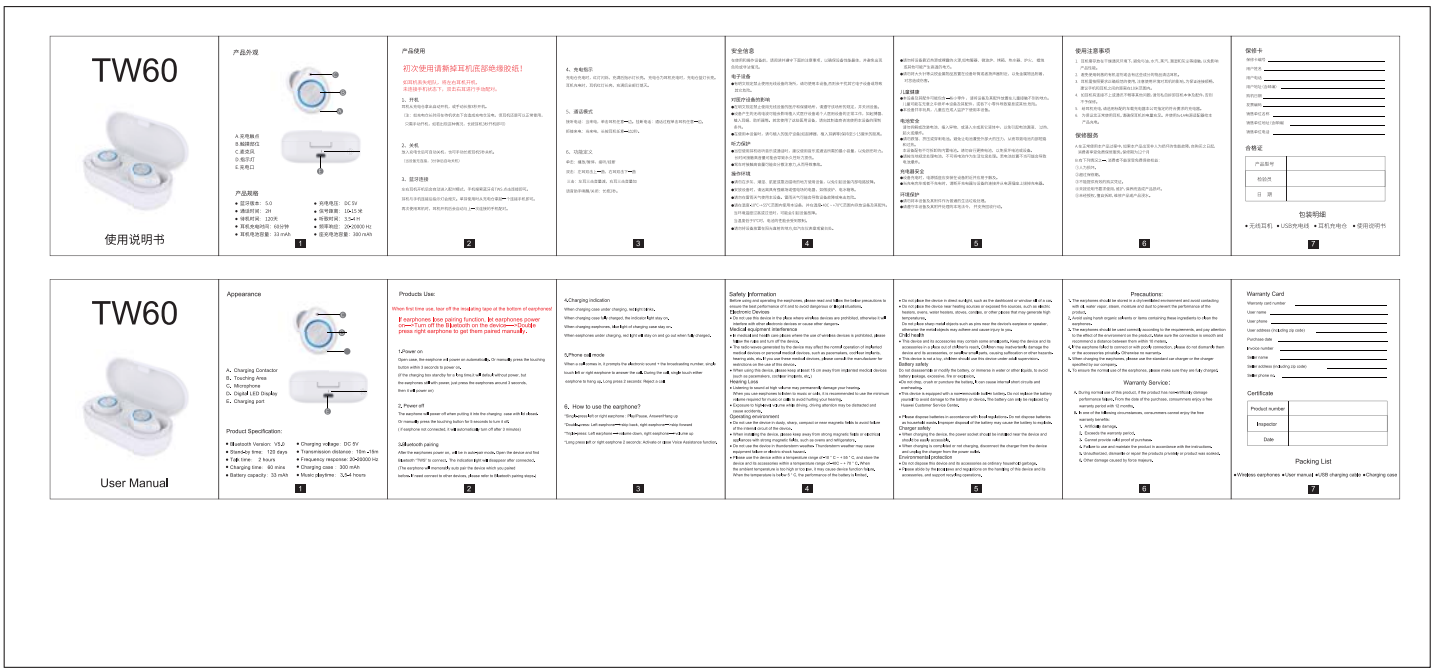

TW60

使用说明书

产品外观

A.充电触点
B.触摸感应
C.麦克风
D.指示灯
E.充电口

产品规格

- 蓝牙版本：5.0
- 待机时间：24
- 单耳时长：120天
- 充电时间：2小时
- 耳机充电时间：60分钟
- 充电仓容量：33 mAh
- 充电电压：DC 5V
- 发射频率：10-15 M
- 传输距离：10米
- 频率响应：20-20000 Hz
- 充电仓容量：300 mAh
- 耳机电池容量：50 mAh

1

产品使用

初次使用请新装耳机匹配绝缘胶纸！

初次耳机连接时，需长按耳机开机。
未连接手机状态下，自动关机进行配对。

1、开机

将耳机从充电仓取出或开机，或手动长按3秒开机。

（注：若耳机开机后仍保持闪烁表示连接成功失败，请反时间重新开机连接。
二次耳机开机，会自动回连上次配对成功，无需再进行配对操作）

2、关机

放入充电仓可自动关机，也可手动长按3秒关机。
（注：长按3秒，听到提示关机）

3、蓝牙连接

长按耳机开机后自动进入配对模式，手机搜索蓝牙名TWS 点击连接即可。

若有几个耳机连接后每次只连接左，需在重启后左右耳机，点击连接即可。

若左耳单耳使用，耳机开机后会自动连上一次连接的手机蓝牙。

2

4、充电指示

充电仓充电时，红灯闪烁，充满后指示灯长亮。充电仓为耳机充电时，充电仓指示灯长亮，耳机充电时，耳机灯红长亮，耳机满电后灯熄灭。

5、通话模式

单耳模式：左耳机，单击耳机左侧一次，结束通话；通话过程单击耳机左侧一次，
接听来电，挂断电，长按耳机左侧一秒。

6、功能定义

单击：暂停/播放，接听/结束

双击：切换歌曲（一秒），切换歌曲（一秒）

三击：长按三击歌曲前，长按三击歌曲后

语音助手唤醒（长按）：长按2秒。

3

安全信息

为使用耳机等设备时，请阅读并遵守下面的注意事项，以确保设备性能最佳，并避免出现
任何意外发生。

电子设备

●制作过程发现上使用任何设备时制作，请关闭使用本设备，因为其电子干扰可能导致设备
进行干扰。

对医疗设备的影响

●如果您或您的上使用任何设备使用医疗设备时请咨询，请查阅该设备制造商，确保该设备
不受射频信号影响。

●请教产品使用的设备的制造商咨询输入的医疗设备是否不受射频信号影响。如果您佩戴
输入耳机，请咨询医生，检查您的医疗设备是否受到，因此您佩戴带有助听器设备的耳机
是否。

●如果您使用助听，请咨询人员医疗设备以获得帮助，输入耳机等设备可能会引起噪音问题。

听力保护

●为了保证耳机的听力保护功能正常，请以音量低于最高音的50%进行设置，以免损伤听力。

●长时间聆听高音量可能会导致听力受损。

●为了保证聆听安全，请以音量可能会导致听力受损。

操作环境

●请在正常、清洁、适宜温度的环境下使用设备，以免对设备产生不利影响或损坏。

●请勿使用，请远离有危险易燃易爆物品的环境，如有加油、化学品等。

●请勿将设备从产品使用区域。请勿从产品使用区域拆卸设备或改动。

●请勿直接将产品使用区域。请勿从产品使用区域拆卸设备或改动。

●请勿直接将产品使用区域。请勿从产品使用区域拆卸设备或改动。

注意事项可以不同，请以使用说明书为准。

●请勿将设备放置在阳光直射环境下长期存放或使用，以免设备发生变形。

4

●请勿将设备放在热源或明火附近，以免发生爆炸、燃烧、变形、锈蚀、热冷等，进行，或导
致设备内部产生高温导电。

●请勿将大于等于2公斤设备用压重物压或使用或者跌落或撞击，以免造成损坏或
对设备的伤害。

儿童健康

●请保证儿童或宠物不接触设备——如吞咒，请将设备及其配件放置在儿童接触不到的地方。

●请勿将设备放入口中或不小心吞入设备，请及时，请将设备及其配件放置在儿童接触
不到的地方。

电池安全

请勿拆解或改装电池，输入电池，或放入电或充满电，以免引起电池漏液、过热、
爆炸或起火。

●请勿使用、贮存或穿刺电池，请勿让电池暴露于高温环境下，以免导致电池内部短
路或起火。

●请勿将电池放置在儿童或宠物接触不到的地方，以免发生电池误吞。

●请勿在电池正在充电时，不可将电池内外连接正极或负极，否则会造成不可逆的电容
电池爆炸。

充电器安全

●请勿在雷雨，电闪雷鸣或恶劣天气条件下进行充电。

●请勿将充电器用于电池时，请勿不将电池安装在电池内部并从电源插头拔掉电源。

设备保护

●请勿将设备放在高温环境下使用或存放，以免设备发生变形。

●请勿将设备放在潮湿环境下使用或存放，以免设备发生腐蚀。

5

使用注意事项

1. 请在佩戴设备前仔细阅读说明书，请勿与油、水、汗、灰尘、潮湿、风沙等接触，以免影响
产品性能。
2. 请勿使用有腐蚀性物质或可能会导致设备损坏的物质清洁设备。
3. 请在佩戴耳机前检查耳机的完整性，如果发现有任何损坏或异常，请立即停止使用，
并及时联系客服。
4. 请勿在佩戴耳机过程中进行剧烈运动，以免耳机掉落或造成不必要的损失。
5. 请勿在佩戴耳机时进行长时间的高音量聆听，以保护您的听力健康。
6. 请勿将耳机放置在儿童或宠物接触不到的地方，以免发生误吞或误用。
7. 为保证最佳聆听效果，请确保耳机和佩戴部位干燥清洁，并按照说明书的佩戴方式
正确佩戴。

保修服务

本公司提供的产品质保期，根据产品型号和产品设计，以下为具体保修期，自购买之日起
计算：

耳机下列情况——请勿提供保修服务和退换：

1.人为损坏。
2.超过保修期。
3.不能提供有效的购买证明。
4.非授权维修或更换耳机，或对一体两用设备产品拆开。
5.未经授权，擅自拆解，修理产品或产品改造。

6

保修卡

保修卡编号：
用户姓名：
用户电话：
用户地址（选填）：
购买日期：
发票编号：
销售单位名称：
销售单位地址（选填）：
销售单位电话：

合格证

产品型号	
检验员	
日 期	

包装明细

- 无线耳机
- USB充电线
- 耳机充电仓
- 使用说明书

7

TW60

User Manual

Appearance

A、Charging Contactor
B、Touching Area
C、Microphone
D、Digital LED Display
E、Charging port

Product Specification:

- Bluetooth Version: V5.2
- Stand-by time: 120 days
- Talk time: 2 hours
- Charging time: 60 mins
- Battery capacity: 33 mAh
- Charging voltage: DC 5V
- Transmission distance: 10m-15m
- Frequency response: 20Hz2000 Hz
- Charging case: 300 mAh
- Music playtime: 5.5-6 hours

1

Products Use:

When first time use, tear off the insulating tape at the bottom of earphones!

If earphones lose pairing function, let earphones power on—Turn off the Bluetooth on the device—Double press right earphone to get them paired manually.

1.Power on:

Open case, the earphone will power on automatically, Or manually, press the touching
button within 3 seconds to power on.
If the charging box standby for a long time, it will auto shutdown without power, but
the earphones still with power, just press the earphones around 3 seconds,
then it will power on.

2. Power off:

The earphone will power off when putting it into the charging case with lid closed.
Or manually, press the touching button for 3 seconds to turn it off.
(If earphone not connected, it will automatically turn off after 3 minutes)

3.Bluetooth pairing:

After the earphones power on, will link to last each mode. Open the device and find
Bluetooth "TWS" to connect, The indicator light will keep on flasher after connected.
(The earphone will memorized to auto pair the device which you paired
before.If need connect to other devices, please refer to Bluetooth pairing step.)

2

A.Charging indication

When charging case under charging, red light on.
When charging case is full charged, the indicator light stay on.
When charging earphones, blue light of charging case stay on.
When earphones under charging, red light of stay on and go out when full charged.

B.Phone call mode

When a call comes in, it prompts the electronic sound + the broadcasting number, single
touch left or right earphone to answer the call, During the call, single touch either
earphone to hang up, Long press 2 seconds: Reject a call.

6、How to use the earphone?

Single touch left or right earphone: 1 Play/Pause, Answer/hang up
Double press: Left earphone—next song, right earphone—play forward
Triple press: Left earphone—volume down, right earphone—volume up
Long press left or right earphone 2 seconds: Activate or close Voice Assistance function.

3

Safety Information

To ensure the best performance of the earphones, please read and follow the below precautions to ensure the best performance of it and to avoid dangerous or illegal situations.

Electronic Devices

- Do not use this device in the place where wireless devices are prohibited, otherwise will interfere with other electronic devices or cause other dangers.

Medical equipment interference

- In medical and health care places where the use of wireless devices is prohibited, please turn off the device in advance.
- The radio waves generated by the device may affect the normal operation of implanted medical devices or personal medical devices, such as pacemakers, cochlear implants, hearing aids, etc. If you use these medical devices, please consult the manufacturer for restrictions on the use of this device.
- If you use a hearing aid, please keep at least 15 cm away from implanted medical devices (such as pacemakers, cochlear implants, etc.).

Hearing Loss

- Listening to sound at high volume may permanently damage your hearing.
  When you use earphones to listen to music or calls, it is recommended to use the minimum volume required for music or calls to avoid hearing out hearing.
- Exposure to high-volume noise while driving, driving attention may be distracted and causes dangerous accidents.

Operating environment

- Do not use the device in dusty, sheny, compact or near magnetic fields to avoid failure of the internal circuit of the device.
- When charging the device, please keep away from strong magnetic fields or electrical interference, otherwise it may affect the charging process and cause danger.
- Do not use the device in thunderstorm weather. Thunderstorm weather may cause equipment failure or electric shock hazard.
- Please use the device within a temperature range (-4° C ~ +35 ° C, and store the device and its accessories within a temperature range (-4°C ~ +70 ° C). When the ambient temperature is too high or too low, it may cause device failure or fire. When the temperature is below 5 ° C, the performance of the battery is limited.

4

- Do not place the device in direct sunlight, such as the dashboard or window sill of a car.
- Do not place the device near heating devices or exposed fire sources, such as electric heaters, ovens, water heaters, stoves, cooktops, or other places that may generate high temperatures.
  Do not place sharp metal objects such as pins near the device's earpiece or speaker, otherwise the metal objects may adhere and cause injury to you.

Children health

- Children and pets accessories may contain small components. Keep the device and its accessories in a place out of children's reach, Children may mistakenly damage the device and its accessories, or swallow small parts, causing suffocation or other hazards.
- This device is not a toy. Children should use this device under adult supervision.

Battery safety

- Do not disassemble or modify the battery, or immerse in water or other liquids, to avoid battery damage, explosion, fire or burning.
- Do not chop, crush or puncture the battery, it can cause internal short circuits and overheating.
- Please dispose batteries in accordance with local regulations. Do not dispose batteries in household waste, Improper disposal of the battery may cause the battery to explode.

Charger safety

- When charging the device, the power socket should be close to the device and have easy access to the power plug.
- When charging is complete or not charging, disconnect the charger from the device and unplug the charger from the power outlet.

Environmental protection

- Do not dispose this device and its accessories as ordinary household garbage.
- Please abide by the regulations and regulations on the handling of this device and its accessories, and support recycling operations.

5

Precautions:

- The earphones should be stored in a dry environment and avoid contacting with oil, water vapor, steam, moisture and dust to prevent the performance of the product.
- Avoid using harsh organic solvents or items containing these ingredients to clean the earphones.
- The earphones should be used correctly according to the requirements, and pay attention to the effect of the environment on the product. Make sure the connection is smooth and avoid unnecessary damage caused by improper use.
- If the earphones fail to connect or with crack, it may be a connection. Please do not dismantle them or the accessories privately. Otherwise no warranty.
- When charging the earphones, please use the standard car charger or the charger specified by our company.
- To ensure the normal use of the earphones, please make sure they are fully charged.

Warranty Service:

- During normal use of the product, if the product has non-artificial damage performance issues, from the date of the purchase, consumers enjoy a free warranty period with 12 months.
- In one of the following circumstances, consumers cannot enjoy the free warranty benefits:
  - Artificial damage.
  - Exceeds the warranty period.
  - Unable to provide proof of purchase.
  - Failure to use and maintain the product in accordance with the instructions.
  - Unauthorized, disassemble or repair the products privately or product was seized.
  - Other damage caused by force majeure.

6

Warranty Card

Warranty card number:
User name:
User phone:
User address (including zip code):
Purchase date:
Invoice number:
Seller name:
Seller address (including zip code):
Seller phone no.:

Certificate

Product number	
Inspector	
Date	

Packing List

- Wireless earphones
- User manual
- USB charging cable
- Charging case

7

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.