rock space

AC1200

DUAL-BAND SMART WIFI ROUTER

Model No.:RS00611

Website: www.rockspace.hk
Support Email: router@rockspace.cc
(please read the instructions carefully and keep it properly).

Network Configuration

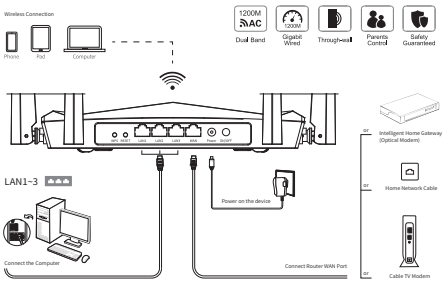

1. Computer Setting

1.1 Click: " 【Start】— 【Control Panel】— 【 Network and Internet 】— 【Network and Sharing Center】— 【Change adapter settings】— 【Local Area Connection】", select the connected network card. Then right click "Local Area Connection", select【Properties】

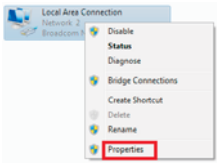

1.2 Select【Internet Protocol Version 4 (TCP/IPv4)】, click【Properties】

1.3 Select【Obtain an IP address automatically】,【Obtain DNS Server address automatically】, click【OK】. Return back to the previous interface and click【OK】.

2. Router setting

2.1 Open the browser, input and connect: http://192.168.1.1
input user name "admin" and password "admin"
Click "Next"

2.2 Setup Operation Mode
The device support various opration modes, which allows you to use different interfaces for NAT and bridging. Select proper operation mode accordance to your network topology. Default Gateway Mode.Click "Next".

2.3 Setup Time Zone. Click "Next".

2.4 Setup LAN Settings. Click "Next".

2.5 Setup WAN Settings
Here you can also set the connection types. The router supports three common connection types: fixed IP, obtaining IP automatically and PPPoE dial-up.

Auto Config(DHCP)

Fixed IP

PPPoE Dial-Up

2.6 Wireless 5GHz Basic Settings

2.7 Wireless 5GHz Security Settings

2.8 Wireless 2.4GHz Basic Settings

2.9 Wireless 2.4GHz Security Settings

3.wireless connection: (Here we take an win7 for instance)

3.1 Click"Start---Control Panel----Network and Internet---Network and Sharing Center---Change adapter settings---Wireless Network Connection", Then right click"Wireless Network Connection", select"Connect/Disconnect".

3.2 Select the wireless network name (SSID) in the wireless network list, click "Connect."



3.3 Enter Wi-Fi key, click "OK."
Note: the default SSID and Network Key is on the product label on the bottom

3.4 Connection is successful

4. FAQs

4.1 How to reset to defaults?
Keep pressing the Reset button near to the wan port and gurantee the device is in power, releasing it after 5~10 seconds.

4.2 Laptop can not search out the wifi signal?
a. If your laptop is with built-in wireless adapter,please confirm that the wireless adapter is working or not.
b. Check the wireless service in the laptop is open or not. Methods is as belows: Right-click "my computer",choose "management",then choose"service and application", check the"wireless Zero Configuration" in the "Service "page. If the stage is not open,please right-click "wireless zero configuration "and click "open". If the open type shows it is forbidden,please right-click and choose the attribute, change the open type to automatic,then change the state to open.
c. Confirm the wilress function of Router is opening.
d. Check the driver of the wireless adapter in the device manager is successfully installed or not.

5.FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement
This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Operations in 5150-5250 MHz band is for indoor use only.