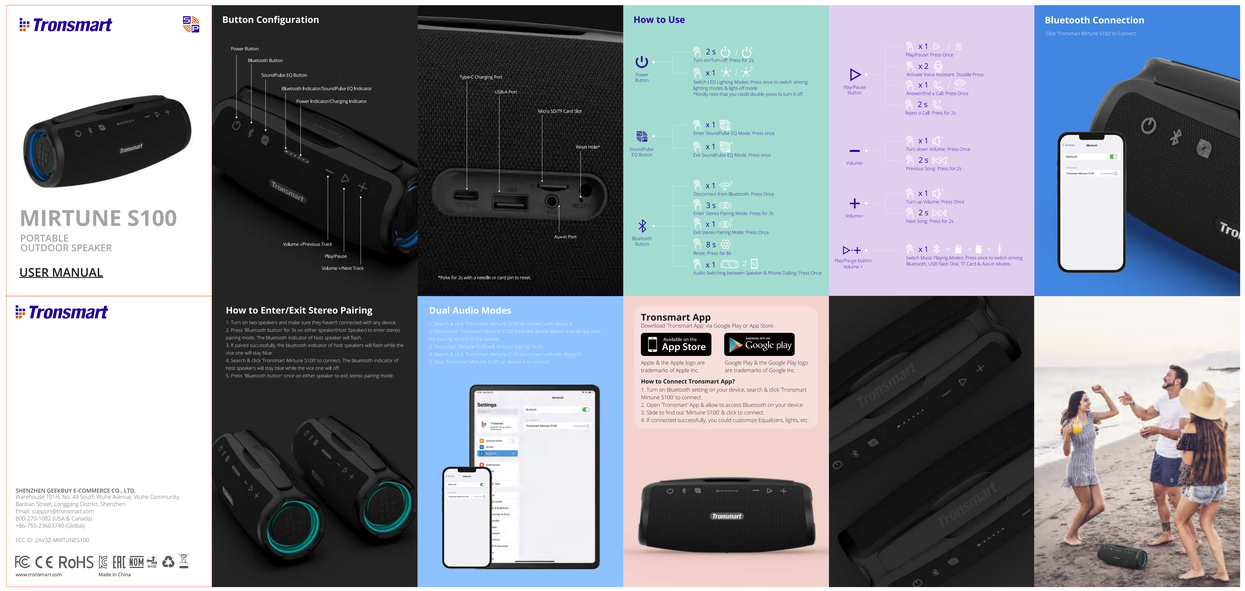

English
Thank you for purchasing the Tronsmart Mirtune S100 Portable Outdoor Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: support@tronsmart.com.

Package Contents
• 1 x Tronsmart Mirtune S100 Portable Party Speaker
• 1 x Type-C Cable
• 1 x User Manual
• 1 x Lot Warranty Card

USB-A Power Bank Function
This speaker carries a USB charge-out function that will automatically detect your device and begin to charge it when the charging cable is plugged into the USB-A port under powering-on mode.

Stereo Mode
Stereo Mode: This speaker with your non-Bluetooth device via the 3.5 mm audio jack (cabletel supplied).
Note: After plugging in an audio cable, the speaker will automatically switch to Aux-in mode.

TF Card Slot Mode
This speaker can play songs from your TF/Micro SD card when plugging the unit into the slot.

USB Flash Drive Mode
This speaker will play the music from your USB drive when plugging into the slot.

Auto Power Off
This speaker will power off automatically after 30 minutes if it does not pair with any device through Bluetooth or does not receive any operating. When no Bluetooth, the speaker will power off automatically as well.

Specifications

Model	Mirtune S100
Color	Black, Blue
Bluetooth Version	5.3
Version Bluetooth	5.3
Audio Code	SBC
Compatible Bluetooth	A2DP/AVRCP/HSP/HFP
Distance de Transmission	Plus de 10 mètres
Distancia de Transmisión	10 m
Gamme de portée Sans fil	Jusqu'à 10 mètres
Rango de Alcance de Conexión	Hasta 10 metros
Raggio di copertura	Fino a 10 metri
Reichweite	Bis zu 10 Meter
Range de Transmissão	Até 10 metros
Bereik	Tot 10 meter
Räckvidd	Upp till 10 meter
Rækkevidde	Op til 10 meter
Räckvidd	Upp till 10 meter
Rozsah	Až 10 metrů
Zasięg	Do 10 metrów
Hatótávolság	Akár 10 méter
Rozsah	Až 10 metrů
Rozsah	Až 10 metrů
Rozsah	Až 10 metrů