图号

图　号：
版　本：V1 (认证使用)
日　期：2021-04-07

250.00 mm

170.00 mm

Manufacturer: Foshan Baby Bear Technology Co.,Ltd
Address: No. 11-3, Xing Ye Zhong Road, Changjiao Residential Committee, Lunjiao, Shunde, Foshan, Guangdong, China.

Baby Swing User Manual

BB007

IMPORTANT! KEEP IT FOR FUTURE REFERENCE.

Before installing and using, please follow the instructions carefully to ensure the safety of your baby.

Product Contents

Product Introduction ---------- 2
Product Specification ---------- 2
Product Features ---------- 2
Parts Instruction ---------- 3
Installation ---------- 4
For Base Bracket ---------- 4
For Pillow and Seat Cover ---------- 4
For Canopy With Toys ---------- 5
Safety Belt Instruction ---------- 5
User Instruction ---------- 6
Button Description ---------- 6
Motion Lock ---------- 6
Remote Control ---------- 7
Power Supply ---------- 7
WARNING ---------- 7
WARNING ---------- 8
Clean & Maintenance ---------- 9
Clean ---------- 9
Maintenance ---------- 9
Troubleshooting ---------- 9
After-sales Service ---------- 10

After-sales Service

Thank you for purchasing our products. For your due rights and interests, please take good care of the warranty card. If there is any quality problem, please contact with the distributor.

Note:
1. From the purchase date, normal users can enjoy one year's free maintenance service for the circuit board components and one year's free maintenance service for the whole machine.
2. Other consumables and accessories are not covered by the warranty.
3. Please show the warranty card and purchase certificate or invoice to be valid.

Non-warranty Coverage:
1. Improper use
2. Loss or damage of warranty card
3. Damage caused by natural disasters and other irresistible forces

Please keep the warranty card well.

Warranty Card

Product Model		Customer Name	
Product Name		Customer Phone Number	
Purchasing Date		Fault Description	
Customer Address			

Clean & Maintenance

Clean

1. Clean the base bracket and seat frame with wet cloth and a mild detergent. Dry thoroughly then. Please do not use corrosive cleaner.
2. Removable and washable fabric
- Seat fabric: Clean it with wet cloth and a mild detergent, and dry it.
- Canopy: Take it off and put a little cleaner, wash it gently by hands. Rinse it with clean water, and then hang it to dry, avoiding exposure to the sun.
- Pillow: Tear the Velcro off and take the pillow off. Put a little cleaner, wash it gently by hands, and then rinse it with clean water. Hang it avoiding sun exposure.

Maintenance

1. Please check this baby swing regularly. Make sure of each part is well connected and well installed. Stop using for poor connection and correct/install it again if necessary.
2. This product contains electronic components, which shall not be used in water or in a humid environment. Please ensure the product is dry, and store it in a cool and dry place, avoiding direct sunshine for a long time.

Troubleshooting

Fast self-inspection solution below

No.	Trouble	Solution
1	Not energized	1. Check whether the adapter and DC cable are firmly connected. If loose, connect them firmly. 2. DC cable may be damaged. Please contact customer service to replace DC cable.
2	The power lamp keeps flashing / high voltage alarms	Use matchable adapter with an output voltage of 5V and 1A
3	Motion lock stuck	Check the motion lock. Pull it up to unlock the seat frame.
4	Overstring/Strike	Power off and restart it again

Note: For other trouble, please contact our customer service for help.
Never disassemble and repair the swing by yourself.

Product Introduction

Product Specification:

Product Name :	BABY SWING CHAIR
Model Number :	BB007
Input Voltage :	100-240V~
Output Voltage:	5V⎓
Output Current:	1A
Frequency:	50/60Hz
Application :	Children up to a weight of 9 kg or unable to sit up unaided
Main Material :	100% polyester fiber, aviation aluminum base bracket

Product Features:

1. Swinging from side to side, with five gears mimicking human movement.
2. Protecting baby's spine design on the basis of human engineering.
3. Power supplied by safe 5V low voltage adapter.
4. One-button installation and disassembly, simple and convenient to use.
5. Seat cover made of environmental-friendly super soft fabric and non-textile, cozy, breathable and safe & removable and machine washable seat fabric.
6. Made of aluminum alloy base with light weight and strong hardness guaranteeing safety for baby.
7. Controlled by touching screen or remote controller, easy to operate
8. With motion lock and safety belt for protection.
9. With built-in soft nature sounds & Bluetooth enabled for music.

Parts Instruction

Make sure that all of the following parts listed are included in the box. If any part is missing, please contact us before operating. No tools are required for assembly.

1) Plush toy*2
2) Pillow*1
3) Mosquito net with canopy*1
4) Seat cover
5) Remote controller
6) Adaptor*1, 2 meters of USB cable*1
7) Seat frame*1
8) Base bracket*1

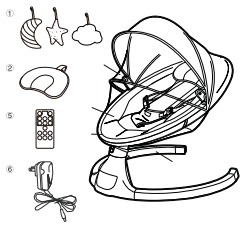

⚠ WARNING

1. Never leave the child unattended.
2. Do not use this product once your child can sit up unaided or weighs more than 9 kg.
3. This product is not intended for prolonged periods of sleeping.
4. Never use this product on an elevated surface (e.g. a table).
5. Always use the restraint system.
6. To avoid injury, ensure that children are kept away when unfolding and folding this product.
7. Do not let children play with this product.
8. Do not move or lift this product with the baby inside it.
9. This product does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.
10. Do not use the product if any components are broken or missing.
11. Do not use accessories or replacement parts other than those approved by the manufacturer.

FALL and STRANGULATION HAZARD! Babies have suffered head injuries
Falling from swings and have strangled in straps
- ALWAYS use restraints & Adjust to fit snugly.
- STOP using product when infant attempts to climb out (approximately 9 months)
- Stay near and watch infant during use. This product is not safe for unsupervised use or unattended sleep.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference; and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonably protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.
Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Remote Control

Power on/off		Play/pause	
Time setting		Previous song	
USB/music		Next song	
Volume up		Volume down	
① ② ③ ④ ⑤		Five swing gears	
Sleep mode: press to enter sleep mode/gear 2 with timer 15 minutes			
Stop swing: press to stop swing, press any gear key to resume swing.			



Power Supply

1. DC plug can be inserted into 100-240V ~ 50 / 60Hz AC power supply.
2. Adapter output parameters: voltage is 5V and current is 1A.

P.S. Battery compartment is not included in all models. Please confirm with your local dealer for full details.

Batteries Installation

1. Find the battery compartment location firmly, which is with screw printing battery icon. See figure ①
2. Unscrew the battery compartment and remove the battery cover. See figure ②
3. Install the batteries into the batteries. See figure ③
4. Put the battery cover back and screw it tightly. See figure ④

- Old and new batteries should not mixed
- Alkaline, standard (carbon-zinc) or rechargeable nickel-cadmium batteries should not be mixed
- Remove batteries before putting swing into storage for a prolonged period of time

⚠ WARNING

- **The power terminals must not be short-circuited.**
- **Do not use adapters other than those supplied with this product to power the product.**
- **Keep children away from working adapter.**
- **Check the adapter cable connection regularly.**

Installation

For Base Bracket

Assembling: Put the frame in the base with "⊓" shape components aligned.
Disassembling: Pull out of the sheet metal and pull up the seat frame.



For Pillow and Seat Cover

Installation: Put the seat cover on the seat frame and fasten the snap button on the back.
Attach the pillow to the top retaining ring of the seat frame and press the Velcro of the pillow.
Removing: Pull off the Velcro to detach the pillow and unfasten the snap button to remove the seat cover.



For Canopy With Toys

Installation: Attach the toys on canopy and fasten the clasps to the pipe of the seat frame, and attach mosquito net to the bottom of the seat frame.
Dismanting: Put out of the clasps to remove the canopy.

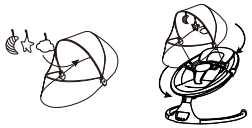

Safety Belt Instruction

Place the baby into the swing and let his legs across both sides of the crotch support restraint, then turn the crotch support cover up. Adjust the seat belt on both sides and buckle up.
Note: Be sure to use the safety belt correctly when your baby lie on the baby swing for the safety of your child. Buckle off when you take your baby out of swing.

User Instruction

Button Description

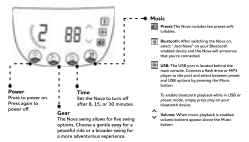

Motion Lock

Push the motion lock down to lock the seat frame and stop movement.
Pull the motion lock up to unlock the seat frame and the baby swing will swing again.

借（通)用件登记
描　图
校　描
旧底图总号
签　字
日　期

标记	处数	更改文件号	签 字	日期

设 计		标准化	
校 对		批 准	
审 核			
工 艺		日 期	

佛山市熊宝宝科技有限公司

阶段标记			版本	重 量	比 例
S	A	B	A1		1:1
共 张				第 张	

产品机型	BB007F
名称	认证英文说明书
材料	80g双胶纸
图号	