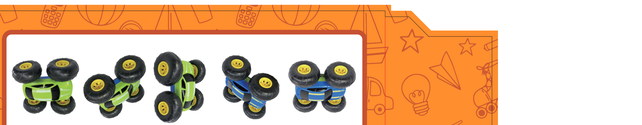

TOY BOX

REMOTE CONTROL STUNT VEHICLE

TOY BOX

49MHZ

FLIP ACTION

DOUBLE SIDED

TOY BOX

LED LIGHTS

360° ROTATION

TOY BOX

27MHZ

$5

2x AA
(INCLUDED, CONFIRM)

4x AAA
(INCLUDED, CONFIRM)

BATTERIES SOLD SEPARATELY

REMOTE CONTROL STUNT VEHICLE

AGE 5+

BATTERY REPLACEMENT:
To replace batteries refer to the following directions:

VEHICLE
1. Turn the power switch to the OFF position.
2. Use a Phillips screwdriver to loosen and remove the battery compartment door as shown.
3. Remove old batteries and replace with 4 new 1.5V "AAA" batteries.
4. Replace the battery compartment door and tighten the screw.

REMOTE CONTROL
1. Use a Phillips screwdriver to loosen and remove the battery compartment door as shown.
2. Remove old batteries and replace with 2 new 3.15V "AA" batteries.
3. Replace the battery compartment door and tighten the screw.

BATTERY CAUTION:
- Alkaline batteries are recommended.
- Do not mix old and new batteries. Do not mix old and new batteries or mix battery types (alkaline, standard or rechargeable batteries) or different brands.
- Do not use rechargeable batteries, Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- If batteries are loose, bend out the contacts for a tight fit.
- Remove batteries when the toy is not in use.
- Do not use if battery compartment cover is loose or missing. Keep battery compartment cover secured with screw.
- Exhausted batteries are to be removed from toy. Immediately and safely dispose of any used batteries. Do not burn or short-circuit batteries. Do not try to recharge non-rechargeable batteries.
- When toy is not in use for an extended period of time, remove batteries to prevent possible leakage and damage to the unit.
- Check the product periodically for signs of damage to electrical parts; do not play with product until damage has been properly assessed.

If the unit malfunctions, please remove the batteries for one minute and reinstall again.
PLEASE REMOVE BATTERIES AND DISCARD PROPERLY.
MAKE SURE THE BATTERIES ARE INSERTED CORRECTLY AND INSERTED CORRECTLY AND ALWAYS FOLLOW BOTH THE PRODUCT AND BATTERY MANUFACTURER'S INSTRUCTIONS.
ALL BATTERY INSTALLATION, REMOVAL AND DISPOSAL OF BATTERIES ON THE EQUIPMENT MUST ALWAYS BE DONE BY ADULT.
Toys as well as R/C are fun products unless battery deep is ensuring! Batteries are small objects and could be ingested. Keep all batteries away from small children.
Don't forget to remove batteries from the vehicle and remote control when you have finished operating your vehicle.

Remove all packaging before giving toy to child. Please keep packaging for future reference. Color, contents and designs may vary.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This transmitter must not be co - located or operating in conjunction with any other antenna or transmitter.

Alkaline batteries are recommended.

VEHICLE

USE 4 x 1.5V "AAA" BATTERIES NOT INCLUDED

REMOTE CONTROL

USE 2 x 1.5V "AA" BATTERIES NOT INCLUDED

49MHz

HOW TO OPERATE	
Forward	Push the left control stick upwards.
Backward	Push the left control stick downwards.
Spin	To spin counterclockwise, keep pushing the left control stick to the left. To spin clockwise, keep pushing the right control stick to the right.
Turn left forward	Push the left control stick upwards while pushing the right control stick left.
Turn right forward	Push the left control stick upwards while pushing the right control stick right.
Turn left and back	Push the left control stick downwards while pushing the right control stick left.
Turn right and back	Push the left control stick downwards while pushing the right control stick right.

CAN / MAY LIE
CAN / MAY LIE

Do not put in trash. Recycle or manage as hazardous waste.

1 0 0 7 5 3 4 6 4 7 5 3 3 1 1 7 8 6

NOTES-WHEN-THE-ORDER
DISTRIBUTED BY:
GREENBERG TRADING GLOBAL, INC
500 KELLY PARKWAY,
CHESAPEAKE, VA 23320
MADE IN CHINA