名称：蓝悦A64说明书(第二版） 材质：128G双铜+风琴折 尺寸：展开：512*85MM 折好：64*85MM 料号：C.006.0054

A64
便携蓝牙音箱

使用说明书
使用前请阅读使用说明书

产品规格

蓝牙版本：V5.3
传输距离：≥10M
电池容量：500mAh
使用时间：约3h
充电时间：约2h
额定输入：5V ⎓ 500mA

物品清单

音箱 x 1　　说明书 x 1
充电线 x 1　　挂绳 x 1

产品使用注意事项

(1)除说明书特殊标示的操作方式以外，请勿尝试拆卸或更换产品内的任何零件。
(2)请勿将产品放入水或其他任何液体中，此产品非防水设计。
(3)如果有任何液体不小心进入产品内时，请立即断开连接并拆开此产品。
(4)为避免触电，请在安装或卸载产品时，确保手上没有达水。
(5)请勿将此产品放置于热源附近或直接暴露在火源附近。
(6)请勿将本产品放置在有强大电磁力的环境中，否则会导致产品故障。

按键与功能

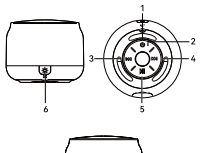

1.开关机键，长按开机或关机，短按模式切换，蓝牙、TF、FM、AUX等模式
2.指示灯：开机后蓝灯闪烁，连接成功后灯常亮
3.上一曲/音量减：短按音量减，长按为上一曲
4.下一曲/音量加：短按音量加，长按为下一曲
5.播放/暂停：短按为播放/暂停音乐
6.灯光键：短按灯光切换，长按开关灯光
7.充电接口:插入充电线接通电源可对机器充电
8.TF卡：插入TF卡后可播放里面的音频文件
9.电源按开灯：插入充电线接通电源后指示灯红灯亮，充满后灯灭
10.AUX：外接3.5MM 音源设备播放音频文件

关机：当不使用音箱时，长按 ⏻ 键关机，防止电能损耗。低电量报警及自动关机功能：当电池电量低于10%时，音箱会发出提示音，此时应该及时给音箱充电，当电量低于3%时，机器将会自动关机。

1.开关机：长按 ⏻ 键5秒开机，提示音响起，蓝色灯快闪。
● 打开蓝牙设备设置，搜索蓝牙连接名"A64"点击 连接，蓝牙连接成功提示音响起，蓝灯长亮；再次使用此音箱时，开启音箱与智能设备蓝牙，会自动回连。
● 蓝牙自动连接功能：蓝牙连接成功后，当超过有效距离时会自动 断开，待回到有效距离后蓝牙音箱和智能设备又会自动连接。

二.指示灯状态
● 蓝牙模式：已连接状态,蓝灯长亮,播放音乐时蓝灯慢闪。
● 配对状态：蓝色指示灯快闪。
● 充电指示：充电红灯亮起,充满红灯灭。

常见问题及解决方案

故障	解决方案
多次连接配对不成功	关闭音箱重新开机或在手机上关闭蓝牙再打开
音乐播放出现断续	检查你离音箱的位置距离音箱与手机之间有障碍物
播放无声	检查音箱是否静小声
无法开机	音箱内置电池放完再充
电源灯不亮	检查充电线口是否缺好

产品操作说明

一.蓝牙使用方法
● 长按 ⏻ 键约3秒开机，提示音响起，蓝色灯快闪。
● 打开蓝牙设备设置，搜索蓝牙连接名"A64"点击 连接，蓝牙连接成功提示音响起，蓝灯长亮；再次使用此音箱时，开启音箱与智能设备蓝牙，会自动回连。
● 蓝牙自动连接功能：蓝牙连接成功后，当超过有效距离时会自动 断开，待回到有效距离后蓝牙音箱和智能设备又会自动连接。

二.指示灯状态
● 蓝牙模式：已连接状态,蓝灯长亮,播放音乐时蓝灯慢闪。
● 配对状态：蓝色指示灯快闪。
● 充电指示：充电红灯亮起,充满红灯灭。

产品中有害物质名称及含量

产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溶联苯 (PBB)	多溶二苯醚 (PBDE)
印刷电路板组件	O	O	O	O	O	O
外观零件和结构件	O	O	O	O	O	O

本表格依据SJ/T 11364的规定编制。
O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572规定的限量要求。
表单标记"X"的部件，皆因全球技术发展水平限制而无法实现有害 物质的替代。

印刷电路板组件*包括印刷电路板及其零部件、电子元器件等，根据产品型号不同，您所购买的产品可能不会含有以上所有部件

在中华人民共和国境内销售的电子电气产品必须标识此 标志，标志内的数字代表在正常的使用状态下的产品的环保使用期限。

保修声明

免责声明
本使用手册是没有任何形式的担保、立场表达或其他暗示。
本使用手册所报到的产品、规格及信息仅供参考，内容亦会随时更新于网页，恕不另行通知。

保修声明:
既本文件附随的产品制造商不保证，如产品在您购买日起十二（12）个月（"保修期"）内，在正常使用情况下因质量问题发生损坏，能修理的，免费修理，但厂家确认无法修理的，免费更换；修理或更换后的产品，在剩余保修期（最短不少于30天）内继续享有保修。购买日以购售发票日期为准，如无法确定购买日，则保修期自产品生产日期起按十三（13）个月计算。

如申请保修，请先收电产品随新热线，并按取印指示的方式执行。申请保修时，您需要提供发票，完整和清晰填写的有效销售发票。

以上保证不适用于下列情况:
1.超过三包有效期的;
2.涂改保修卡、产品编码与产品本体不符;
3.因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;
4.因不可抗力（如地震、战争、火灾等）或意外导致的故障或损坏;
5.拔除、烧刻或受力过大而损坏;
6.因非授权厂商自行的取线或拆卸;
7.任何因尖锐物体造成的损坏;
8.有烧毁或水浸迹象的产品;
9.因雷击而导致的损坏;
10.产品正常使用过程中发生的老化、脱色、磨损、破裂和其他因素。

保修声明

11.如产品原有标识标签被更改或损毁，本保证将失效。
产品及随附资料的外观和功能均以实际不属于保证范围，您应在接收产品时 当场检验并对任何不符提出异议。

以上保证是我们因产品做出的全部保证，且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的海费者权利。

TWS模式
1.打开两台蓝牙音箱，蓝牙音箱进入自动配对状态,此时指示灯闪。
2.双击任意一台音箱的开关机键，两台音箱进入对联状态。
3.手机打开蓝牙功能，搜索并连接音箱,连接成功后，两台音箱可以同步播放。
注意：蓝牙音箱模式有记忆功能，再次开机会自动对联,如果需要断开TWS模式，再次双击开关机键，TWS连接即可断开

制造商：东莞市赤必成电子科技有限公司
地址：东莞市石排镇横心西坑路54号
服务热线：400-8922-892

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

A64
Bluetooth Speaker

User manual
Please read all instructions carefully and retain for future use

Specification

Bluetooth Version　: V5.3
Transmission distance　: ≥10M
Battery capacity　: 500mAh
Usage Time　: About 3h
Charging Time　: About 2h
Rated input　: 5V ⎓ 500mA

In the box

Microphone x 1　　Manual x 1
Charging Cable x 1　　Lanyard x 1

Precautions for product use

(1)Don't attempt to disassemble the unit and change any part, except there is operation method mentioned in the manual.
(2)Don't expose the unit to liquid, moisture or humidity, since it is not a waterproof product.
(3)Disconnect the unit with your Bluetooth device and move it to the safe area if the liquid get inside the unit.
(4)Don"t assemble or disassemble the unit to avoid electric shock, if there is water on your hands.
(5)Don't expose the unit to extremely high temperature or dispose of the unit in fire as it will result in an explosion.
(6)Don't place the unit in an electromagnetic interference environment to avoid malfunction.

Buttons and functions

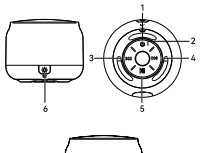

1. Turn on/off key, long press to turn on or off, short press to switch mode, Bluetooth, TFFM, AUX and other modes
2. Indicator light: the blue light flashes after power on, and the light is always on after successful connection
3. Previous song/volume decrease: Press briefly to decrease the volume, and long press to decrease the volume
4. Next song/volume increase: short press to increase the volume, long press to increase the next song
5. Play/pause: Press briefly to play/pause music
6. Light key: short press to switch the light, long press to switch the light
7. Charging interface: insert the charging line to connect the power supply to charge the machine
8. TF card: audio files can be played after inserting TF card
9. Power indicator: the red indicator lights up when the charging line is plugged in and the power is turned onRear light off
10. AUX: External 3.5MM audio source device plays audio files

Shut down: When the speaker is not in use, press and hold the "⏻" key to shut down to prevent power loss.Low battery alarm and automatic shutdown function: When the battery power is less than 10%, the speaker will emit a beep. At this time, the speaker should be charged in time. When the battery power is less than 3%, the machine will automatically shut down.

Operation Instruction

1.How to use Bluetooth
● Press and hold the "⏻" button for 3 seconds to turn on the device, the sound will sound, and the blue light will flash quickly.
● Open the Bluetooth device settings, search for the Bluetooth connection name "A64" and click connect, the Bluetooth connection is successful and the sound will turn on and the blue light will be on; when you use the speaker again, turn on the speaker and the smart device Bluetooth, it will automatically connect back.
● Bluetooth automatic connection function: after the Bluetooth connection is successful, it will automatically disconnect when the effective distance is exceeded, After returning to the effective distance, the Bluetooth speaker and the smart device will automatically connect again.

2.Indicator status
● Bluetooth mode: connected state, the blue light is on, and the blue light flashes slowly when playing music.
● Pairing status: the blue indicator light flashes quickly.
● Charging indication: the charging red light is on, the full red light is off.

Common problems and solutions

Malfunction	Solution
Malfunction	Turn off the speaker and turn it on again. Or turn off the Bluetooth function of the phone and turn it on
Staccato	Whether the connection distance is out of range or there is an obstacle between the speaker and the phone
Play silently	Check if the speaker is the smallest
Can not load	Whether the lithium battery of the speaker is charged
Power light is not on.	Check whether the charging port is plugged in

Name and content of hazardous substances in products

Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
PCBA components	O	O	O	O	O	O
Structural components	O	O	O	O	O	O

This form is compiled in accordance with SJ/T 11364.
O:Indicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit required by GB/T 26572.
X:Indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds The limit requirements specified in GB/T 26572.
The parts marked with "X" on the form are all harmful due to the limitations of global technological developments, Substitution of substitutes.

Printed circuit board components including printed circuit boards and their parts, electronic components, etc,and depending on the product model the switch you purchased may not contain all the above components.

Electronic and electrical products sold in the People's Republic of China must mark this LOGO, the number in the logo represents the product under normal use Environmental protection use period.

Warranty statement

Disclaimer
This user manual does not have any form of guarantee, position expression or other implication,The mentioned products, specifications and information are for reference only, and the content will also be updated on the webpage at any time, without additional line notification.

Warranty statement:
The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired free; if the manufacturer confirms that it cannot be repaired, free replacement; repaired or replaced product, Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days), Purchase date by sale The ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13 Months calculation, If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:
1.The validity period of the three packs is exceeded;
2.Alteration of the warranty card and product code does not match the product body;
3.Causes caused by misuse, abuse or improper transportation, use, maintenance or storageimpaired or damaged;
4.Failure or damage caused by force majeure (such as earth quake, war, fire, etc.) or accident bad;
5.The zipper and buckle are damaged due to excessive force;

Warranty statement

6.Disconnection or tearing caused by excessive load;
7.Any damage caused by sharp objects;
8.Products with signs of burning or flooding;
9.Damage caused by unauthorized disassembly.
10.Aging, discoloration, abrasion, rupture and other losses occurred during normal use of the product.

11.If the original identification label of the product is changed or damaged, this guarantee will become invalid.
The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should Check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

TWS
1. turn on the two Bluetooth speakers, the Bluetooth speakers will enter the automatic pairing state, and the indicator will flash.
2. double click the power button of any speaker, and the two speakers will enter the pairing status.
3. turn on the Bluetooth function, search and connect the speakers, After the connection is successful, the two speakers can play synchronously.
Note: the Bluetooth speaker mode has a memory function, and it will be connected automatically when you turn it on again, If you need to disconnect the TWS mode, double-click the power button button again to disconnect the TWS connection

Manufacturer: Dongguan chibicheng Electronic Technology Co., Ltd
ADD: Room 101, Building 2nd, NO.54 XiKeng road, Pann village, Shipai town,Dongguan Guangdong,China
Service Hotline: 400-8922-892

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2AYYT-A64