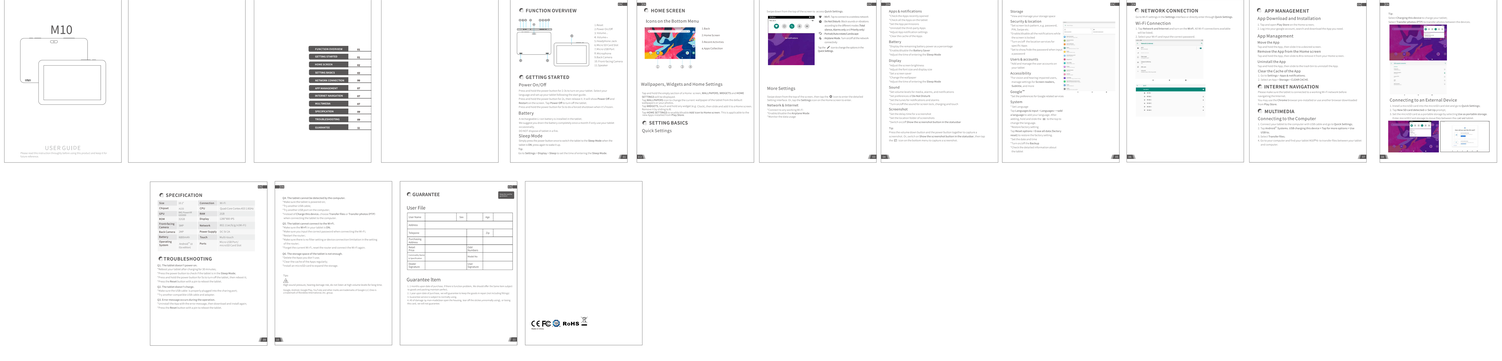

M10

USER GUIDE

Please read this manual carefully before using the product and keep it for future reference.

FUNCTION OVERVIEW 03
GETTING STARTED 03
HOME SCREEN 04
SETTING BASICS 05
NETWORK CONNECTION 06
APP MANAGEMENT 07
INTERNET NAVIGATION 07
MULTIMEDIA 07
FUNCTION DEMO 08
SPECIFICATION 09
TROUBLESHOOTING 09
GUARANTEE 10

FUNCTION OVERVIEW

1. Reset
2. Power On/Off
3. Volume+
4. Volume-
5. Headphone Jack
6. Micro SD Card Slot
7. USB Port (Data)
8. USB Port (Power)
9. Rear Camera
10. Charging Indicator
11. Speaker

GETTING STARTED

Power On/Off

Long-press the power button for 3 seconds to turn on tablet. Select your language and follow on-screen instructions to complete the initial setup.

Press and hold the power button for 3 seconds, in each pop-up **Power off** and **Restart** options, tap **Power off** to shut down the tablet.

Press and hold the power button for 10 seconds to enable or disable airplane mode.

Battery

The tablet comes with a built-in rechargeable lithium-ion battery. For optimal performance, fully charge the battery before using it for the first time.

Charge the tablet using the provided USB-C cable and a compatible power adapter.

Sleep Mode

Briefly press the power button once to put the tablet in the **Sleep Mode** (turn the screen off). Briefly press again to wake it up.

Tip:

Go to **Settings** > **Display** > **Sleep** to set the time of entering the **Sleep Mode**.

HOME SCREEN

Icons on the Bottom Menu

1. Back
2. Home
3. Recently Apps
4. Dropped Notifications
5. Screen Orientation

Wallpapers, Widgets and Home Settings

Tap and hold the blank space of the Home screen, **Wallpapers**, **Widgets** or **HOME SETTINGS** pop-up displayed.

In **Wallpapers**, you can change the current wallpaper of the Home Screen to default or gallery wallpaper.

In **Widgets**, you can add frequently used widgets to Home Screen and set the widgets' size and position.

In **HOME SETTINGS**, you can set the Home Screen layout, enable **Lock Home Layout** to prevent accidental changes, and enable **Hide apps in Home screen**. This is applicable to the app drawer.

SETTING BASICS

Quick Settings

Swipe down from the top edge of the screen, swipe up to **Quick Settings**.

- **Wi-Fi**: Tap to connect to a nearby network.
- **Bluetooth**: Tap to pair with Bluetooth devices.
- **Screenshot**: Tap to capture a screenshot. Press **Volume-Down** and **Power** simultaneously, **Screenshot** and **Screen recording** options appear. Tap **Screenshot** to capture a screenshot.
- **Screen Rotation**: Tap to lock screen rotation.
- **Airplane mode**: Tap to enable airplane mode.

More Settings

Tap **Settings** icon in the pop-up Quick Settings.

Network & Internet

- Tap **Wi-Fi** to connect to a Wi-Fi network.
- Tap **Hotspot & tethering** to share the tablet's mobile data connection with other devices.

Apps & notifications

- Tap **See all apps** to view all installed apps.
- Tap **App permissions** to manage app permissions.
- Tap **Special app access** to manage special app permissions, such as **Install unknown apps**, **Display over other apps**, **Do not disturb access**, and **Modify system settings**.
- Tap **Notification access** to manage app notifications.

Battery

- Tap **Battery** to view battery usage and enable **Battery Saver**.

Storage

- Tap **Storage** to view storage usage.

Passwords

- Tap **Passwords** to manage saved passwords.

Privacy

- Tap **Permission manager** to manage app permissions.
- Tap **Clipboard** to view recent clipboard data.

Location

- Tap **Location services** to manage location permissions.

Sound

- Tap **Volume** to adjust media volume.
- Tap **Do not disturb** to enable/disable silent mode.

Screenshot

- Tap **Screenshot** to enable/disable screenshot function.
- Tap **Screen recording** to set recording parameters.

Tip

- Tap **Tip** to enable/disable Quick Tip and Screenshot Shortcut together for quicker screenshots. Tap **Quick Tip** and **Show this screenshot/Edit/Share** in **Tips and Feedback**, then tap the floating icon to capture a screenshot.
- Tap **Edit** to edit the screenshot and save it as a screenshot.

Storage

- Tap **Storage** to view storage usage.

Security & Location

- Tap **Screen lock** to set a lock screen password.
- Tap **Find my device** to enable/disable Find My Device.
- Tap **Google Play protect** to enable/disable Google Play protect.
- Tap **Location services** to manage location permissions.
- Tap **Location services** to manage location permissions.
- Tap **Location services** to manage location permissions.
- Tap **Location services** to manage location permissions.

Users & accounts

- Tap **Google** to manage Google accounts.

Accessibility

- Tap **Accessibility** to enable/disable accessibility features.
- Tap **Text-to-speech output** to enable/disable TalkBack.

Google

- Tap **Google** to manage Google services and settings.

System

- Tap **Language** to set the system language.
- Tap **Keyboard** to set keyboard.
- Tap **Date & time** to set the date and time.
- Tap **Reset options** to reset network settings, app preferences, or factory data.
- Tap **System update** to check for updates.

About tablet

- Tap **About tablet** to view device information.

NETWORK CONNECTION

Go to **Settings** > **Network & Internet** and turn on the **Wi-Fi**, tap Wi-Fi connections available nearby to connect.

Wi-Fi Connection

1. Turn **Network and Internet** and turn on the **Wi-Fi**, tap Wi-Fi connections available nearby to connect.
2. Enter password, tap **Connect** and wait for connection.

Hotspot

Tap **Hotspot & tethering** > **Wi-Fi hotspot** to share mobile data connection with other devices.

APP MANAGEMENT

App Download and Installation

1. Tap on Google **Play Store** and log in to Google account.
2. Tap the app, google account, search and download the app you need.

App Management

Go to **Settings** > **Apps** to manage the installed apps.

Move the App

Tap and hold the app, drag it to the desired screen.

Remove the App From the Home screen

Tap and hold the app, drag it to the remove of your home screen.

Uninstall the App

Tap and hold the app, drag it to the uninstall icon or uninstall. Enjoy.

Clear the Cache of the App

1. Go to **Settings** > **Apps** > **See all apps**.
2. Select an app > **Storage** > **CLEAR CACHE**.

INTERNET NAVIGATION

Please ensure your device is connected to a stable Wi-Fi hotspot before navigating the internet.

Tap on the **Chrome** icon to open your preinstalled or any another browser downloaded from Play Store.

MULTIMEDIA

Connecting to the Computer

1. Connect the tablet to a computer via a USB cable.
2. Tap **Settings** > **Connected devices** > **USB** > **Charging this device**, tap **File transfer** > **OK**.
3. Open **Transfer files**.
4. Go to your computer and find your tablet MTP/PTP, to transfer files between your tablet and computer.

Connecting to an External Device

1. Connect your external device to the tablet via an OTG cable.
2. Go to **Settings** > **Connected devices** > **USB** > **Charging this device**, tap **File transfer**.
3. Tap **Settings** > **Storage** > **Storage manager** > **Internal shared storage**, tap the external storage device, and manage the files as needed.

SPECIFICATION

Chip	Unisoc T615 octa-core	**Connection**	Wi-Fi
Memory	4GB+128GB	**Ports**	1*USB-C (Data and Charge), 1*3.5mm
GPU	Mali-G57 MP1	**SIM**	Nano SIM
OS	Android 13	**Display**	1280*800 px
Front/Rear Camera	2MP	**Network**	802.11a/b/g/n/ac/6
Rear Camera	13MP	**Power Supply**	5V 3A
Battery	6000mAh	**Touch**	Multi-touch
Dimensions	245.5*167.5*8.9mm	**Ports**	1*USB-C (Data and Charge), 1*3.5mm
Speaker	Dual speaker		
Weight	480g		

TROUBLESHOOTING

Q1. The tablet doesn't power on.

Please charge the tablet for at least 30 minutes.

Press the power button for 10 seconds to force the tablet to restart.

If the tablet still fails to power on, contact the after-sales team.

Press the **Reset** button with a pin to reboot the tablet.

Q2. The screen is dim.

Adjust the screen brightness in **Settings** > **Display** > **Brightness**.

Ensure the charging cable is not damaged and the charging port is clean.

Press the **Reset** button with a pin to reboot the tablet.

Q3. The tablet keeps restarting or shutdown.

Ensure the battery is fully charged.

Check for updates in the Play Store app or Google Play.

Press the **Reset** button with a pin to reboot the tablet.

Q4. The tablet cannot be detected by the computer.

Ensure the USB cable is connected.

Try another USB cable.

Try another USB port on the computer.

Ensure the tablet is set to **Settings** > **Connected devices** > **USB** > **Transfer files** (MTP) when connecting the tablet to the computer.

Q5. The tablet cannot connect to the Wi-Fi.

Ensure the Wi-Fi is enabled in **Settings**.

Make sure you select the correct password when connecting to the Wi-Fi.

Restart the router.

Make sure there is no other setting or device connection limitation in the setting.

Q6. The tablet cannot connect to Bluetooth.

Ensure the pairing mode is enabled on the Bluetooth accessory.

Q7. The storage space of the tablet is not enough.

Delete unused apps or files to free up space.

Clear the cache of the Play Store app.

Install an microSD card to expand the storage.

Tips:

Avoid extreme temperatures, harsh environments, etc. as these can cause irreversible damage to the tablet.

Regular cleaning of the charging port, ensuring a stable power supply, and promptly addressing any issues are crucial for optimal performance and longevity.

GUARANTEE

Warranty Card

User File

Customer Name		Tel:	Age:
Address			
Product			Tel:
Purchasing Date			
Product Model		Product Serial Number	
Consignee Name		Contact Tel:	
Consignee Address			

Guarantee Item

1. Limited warranty for 12 months from the date of purchase.
2. Exclusions include damage caused by improper use, accidents, or unauthorized modifications.
3. Cover upon initial purchase, not applicable to resale. For good or repair not including shipping costs, customer responsible for shipping.
4. Exchange or a refund is available within the first month, for all other issues contact the seller, covering shipping costs for defective products.

CE FC UK RoHS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception,
which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different
from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction