原材料 机乐堂 JR-ZS387 风冷磁吸无线充支架 中英波兰语 说明书
尺寸：65x72mm
材质：105g铜版纸+正反单色印刷+骑马钉

封底　　封面　　封二　　封三

© 2024 Shenzhen Nito Power Source Technology Co., Ltd.
All Rights Reserved / Designed by JOYROOM /
www.joyroom.com / Made in China

JOYROOM

JOYROOM

JOYROOM

User Manual CN EN PL

ZS387 Cooling Fan Magnetic Wireless Car Charger Mount

内页按顺序正背印刷 ---------->

CN 中文 01
EN English 08
PL Polski 15

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.

CN 产品参数

产品型号：JR-ZS387
产品名称：风冷磁吸无线充支架
产品材质：PC+ABS+铝合金
输入：5V ⎓ 2A 9V ⎓ 2A 12V ⎓ 2A
输出：5W/7.5W/10W/15W (MAX)
输入接口：Type-C
产品尺寸：≈66*66*100mm
产品重量：≈105g
适用尺寸：4.7-7英寸

EN PARAMETERS

Model: JR-ZS387
Name: Cooling Fan Magnetic Wireless Car Charger Mount
Material: PC+ABS+Aluminum Alloy
Input: 5V ⎓ 2A 9V ⎓ 2A 12V ⎓ 2A
Output: 5W/7.5W/10W/15W (MAX)
Input port: Type-C
Size: ≈66*66*100mm
Net weight: ≈105g
Applicable phone size: 4.7"-7.0"

PL PARAMETRY

Model: JR-ZS387
Nazwa: Uchwyt magnetyczny z ładowarką bezprzewodową
Material: ABS + PC + aluminium
Wejście: 5V ⎓ 2 A 9 V ⎓ 2 A 12 V ⎓ 2 A
Moc wyjściowa: 5 W / 7.5 W / 10 W / 15 W (maks.)
Złącze wejściowe: Typ C
Rozmiar: ≈66*66*100mm
Ciężar: ≈105g
Pasujące wielkości telefonów: 4,7-7 inch

产品图示

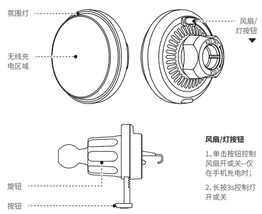

风扇/灯按钮

1、单击按钮控制风扇开或关一仅在手机充电时；

2、长按3s控制灯开或关

配件包

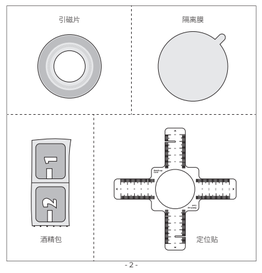

安装步骤

1. 将出风口球头放入螺母内，再插入到支架背部螺栓，拧紧螺母；



2. 出风口钩子使用方法：
按压按钮，伸出钩子勾住出风口叶片，松开按钮，顺时针拧紧旋钮即可；

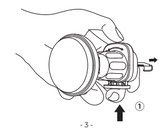



注意：取出出风口钩子时，一定要先逆时针拧松旋钮，再按压按钮

3. 将Type-C充电线插入产品充电口，连接车载充电器接通电源。

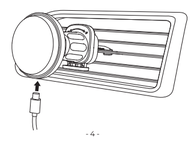

引磁片安装步骤

1. 打开配件酒精包，将手机外壳擦拭干净；

2. 先将透明隔离膜粘贴至手机外壳中心；

3. 再利用定位贴降引磁环贴至手机最中心；

注意：只要确保定位贴上下刻度相等，左右刻度相等，即可将引磁环贴至手机中心。

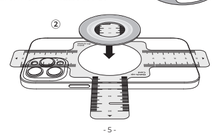

4. 手机靠近无线充支架，磁性吸附，开始充电。

提示：苹果magsafe手机不带壳或者带磁吸壳，可以直接使用；其它手机或者非磁吸壳，请搭配引磁片使用。

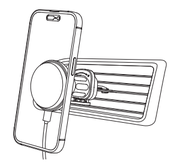

灯显/风扇

通电	氛围灯亮起，风扇启动10s后停止
待机	氛围灯常亮，风扇不启动工作
充电	氛围灯呼吸闪烁，风扇启动工作
异物检测	氛围灯快闪，风扇不启动工作

保修卡

用户姓名：

用户电话：

用户地址(含邮编)：

购机日期：

发票编号：

销售单位名称：

销售单位电话：

销售单位地址(含邮编)：

保修服务说明

A.在正常使用本产品过程中,如果本产品出现非人为损坏的性能故障,自购买之日起,消费者享受免费保修服务。保修期为12个月。

B.有下列情况之一,消费者不能享受免费保修权益:
* 人为损坏;
*超过保修期;
*不能提供有效的购买凭证;
*未按说明书要求使用、维护、保养而造成产品损坏;
*未经授权,擅自拆卸、维修产品,或产品浸水;
*其他不可抗力造成的损坏。

Product diagram

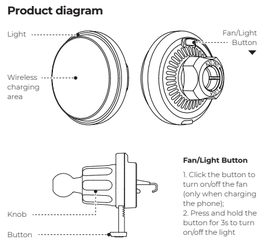

Fan/Light Button

1. Click the button to turn on/off the fan (only when charging the phone);
2. Press and hold the button for 3s to turn on/off the light

Accessory kit

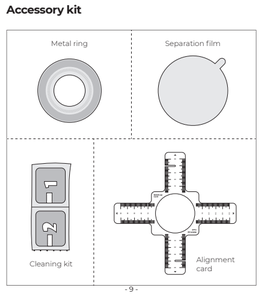

Operation steps (vent hook)

1. Put the ball head into the nut first, then insert it into the socket on the back of the holder, tighten the nut.



2. Clip hook using method: Press the button, extend the hook to hook onto the vent blade, release the button, then tighten the knob clockwise.

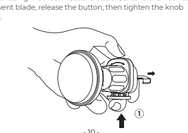



Note: When removing the clip hook, make sure to loosen the knob counterclockwise before pressing the button.

3. Use the Type-C charging cable in the package to connect the holder and the car charger.

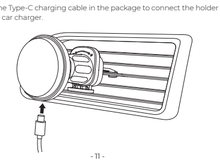

Operation steps (metal ring)

1. Open the cleaning kit, wipe clean the back surface of your phone.
2. Paste the transparent separation film onto the center of the phone back.



3. Paste the metal ring onto the center of the phone back by use of the alignment card.

Note: As long as the upper and lower scales, the left and right scales of the alignment card are equal, the metal ring will be pasted right to the center of the phone.

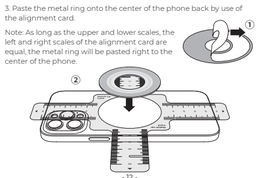

4. Place your phone. It will be securely attached to the charger holder with its auto alignment function.

Reminder: The product can be used directly with iP mag-safe phones as well as magnetic cases. For other phones and cases, a metal ring is required.

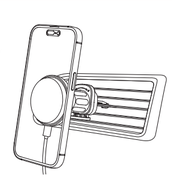

Indicator light/Fan

Power on	Light turns on, the fan works for 10s then stops
Standby	Constant light, the fan doesn't work
Changing	Light breathes, the fan works
FOD	Light flashes quickly, the fan doesn't work

Warranty Card

User Name:

User Tel:

User address (with postcode):

Purchase date:

Invoice No.:

Dealer Name:

Dealer Tel:

Dealer Address (with postcode):

Warranty

A. If there is performance failure on this product and it's not caused by human error, we will provide a 12-month free warranty service for consumers from the date of purchase.

B. Warranty exceptions:
* Human damage;
* Expired the warranty period;
* Failure to provide valid purchase certificate;
* Product damage caused by failure to follow the use, maintenance and care instructions;
* Product damage caused by disassembling or repairing the product without authorization, or immersing the product in water;
* Damage caused by force majeure.

Product diagram

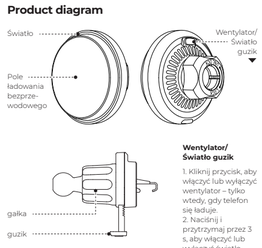

Wentylator/ Światło guzik

1. Kliknij przycisk, aby włączyć lub wyłączyć wentylator – tylko wtedy, gdy telefon się ładuje.
2. Naciśnij i przytrzymaj przez 3 s, aby włączyć lub wyłączyć światło.

Pakiet składników

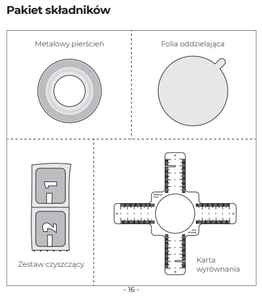

Kroki działania

1. Najpierw włóż głowicę kulową do nakrętki, a następnie włóż ją do gniazda z tyłu uchwytu i dokręć nakrętkę.



2. Jak korzystać z haka wylotu powietrza: Naciśnij przycisk, wyciągnij hak, aby zaczepić łopatkę wylotu powietrza, zwolnij przycisk i dokręć pokrętło zgodnie z ruchem wskazówek zegara.

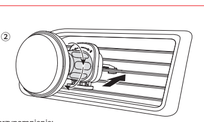

Ciepłe przypomnienie:
Podczas zdejmowania haka wylotu powietrza należy poluzować pokrętło w kierunku przeciwnym do ruchu wskazówek zegara przed naciśnięciem przycisku.

3. Podłącz kabel ładujący typu C znajdujący się w opakowaniu, aby połączyć uchwyt z ładowarką samochodową.

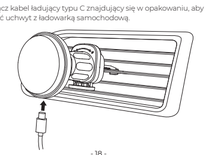

Kroki działania (metalowy pierścień)

1. Otwórz zestaw czyszczący, wytrzyj tył telefonu do czysta
2. Wklej folię oddzielającą na środku tylnej części telefonu.

3. Wklej metalowy pierścień na środku tylnej części telefonu za pomocą karty wyrównującej.

Uwaga: Jeśli górna i dolna skala, lewa i prawa skala karty wyrównującej są równe, metalowy pierścień zostanie wklejony na środku telefonu.

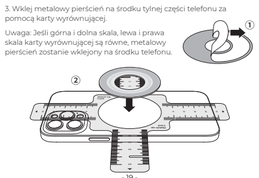

4. Umieść telefon w uchwycie, może on skutecznie przyciągnąć telefon za pomocą magnesu.

Ciepłe przypomnienie: Kompatybilny z iP phone mag-safe series i magnetycznymi etui. W przypadku innych telefonów i etui niemagnetycznych wymagany jest metalowy pierścień.

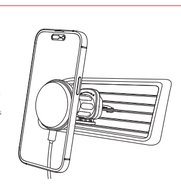

Kontrolka/Wentylator

Włączanie urządzenia: Krystaliczne podświetlenie krawędzi włączone, Wentylator zatrzymuje się po 10 sekundach od uruchomienia

Tryb gotowości: Stałe krystaliczne podświetlenie krawędzi, Wentylator nie uruchamia się

Ładowanie: Światła ambientowe oddychają, migoczą ,Wentylator zaczyna działać

Zanieczyszczenie ciałem obcym: Migające krystaliczne podświetlenie krawędzi, Wentylator zaczyna działać

Karta Gwarancyjna

Nazwa użytkownika:

Nr tel. użytkownika:

Adres użytkownika (z kodem pocztowym)

Data zakupu:

Nr faktury:

Nazwa dystrybutora:

Nr tel. dystrybutora:

Adres dystrubutora (z kodem pocztowym)

Instrukcje dotyczące serwisu gwarancyjnego:

A. Jeśli doszło do usterki produktu niespowodowanej błędem użytkownika, producent zapewnia 12-miesięczny okres bezpłatnej gwarancji, licząc od daty zakupu.

B. Wyłączenie gwarancji:
● Uszkodzenia spowodowane przez użytkownika;
● Okres gwarancji upłynął;
● Brak przedstawienia ważnego dowodu zakupu;
● Uszkodzenie produktu wynikające z nieprzestrzegania instrukcji użytkowania, konserwacji i zaleceń pielęgnacji;
● Uszkodzenie produktu spowodowane demontażem lub naprawą produktu bez autoryzacji lub zanurzeniem produktu w wodzie;
● Uszkodzenie na skutek działania siły wyższej.