What's in the box?

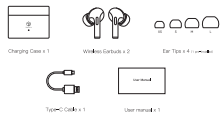

First Time Pairing

(Please make sure the device's Bluetooth function is on, otherwise the connection will fail.)

1. Take out both left and right earbuds from the charging case at the same time, and the earphones will automatically power on in pairing mode.
2. Access the device's Bluetooth settings and search for [ROSE EARFREE 6] to connect.

Wearing

(Your earbuds come with 4 pairs of Eartips, among which the Medium size is default.)

1. Choose the Eartips that fit your ears best.

2. Put the sounds hole downward, then place earbuds into ears. Adjust them to fit snugly.

Pairing with another device

1. Open the charging case to activate Bluetooth pairing mode.
2. On Device A, access the Bluetooth settings, then delete your earphones and ensure a successful connection.
3. Turn off the Bluetooth connection on Device A. This will put the earphones back into pairing mode, ready to connect with device B.
4. On Device B, access the Bluetooth settings, then delete your earphones and ensure a successful connection.
5. Turn off the Bluetooth connection on Device B.
6. Turn on the Bluetooth connection on both Devices. Then they are bothed connected to the earbuds.

* When the earphones are connected to 2 devices, they will prioritize calls on the device that has an incoming call.
* Since this product is power by your Rose Technics earphones, they will automatically connect to your last successfully connected device upon turning the Bluetooth range.

Touch Controls Guide (as shown in the diagram)

● click ▬ press for 2 seconds / click

	Left (L)	Right (R)
Previous Track	● ● ●	/
Next Track	/	● ● ●
Monitor (M)	●	●
Call (C)	▬	▬
Pause (P)	▬	▬
Game Mode	● ● ● ● ●	● ● ● ● ●
Voice Assistant	▬	▬
Active Noise Cancellation	/	▬

Charging

1. Remove the protection film before the first charging.
2. Put the earbuds into the charging case and close the lid for earbuds charging. Use USB-C to charge the charging case.
3. Use a certified Type-C charging cable and charger to avoid damage to the device.

* Battery status: ● Orange < 30%, ● 30% ≤ Green ≤ 70%, ● White ≥ 70%.
* The White LED indicator stays on for charging. White light stays on when the charging is complete.

Resetting

1. Put the earbuds into the charging case, and ensure the case lid is open.
2. Press the resetting button for 10 seconds and wait to see the white indicator flashing for 5 times. Then it is reset.
3. After resetting, the earbuds will be back into pairing mode automatically.

Trouble Shooting

Q: The earbuds are not visible in a device's Bluetooth?
A: Take out the earbuds back into the charging case, close the case, and take them out again. Reopen the Bluetooth on the device and try reconnection.

Q: Power on failure or automatic shutdown?
A: The batteries may run out. Please charge them promptly.

Q: Earbuds cannot be charged?
A: The earbuds may not be placed correctly. Please reposition them in the charging case.

Q: Intermittent signals in the earphones?
A: Keep the phone on the same side as the earbuds and away from any external interference for a stable signal.

Q: Unsuccessful pairing with a computer?
A: Please ensure that the computer has Bluetooth functionality. If not, you may need to acquire a Bluetooth adapter.

Q: Only one earbud has sound?
A: The pairing of the earbuds may be not successful. Please try to clear the Bluetooth pairing information and reconnect.

Precautions

1. Never disassemble or modify your earbuds by yourself for any reasons.
2. Keep the earbuds in the environment with normal temperature (0°C ~ 35°C).
3. These earbuds are not toys. Children should use the device under the adult's supervising, in case of choking or other danger.
4. Do not use the earbuds during a thunderstorm to avoid dysfunction and increasing risk of electroshock.
5. Do not use any harsh chemicals or strong detergents to clean the earbuds. Keep them dry.
6. Do not use the device in any dangerous situations, such as driving, road crossing, or engaging in other activities that require full attention.
7. Please maintain a distance of at least 15 centimeters from implanted medical devices (such as pacemakers) when using this device.

Warranty

We provide a 12-month warranty for this device from the original purchasing date, specified for defects caused by the manufacturer.
If the device fails due to a manufacturing defect, please contact the seller directly to initiate the return and warranty process.

* The following situations are excluded from the warranty:

1. Device purchased as second-hand, used, or from an unauthorized seller.
2. There are no valid invoice and order number.
3. Damage resulted from misuse and abusive action, including unauthorized disassembly and exterior damage caused by impact or collision.
4. Damage resulted from chemicals, fire, radioactive substances, poison, and liquid.
5. Damage resulting from any Unpredictable factors, such as natural disasters.
6. Damage to any third party/persons/object, etc.
7. Normal wear and tear of the product.

Statement

We provide customer service only for products purchased directly from Rose Technics or Rose Technics authorized distributors. If you have purchased from a different seller, please contact them for any exchange or refund request.

Thank you for purchasing authentic Rose Technics products. For any assistance, please contact us freely.

* FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example—use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
RF warning statement:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

DOWNLOAD MODE