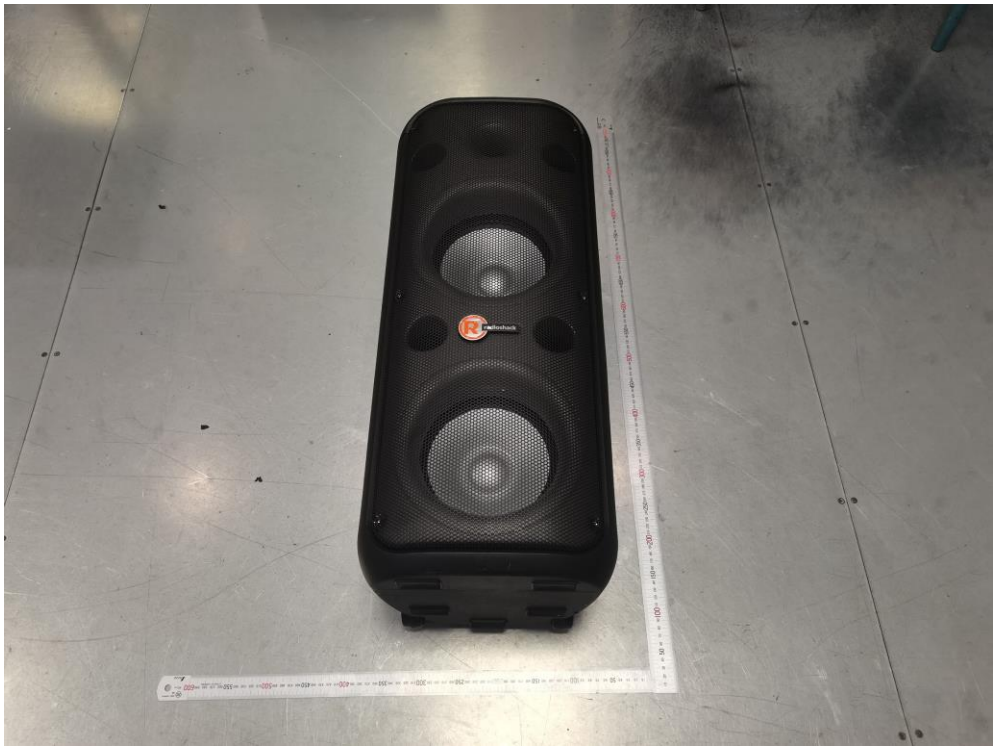

radioshack

MP3 PLAYER
LED MODE
USB
MODE
radioshack
MODEL: 4001957
VOLUME
MIN
TREBLE
BASS
L
R
AUX IN
AUX OUT

radioshack
MODEL: 4001957
VOLUME
MIN
MAX
TREBLE
-12
+12
BASS
-12
+12
MIC.VOL
MIN
MAX
MIC.TRE
-12
+12
MIC.BASS
-12
ECHO
MIN
L
R
AUX IN
AUX OUT
CAUTION: BEFORE USE SPEAKER BOX, PLEASE CHARGE BATTERY FULLY. IT IS BETTER FOR BATTERY LIFE.
DON'T PLAY SPEAKER BOX AND CHARGE BATTERY AT THE SAME TIME, OTHERWISE IT WILL AFFECT BATTERY LIFE.
CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK).
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

RED: CHARGE
GREEN: FULL
CLIP
POWER
MIC PRI
ON
OFF
+
−
ON
AC100-240V
50/60Hz
12V BATTERY IN
OFF
POWER
You can choose power from AC input, DC input, or use battery.
CAUTION
Made in China