# 84*84mm 105g哑粉 5折6页 12P 双面四色印刷 过哑油

## TABLE OF CONTENTS


- Package Contents and Features 01
- Specifications 02
- Power and Pairing 03
- Reset and Sizing 04
- Charging 05
- Controls 06
- Warranty 08
- Safety 09




## PACKAGE CONTENTS

Noise Aura Buds x 1

USB Type-C charging cable x 1

Charging case x 1

S X 1 L X 1

Ear-tips

User manual x 1



## SPECIFICATIONS

Earbud weight: 4g each earbud
Speaker driver size: 12mm
Supported profiles: AAC, SBC
Bluetooth version: 5.3
Earbud charging time: Up to 45 minutes
Working voltage: 5V
Standby time: Up to 200 hours
Playtime: Up to 8 hours at 70% volume
Bluetooth range: 10m
Waterproof rating: IPX5
Working temperature: 0-50°C

## CHARGING CASE SPECIFICATIONS

Charging case weight: 34.1g
Charging port: Type-C
The number of earbud charges from the case: Up to 6 times
Case charging time: up to 90 minutes
Total playtime with charging case: Up to 60 hours



## POWER ON

The earbuds will automatically turn on as soon as the charging case is opened.

## POWER OFF

The earbuds will automatically turn off once placed inside the charging case and the case is closed.

## PAIRING

Open the charging case.
Turn on the Bluetooth of your device.
Select 'Add Device' and select Noise Aura Buds from the list of devices.
Your Noise Aura Buds are now paired with your device and ready to use.

Note: Your Noise Aura Buds will automatically connect to the last paired device as soon as you open the charging case.

## RESET

Make sure your earbuds are fully charged.
On your paired devices, delete/remove Noise Aura Buds from the list of paired devices in the Bluetooth menu.
Open the charging case and take out the earbuds.
Long press and hold the touch surface of both the earbuds for 7 seconds.
The earbud will give a prompt that they have been reset.
Put the earbuds back in the charging case.
Close the charging case and repeat the pairing process.

## CHOOSING YOUR EAR-TIP SIZE

Earphones are fitted with medium-sized tips. However, if you find they don't fit perfectly, please remove and try the small and large ear tips.

Follow the images and chart to learn how to wear earbuds in the right manner.



## CHARGING

**Earbuds**

Place both earbuds in the case to charge them.

**Indication (on case)**

- **Solid white LED (2 Sec) = Charging** — Charging
- **No LED = Fully charged** — Fully charged

**Case**

Charge the case via the supplied Type-C charging cable preferably from any PC or laptop as compared to a USB charger.

**Indication**

- **Flashing white LED = Charging** — Charging
- **Solid white LED = Fully charged** — Fully Charged



noise

## CONTROLS

**Play/Pause**
Tap either earbud twice

**Previous Song**
Tap the left earbud thrice

**Next Song**
Tap the right earbud thrice

**Volume Up**
Tap the right earbud once

**Volume Down**
Tap the left earbud once

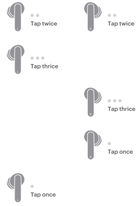




**Answer Call**
Tap either earbud twice

**End Call**
Tap either earbud twice

**Reject Call**
Touch and hold either earbud for 2 seconds

**Voice Assistant**
Tap right earbud four times

**Gaming mode**
Touch and hold either earbud for 2 seconds

## WARRANTY

The warranty covers your Noise product, including accessories against manufacturing defects (if any) for 1 year from the date of purchase.

**Things that are not covered in the warranty**

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation, or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on **www.gonoise.com.**

## REGISTER YOUR WARRANTY

www.gonoise.com/pages/warranty-registration

SUPPORT AND SERVICE
1 YEAR LIMITED WARRANTY

SCAN ME

## CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.in



## SAFETY FOR YOU AND YOUR NOISE AURA BUDS

Follow these tips to get the best out of your new Noise Aura Buds:

- Do not expose the earbuds to liquids, moisture or humidity as they have electronics and batteries inside.
- Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.
- Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.
- Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.
- Don't throw the earbuds in a fire to dispose it. The internal battery may explode.
- Don't try to disassemble your earbuds. There are no user-serviceable parts inside it.
- Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.
- Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PCs.
- Never listen to music at high volume or you may permanently damage your hearing.
- Pay attention to your surroundings and never wear any earphones while riding, driving or walking in traffic.



## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID:2BKRS-AURABUDS



# Aura Buds

Please refer to this manual before using the product

封底

封面