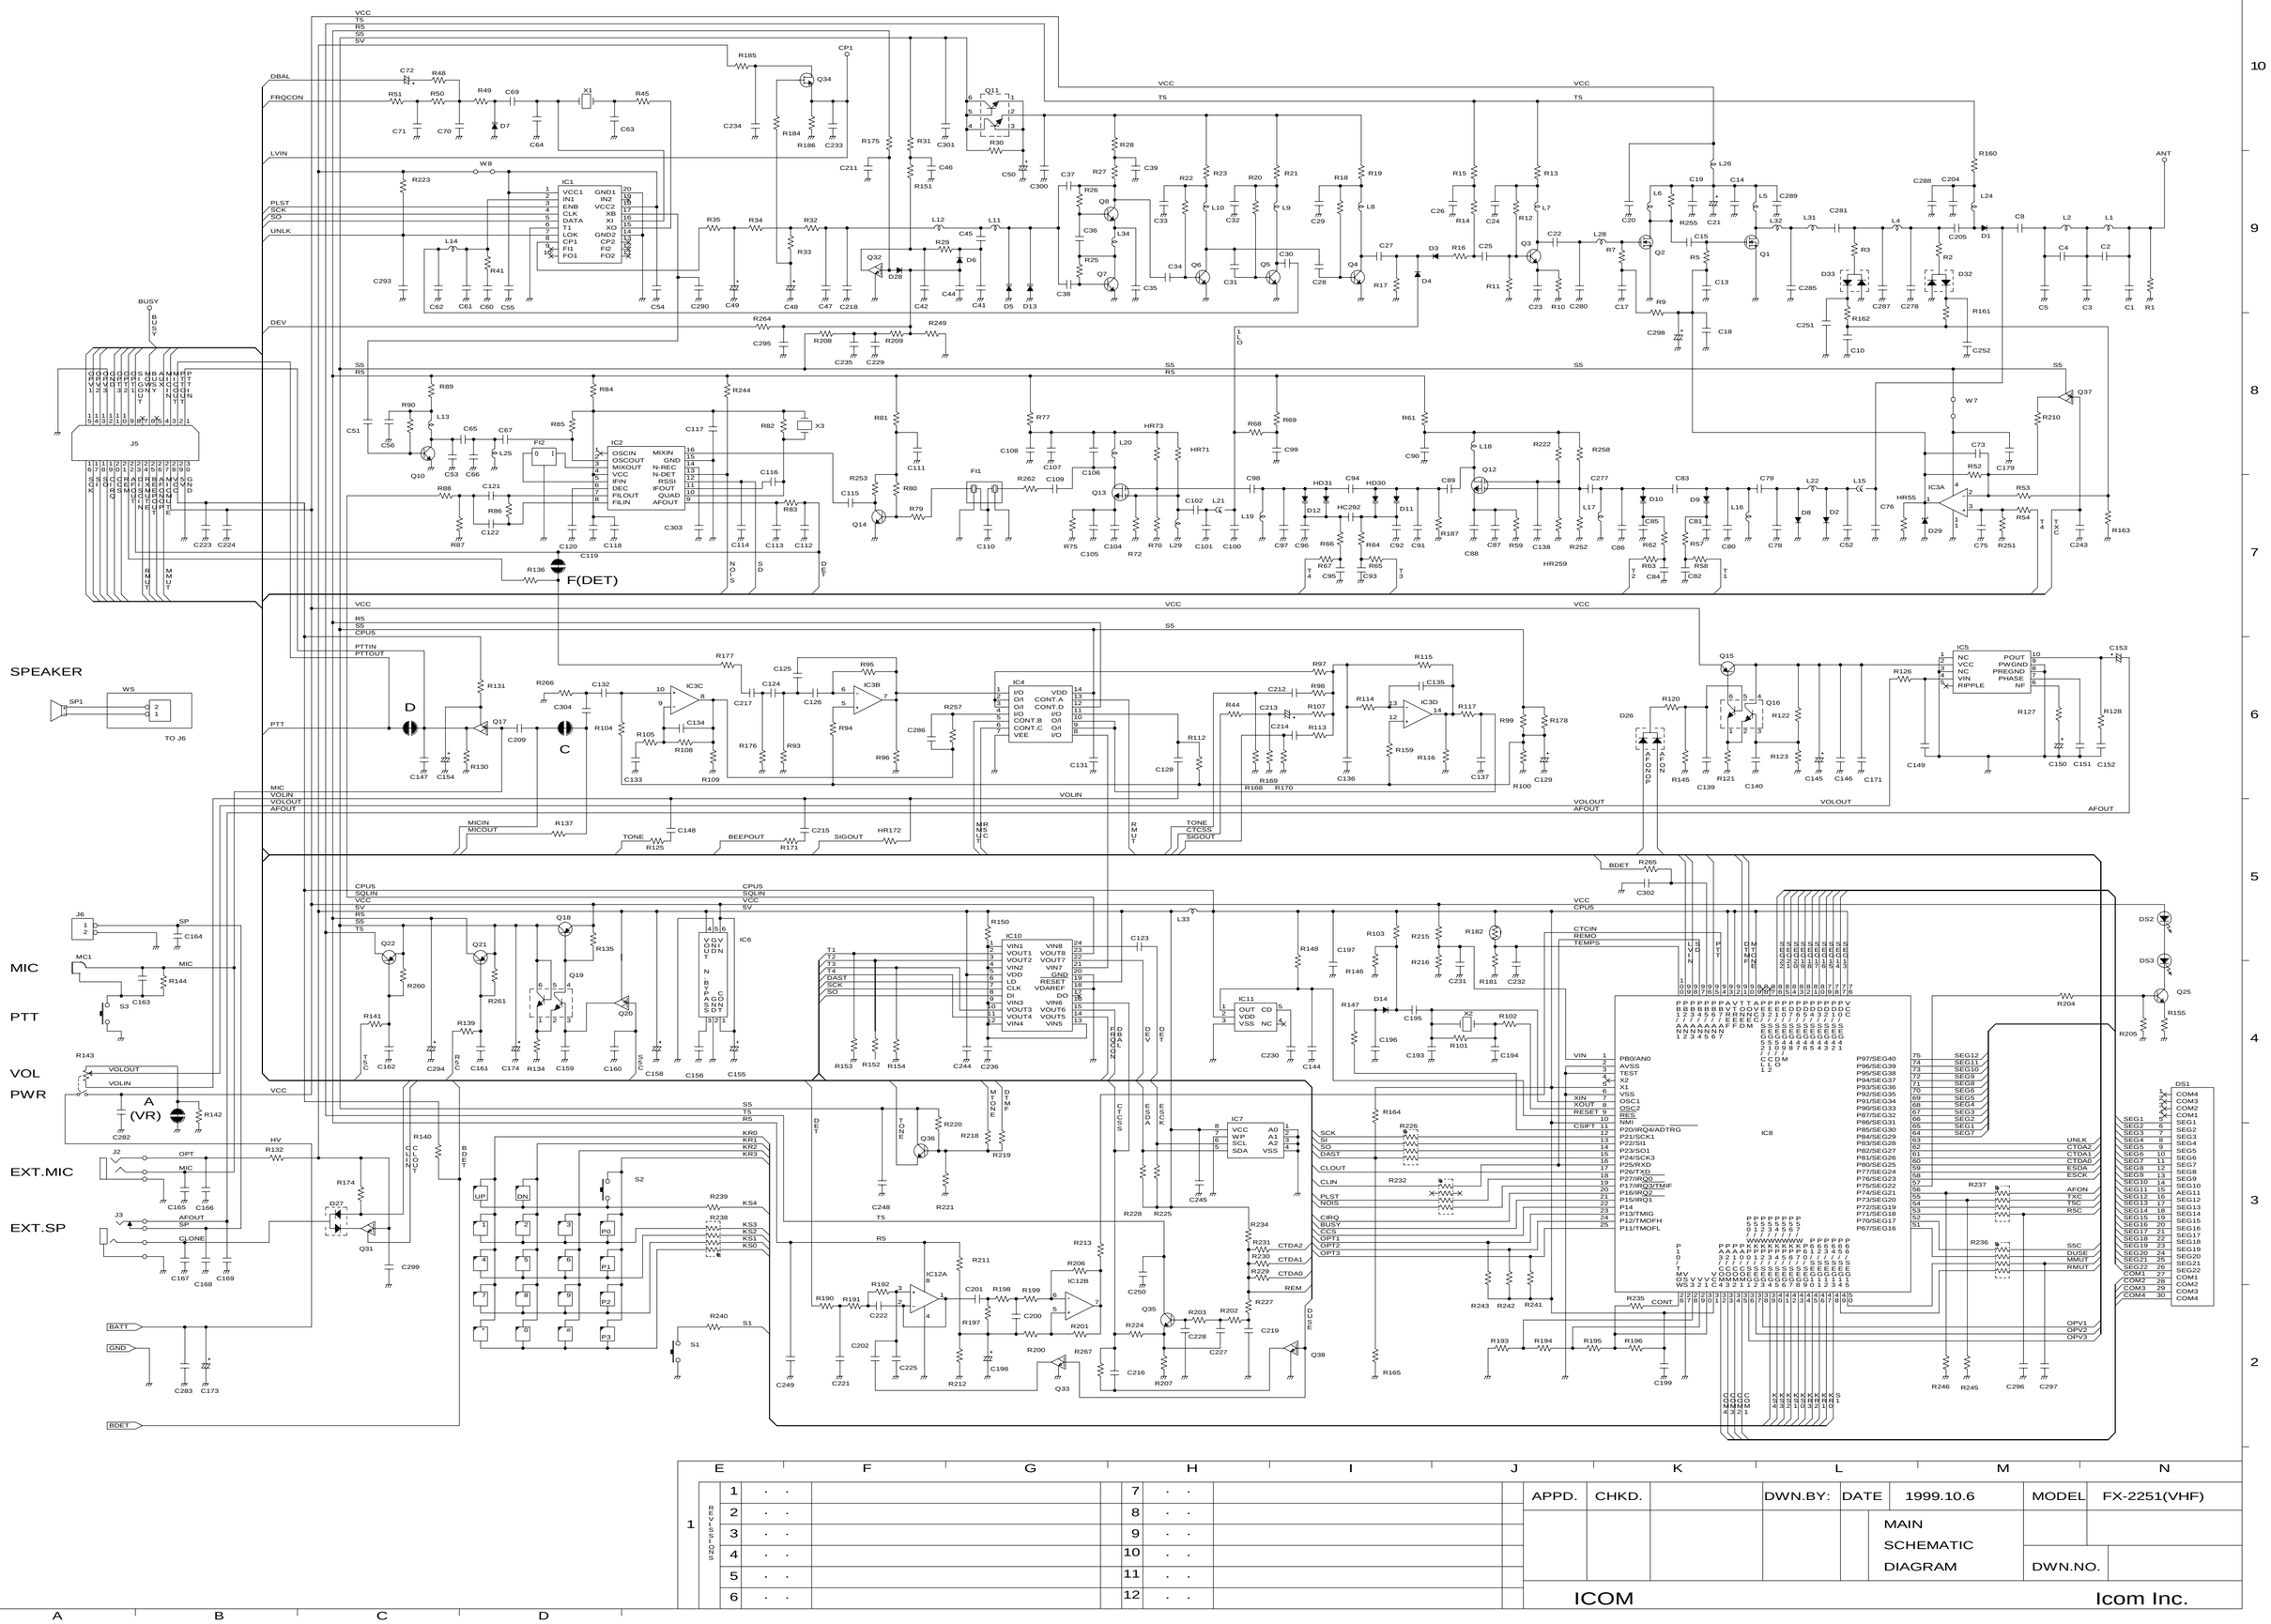
SPEAKER
MIC
PTT
VOL
PWR
EXT.MIC
EXT.SP
F(DET)
IC1
IC2
IC3C
IC3D
IC4
IC5
IC6
IC7
IC8
IC10
IC11
IC12A
IC12B
IC3A
IC3B
J5
J6
J2
J3
W5
W7
W8
X1
X2
X3
ANT
DBAL
FRQCON
LVIN
PLST
SCK
SO
UNLK
DEV
BUSY
VCC
T5
R5
S5
SV
CPU5
PTTIN
PTTOUT
MIC
VOLIN
VOLOUT
AFOUT
MICIN
MICOUT
TONE
BEEPOUT
SIGOUT
VOLUT
AFOUT
BDET
SQLIN
VOLUT
CTCSS
SIGOUT
DET
DUSE
REM
CTCIN
REMO
TEMPS
CLONE
BATT
GND
OPT
HV
KR0
KR1
KR2
KR3
KS0
KS1
KS2
KS3
KS4
UP
DN
P0
P1
P2
P3
S1
S2
D
C
TO J6
TO CONT
TO OPT
TO X3
TO Q36
TO D28
TO D27
TO D31
TO D32
TO D33
TO Q37
TO Q38
TO D26
TO D29
TO D30
TO D34
TO D35
TO D36
TO D37
TO D38
TO D39
TO D40
TO D41
TO D42
TO D43
TO D44
TO D45
TO D46
TO D47
TO D48
TO D49
TO D50
TO D51
TO D52
TO D53
TO