BLACK 11.75" x 8.25"

AGES 5 & UP

Kawasaki iSOUNDZ Music™

Audio Pro Wireless Digital Air Stix

Thank you for purchasing the Kawasaki i soundz Audio Pro Digital Air Stix. This interactive air stix will bring you hours of fun for the entire family.

STIX VOLUME CONTROL
Press these buttons to raise and lower the volume of the drum stix.

HEADPHONE JACK
Plug your headset into this jack for private listening. Most headphones can be used. a headphone is not included.

BELT CLIP
There is a belt clip so you can clip it to your belt or pants.

HIGH QUALITY SPEAKER

RHYTHM BUTTON
This has the same function if the RHYTHM SOUNDS. Press this button to hear and change the different rhythms.
To turn off the rhythm sounds cycle thru the 3 sounds and the control unit will turn off.

ON/OFF SWITCH
The on/off switch on the control unit allows music from your MP3 player to play thru the speaker. If you turn the switch to "ON" the music plays thru the speaker. If you turn the switch to "OFF" the music from your MP3 player will not play thru the speaker. However, if you press the rhythm button or the drum sounds the MP3 player will activate and play again thru the speaker. Please make sure you turn the on/off switch to "OFF" when you are done playing with your air stix. Your must turn off the MP3 player after you are finished playing or else it will drain the air stix batteries.

MP3 MUSIC PLAYER JACK
The air stix can be played alone or with your MP3 player. The air stix includes a wire to plug into your MP3 player and then into the MP3 music player jack. (see diagram) After you plug your MP3 player in, turn it on and adjust the volume to the desired level and play along with your favorite musicians.

RHYTHM VOLUME CONTROL
Press these buttons to raise and lower the volume of the rhythms.

RHYTHM SOUNDS
There are 3 different rhythms to play along with. Each press of the button changes the rhythm you will hear. The rhythms also change the sound of the drum sounds. Each rhythm will play 4 drum sounds totalling 12 drum sounds. There are some very cool sounds to play and have fun.
To turn off the rhythm sounds cycle thru the 3 sounds and the control unit will turn off.

AUTO OFF OR SLEEP MODE
Your air stix will automatically turn off or go into sleep mode after 30 seconds of non use. Press any button to activate the musical instrument.

MP3 PLAYER
After you are done using the MP3 player you must shut it off. If you leave it on it will drain the battery on the musical instrument and deplete the batteries. Please make sure you shut the on/off switch to the off position on the instrument as well.

DRUM SOUNDS
There are 12 different drum sounds. Press the top or bottom of the switch to change the drum sounds.
To activate the drum sticks when you get then home you have to press the rhythm button or the drum sounds switch and then play the drum sticks.

ON / OFF

DRUM SOUNDS

WORKS WITH

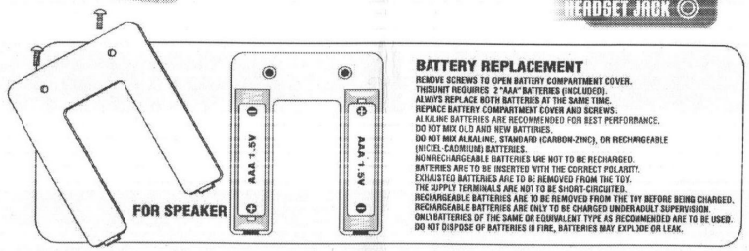

BATTERY REPLACEMENT
REMOVE SCREWS TO OPEN BATTERY COMPARTMENT COVER.
THISUNIT REQUIRES 2 "AAA" BATTERIES (INCLUDED).
ALWAYS REPLACE BOTH BATTERIES AT THE SAME TIME.
REPLACE BATTERY COMPARTMENT COVER AND SCREWS.
ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE.
DO NOT MIX OLD AND NEW BATTERIES.
DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.
NONRECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.
RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.
ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

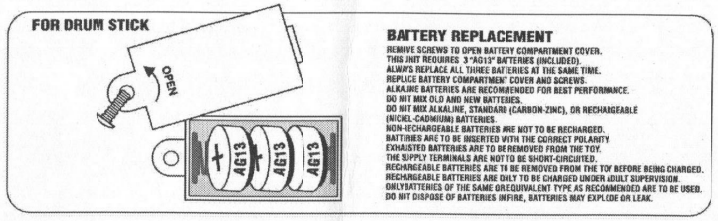

BATTERY REPLACEMENT
REMOVE SCREWS TO OPEN BATTERY COMPARTMENT COVER.
THIS UNIT REQUIRES 3 "AG13" BATTERIES (INCLUDED).
ALWAYS REPLACE ALL THREE BATTERIES AT THE SAME TIME.
REPLACE BATTERY COMPARTMENT COVER AND SCREWS.
ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE.
DO NOT MIX OLD AND NEW BATTERIES.
DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.
NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.
RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.
ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.
NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE EQUIPMENT SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.
NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION.
IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES
- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCE RADIO/TV TECHNICIAN FOR HELP.

Kawasaki
Kawasaki Motors Corp., U.S.A.
OFFICIAL LICENSED PRODUCT

87-11504-45428

KAWASAKI® IS A TRADEMARK LICENSED BY KAWASAKI MOTORS CORP., U.S.A., WHICH DOES NOT MANUFACTURE OR DISTRIBUTE THIS PRODUCT. CONSUMER INQUIRIES SHOULD BE DIRECTED TO KIDZ TOYZ, INC., 280 NORTH BEDFORD ROAD, SUITE 203, MT. KISCO, NEW YORK 10549 USA

KIDZ TOYZ™
because kidz like toyz
KIDZ TOYZ, INC. MT. KISCO, N.Y. 10549

BIG MUSIC COMPANY SUBSIDIARY OF KIDZ TOYZ, INC.

For Product Questions,
Call 1-877-KIDZTOY (877-543-9869)
Ask for CUSTOMER SERVICE.
Only in the U.S. and CANADA

iPod® is a registered trademark of Apple Computer, Inc. The product sold in this package has not been endorsed or approved by Apple Computer, Inc.

Zune® is a registered trademark of Microsoft Corporation.

Please visit us on the web at www.kidztoyz.com

MADE IN CHINA
ITEM NO. 77201

Document.max