# Front View

**Signal LED**

**Battery LED**

AmberWatch Mobile

On / Off

**Assistance Button**

**Charging Jack**

# Rear View

[image pending]

## *HERO kit*

The AmberWatch Mobile HERO kit includes:

| **HERO Device** | **AC Power Adapter** |
|---|---|
|  |  |

:
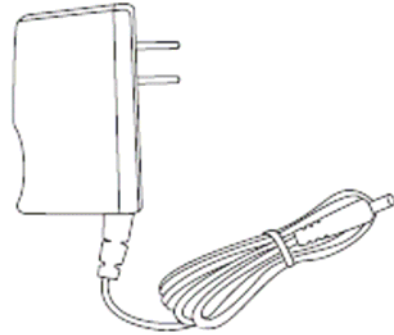
| **Serial Cable (placeholder)** | **Wrist Strap** |
|---|---|
|  |  |

| **Carrying Case (placeholder)** | **Quick Start Guide (placeholder)** |
|---|---|

*Other details and use cases still to be included in User Guide:*
- **Thorough table of contents**
- *device is powered "on" after charging*
- *low battery alert*
- *what happens on assistance button press*
- *what happens on assistance button error cases*
- **waterproofing information**
- *web functionality:*
  - *web screen shot*
  - *Locating*
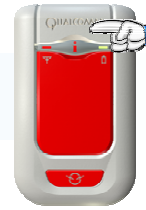  - *Scheduled check*
  - *WAP details*
-

## Powering Up / Down

Before first time usage, connect the device to the AC power adapter for at least 12 hours for full battery charging.

### Powering Up
To turn ON the device:
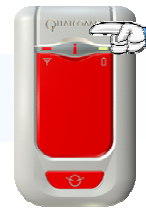
**1** **Press the *On | Off button* for three seconds.**

**2** **The *Battery* and *Signal Strength LEDs* will blink in the following color sequence:**
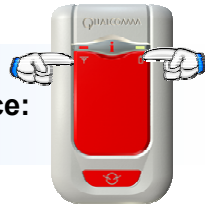**red → orange → green**

### Powering Down
To turn OFF the device, perform the following steps:

**1** **Press the *On | Off button* for three seconds.**

**2** **The *Battery* and *Signal Strength LEDs* will blink in the following color sequence:**
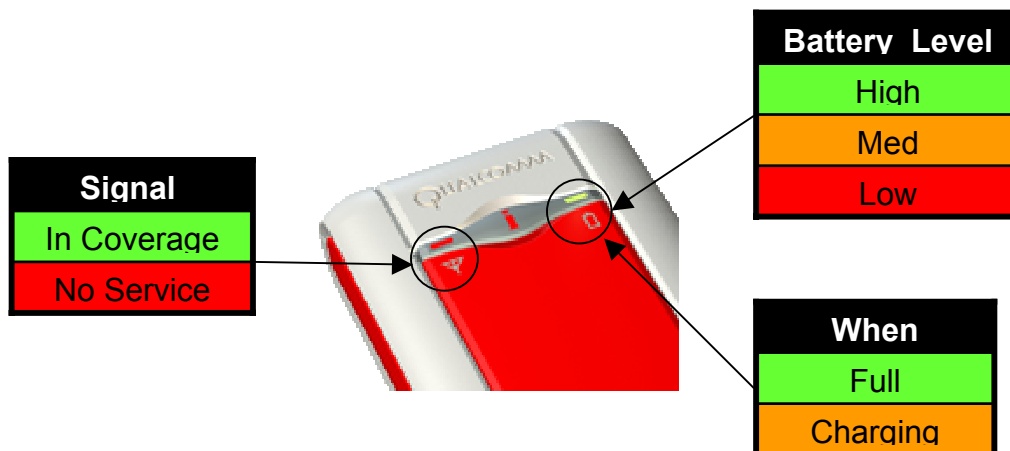**green → orange → red**

## Status Operation

When the device is ON, the Status Pushbutton [icon] provides battery and cellular service indications.

**1** **Press the *On | Off button* [icon] momentarily.**

**2** **The *Battery and Signal Strength LEDs* will be illuminated for five seconds according to the following legend:**

| Battery  Level |
| --- |
| High |
| Med |
| Low |

| Signal |
| --- |
| In Coverage |
| No Service |

| When |
| --- |
| Full |
| Charging |

## Assistance Operation

In order to activate the Assistance mode

**1**   **Press the *Assistance button***   **for three seconds.**

**2**   **The *Battery and Signal Strength LEDs* will blink in orange until the initial assistance request is sent.**

**3**   **The *Battery and Signal Strength LEDs* will blink in green until position is determined And sent with assistance request.**

**4**   **The *Battery and Signal Strength LEDs* will remain on in continuous green for 10 seconds.**