FRONT A50 – QSG (PS4)

PACKAGING	A50 Mimas QSG (PS4)
DATE	181011
P/N REV	XXX Rev 001
DIMENSIONS	457.2 x 609.6mm (W x H)
FOLD SIZE	228.5 x 151.5mm
TRIM SIZE	457.2 x 609.6mm (W x H)

Pantone Cool Gray 6

dieline - fold (do not print)

astro

A50 WIRELESS + BASE STATION

QUICKSTART GUIDE FOR PS4

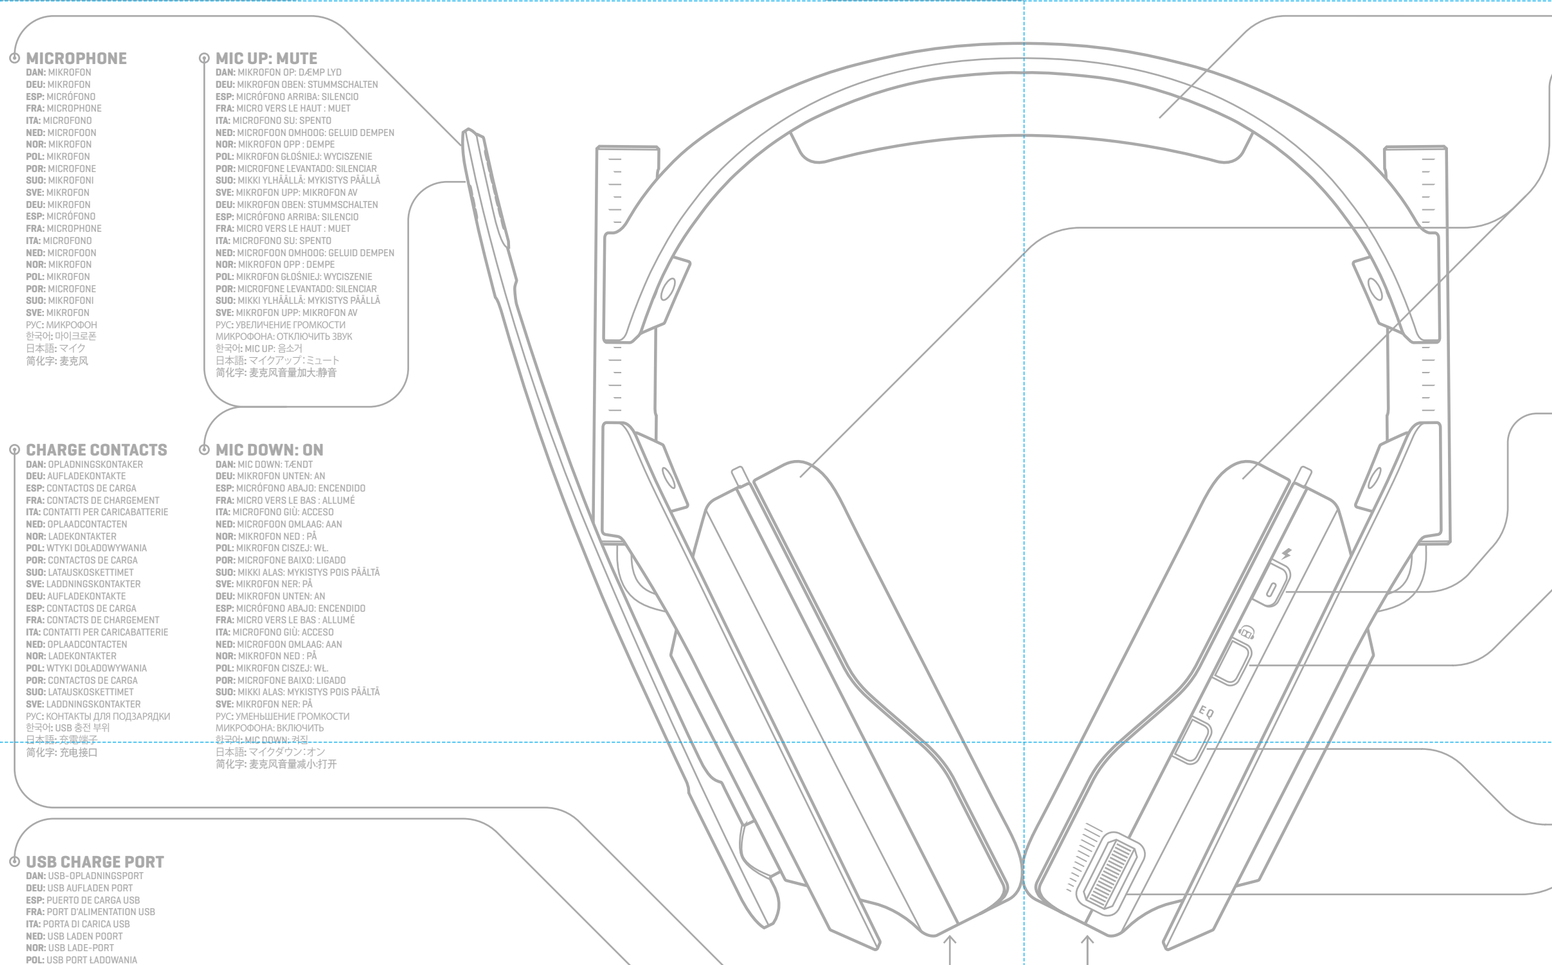

MICROPHONE
DAN: MIKROFON
DEU: MIKROFON
ESP: MICRÓFONO
FRA: MICROPHONE
ITA: MICROFONO
NED: MICROFOON
NOR: MIKROFON
POL: MIKROFON
POR: MICROFONE
SUO: MIKROFONI
SVE: MIKROFON
DEU: MIKROFON
ESP: MICRÓFONO
FRA: MICROPHONE
ITA: MICROFONO
NED: MICROFOON
NOR: MIKROFON
POL: MIKROFON
POR: MICROFONE
SUO: MIKROFONI
SVE: MIKROFON
РУС: МИКРОФОН
한국어: 마이크로폰
日本語: マイク
简化字: 麦克风

MIC UP: MUTE
DAN: MIKROFON OP: DÆMP LYD
DEU: MIKROFON OBEN: STUMMSCHALTEN
ESP: MICRÓFONO ARRIBA: SILENCIO
FRA: MICRO VERS LE HAUT : MUET
ITA: MICROFONO SU: SPENTO
NED: MICROFOON OMHOOG: GELUID DEMPEN
NOR: MIKROFON OPP : DEMPE
POL: MIKROFON GŁOŚNIEJ: WYCISZENIE
POR: MICROFONE LEVANTADO: SILENCIAR
SUO: MIKKI YLHÄÄLLÄ: MYKISTYS PÄÄLLÄ
SVE: MIKROFON UPP: MIKROFON AV
DEU: MIKROFON OBEN: STUMMSCHALTEN
ESP: MICRÓFONO ARRIBA: SILENCIO
FRA: MICRO VERS LE HAUT : MUET
ITA: MICROFONO SU: SPENTO
NED: MICROFOON OMHOOG: GELUID DEMPEN
NOR: MIKROFON OPP : DEMPE
POL: MIKROFON GŁOŚNIEJ: WYCISZENIE
POR: MICROFONE LEVANTADO: SILENCIAR
SUO: MIKKI YLHÄÄLLÄ: MYKISTYS PÄÄLLÄ
SVE: MIKROFON UPP: MIKROFON AV
РУС: УВЕЛИЧЕНИЕ ГРОМКОСТИ
МИКРОФОНА: ОТКЛЮЧИТЬ ЗВУК
한국어: MIC UP: 음소거
日本語: マイクアップ:ミュート
简化字: 麦克风音量加大/静音

SWAPPABLE EAR CUSHIONS
DAN: AFTAGELIGE ØREPUDER
DEU: ABNEHMBARE OHRENPOLSTER
ESP: ALMOHADILLAS PARA OREJAS REMOVIBLES
FRA: COUSSINETS AMOVIBLES
ITA: CUSCINETTI AURICOLARI RIMOVIBILI
NED: VERWIJDERBARE OORKUSSENS
NOR: UTSKIFTBARE ØREPUTER
POL: ODPINANE NAUSZNIKI
POR: ALMOFADAS DE OUVIDO REMOVÍVEIS
SUO: IRROTETTAVAT KUULOKEPEHMUSTEET
SVE: BORTTAGBARA ÖRONKUDDAR
DEU: ABNEHMBARE OHRENPOLSTER
ESP: ALMOHADILLAS PARA OREJAS REMOVIBLES
FRA: COUSSINETS AMOVIBLES
ITA: CUSCINETTI AURICOLARI RIMOVIBILI
NED: VERWIJDERBARE OORKUSSENS
NOR: UTSKIFTBARE ØREPUTER
POL: ODPINANE NAUSZNIKI
POR: ALMOFADAS DE OUVIDO REMOVÍVEIS
SUO: IRROTETTAVAT KUULOKEPEHMUSTEET
SVE: BORTTAGBARA ÖRONKUDDAR
РУС: ВЫКЛЮЧАТЕЛЬ ПИТАНИЯ
한국어: 착탈 가능 이어쿠션
日本語: 脱着可能な耳用クッション
简化字: 可拆卸的耳垫

SWAPPABLE HEADBAND
DAN: AFTAGELIG HOVEDBØJLE
DEU: ABNEHMBARES KOPFBAND
ESP: BANDA PARA LA CABEZA REMOVIBLE
FRA: BANDEAU AMOVIBLE
ITA: ARCHETTO RIMOVIBILE
NED: VERWIJDERBARE HOOFDBAND
NOR: UTSKIFTBART HODEBÅND
POL: ODPINANY PAŁĄK NA GŁOWĘ
POR: FITA PARA CABEÇA REMOVÍVEL
SUO: IRROTETTAVA PANTA
SVE: BORTTAGBAR HUVUDBYGEL
DEU: ABNEHMBARES KOPFBAND
ESP: BANDA PARA LA CABEZA REMOVIBLE
FRA: BANDEAU AMOVIBLE
ITA: ARCHETTO RIMOVIBILE
NED: VERWIJDERBARE HOOFDBAND
NOR: UTSKIFTBART HODEBÅND
POL: ODPINANY PAŁĄK NA GŁOWĘ
POR: FITA PARA CABEÇA REMOVÍVEL
SUO: IRROTETTAVA PANTA
SVE: BORTTAGBAR HUVUDBYGEL
РУС: СЪЕМНАЯ ДУЖКА ДЛЯ НАУШНИКОВ
한국어: 착탈 가능 헤드밴드
日本語: 脱着可能なヘッドバンド
简化字: 可拆卸的头带

CHARGE CONTACTS
DAN: OPLADNINGSKONTAKER
DEU: AUFLADEKONTAKTE
ESP: CONTACTOS DE CARGA
FRA: CONTACTS DE CHARGEMENT
ITA: CONTATTI PER CARICABATTERIE
NED: OPLAADCONTACTEN
NOR: LADEKONTAKTER
POL: WTYKI DOŁADOWYWANIA
POR: CONTACTOS DE CARGA
SUO: LATAUSKOSKETTIMET
SVE: LADDNINGSKONTAKTER
DEU: AUFLADEKONTAKTE
ESP: CONTACTOS DE CARGA
FRA: CONTACTS DE CHARGEMENT
ITA: CONTATTI PER CARICABATTERIE
NED: OPLAADCONTACTEN
NOR: LADEKONTAKTER
POL: WTYKI DOŁADOWYWANIA
POR: CONTACTOS DE CARGA
SUO: LATAUSKOSKETTIMET
SVE: LADDNINGSKONTAKTER
РУС: КОНТАКТЫ ДЛЯ ПОДЗАРЯДКИ
한국어: USB 충전 부위
日本語: 充電端子
简化字: 充电接口

MIC DOWN: ON
DAN: MIC DOWN: TÆNDT
DEU: MIKROFON UNTEN: AN
ESP: MICRÓFONO ABAJO: ENCENDIDO
FRA: MICRO VERS LE BAS : ALLUMÉ
ITA: MICROFONO GIÙ: ACCESO
NED: MICROFOON OMLAAG: AAN
NOR: MIKROFON NED : PÅ
POL: MIKROFON CISZEJ: WŁ.
POR: MICROFONE BAIXO: LIGADO
SUO: MIKKI ALAS: MYKISTYS POIS PÄÄLTÄ
SVE: MIKROFON NER: PÅ
DEU: MIKROFON UNTEN: AN
ESP: MICRÓFONO ABAJO: ENCENDIDO
FRA: MICRO VERS LE BAS : ALLUMÉ
ITA: MICROFONO GIÙ: ACCESO
NED: MICROFOON OMLAAG: AAN
NOR: MIKROFON NED : PÅ
POL: MIKROFON CISZEJ: WŁ.
POR: MICROFONE BAIXO: LIGADO
SUO: MIKKI ALAS: MYKISTYS POIS PÄÄLTÄ
SVE: MIKROFON NER: PÅ
РУС: УМЕНЬШЕНИЕ ГРОМКОСТИ
МИКРОФОНА: ВКЛЮЧИТЬ
한국어: MIC DOWN: 켜짐
日本語: マイクダウン:オン
简化字: 麦克风音量减小/打开

DOLBY ON / SOURCE AUDIO
DAN: DOLBY HEADPHONE TÆND/SLUK
DEU: DOLBY HEADPHONE EIN/AUS
ESP: ENCENDIDO/APAGADO DE DOLBY HEADPHONE
FRA: DOLBY HEADPHONE ON / OFF
ITA: ATTIVAZIONE/DISATTIVAZIONE DOLBY HEADPHONE
NED: DOLBY HEADPHONE AAN / UIT
NOR: DOLBY HEADPHONE PÅ / AV
POL: DOLBY HEADPHONE WŁ. / WYŁ.
POR: LIGAR / DESLIGAR DOLBY®
SUO: DOLBY HEADPHONE PÄÄLLÄ/POIS PÄÄLTÄ
SVE: DOLBY HEADPHONE PÅ/AV
DEU: DOLBY HEADPHONE EIN/AUS
ESP: ENCENDIDO/APAGADO DE DOLBY HEADPHONE
FRA: DOLBY HEADPHONE ON / OFF
ITA: ATTIVAZIONE/DISATTIVAZIONE DOLBY HEADPHONE
NED: DOLBY HEADPHONE AAN / UIT
NOR: DOLBY HEADPHONE PÅ / AV
POL: DOLBY HEADPHONE WŁ. / WYŁ.
POR: LIGAR / DESLIGAR DOLBY®
SUO: DOLBY HEADPHONE PÄÄLLÄ/POIS PÄÄLTÄ
SVE: DOLBY HEADPHONE PÅ/AV
РУС: DOLBY HEADPHONE ВКЛ./ ВЫКЛ.
한국어: DOLBY HEADPHONE 켜기 / 끄기
日本語: DOLBY HEADPHONEオン/オフ
简化字: DOLBY HEADPHONE 打开/关闭

POWER SWITCH
DAN: DOLBY HEADPHONE TÆND/SLUK
DEU: DOLBY HEADPHONE EIN/AUS
ESP: ENCENDIDO/APAGADO DE DOLBY HEADPHONE
FRA: DOLBY HEADPHONE ON / OFF
ITA: ATTIVAZIONE/DISATTIVAZIONE DOLBY HEADPHONE
NED: DOLBY HEADPHONE AAN / UIT
NOR: DOLBY HEADPHONE PÅ / AV
POL: DOLBY HEADPHONE WŁ. / WYŁ.
POR: LIGAR / DESLIGAR DOLBY®
SUO: DOLBY HEADPHONE PÄÄLLÄ/POIS PÄÄLTÄ
SVE: DOLBY HEADPHONE PÅ/AV
DEU: DOLBY HEADPHONE EIN/AUS
ESP: ENCENDIDO/APAGADO DE DOLBY HEADPHONE
FRA: DOLBY HEADPHONE ON / OFF
ITA: ATTIVAZIONE/DISATTIVAZIONE DOLBY HEADPHONE
NED: DOLBY HEADPHONE AAN / UIT
NOR: DOLBY HEADPHONE PÅ / AV
POL: DOLBY HEADPHONE WŁ. / WYŁ.
POR: LIGAR / DESLIGAR DOLBY®
SUO: DOLBY HEADPHONE PÄÄLLÄ/POIS PÄÄLTÄ
SVE: DOLBY HEADPHONE PÅ/AV
РУС: DOLBY HEADPHONE ВКЛ./ ВЫКЛ.
한국어: DOLBY HEADPHONE 켜기 / 끄기
日本語: DOLBY HEADPHONEオン/オフ
简化字: DOLBY HEADPHONE 打开/关闭

USB CHARGE PORT
DAN: USB-OPLADNINGSPORT
DEU: USB AUFLADEN PORT
ESP: PUERTO DE CARGA USB
FRA: PORT D'ALIMENTATION USB
ITA: PORTA DI CARICA USB
NED: USB LADEN POORT
NOR: USB LADE-PORT
POL: USB PORT ŁADOWANIA
POR: USB CARREGAMENTO PORTA
SUO: USB-LATAUSPORTTI
SVE: USB-LADDNINGS PORT
DEU: USB AUFLADEN PORT
ESP: PUERTO DE CARGA USB
FRA: PORT D'ALIMENTATION USB
ITA: PORTA DI CARICA USB
NED: USB LADEN POORT
NOR: USB LADE-PORT
POL: USB PORT ŁADOWANIA
POR: USB CARREGAMENTO PORTA
SUO: USB-LATAUSPORTTI
SVE: USB-LADDNINGS PORT
РУС: USB ЗАРЯДКА ПОРТ
한국어: USB 충전포트
日本語: USB充電ポート
简化字: USB 充电端口

VOLUME
DAN: LYDSTYRKE
DEU: LAUTSTÄRKE
ESP: VOLUMEN
FRA: VOLUME
ITA: VOLUME
NED: VOLUME
NOR: VOLUM
POL: GŁOWNA
POR: VOLUME
SUO: VOIMAKKUUS
SVE: VOLYM
DEU: LAUTSTÄRKE
ESP: VOLUMEN
FRA: VOLUME
ITA: VOLUME
NED: VOLUME
NOR: VOLUM
POL: GŁOWNA
POR: VOLUME
SUO: VOIMAKKUUS
SVE: VOLYM
РУС: ГРОМКОСТЬ
한국어: 마스터 볼륨
日本語: ボリューム
简化字: 主音量

EQ BUTTON
DAN: LYDTILSTAND VÆLG
DEU: AUDIO-MODUS AUSWÄHLEN
ESP: SELECCIÓN DE MODO DE AUDIO
FRA: SÉLECTION DU MODE SON
ITA: SELEZIONE MODALITÀ AUDIO
NED: AUDIO-MODUS SELECTEREN
NOR: LYDMODUS VELG
POL: WYBÓR TRYBU AUDIO
POR: SELEÇÃO DE MODO ÁUDIO
SUO: ÄÄITILAN VALINTA
SVE: LJUDLÄGE VÄLJ
DEU: AUDIO-MODUS AUSWÄHLEN
ESP: SELECCIÓN DE MODO DE AUDIO
FRA: SÉLECTION DU MODE SON
ITA: SELEZIONE MODALITÀ AUDIO
NED: AUDIO-MODUS SELECTEREN
NOR: LYDMODUS VELG
POL: WYBÓR TRYBU AUDIO
POR: SELEÇÃO DE MODO ÁUDIO
SUO: ÄÄITILAN VALINTA
SVE: LJUDLÄGE VÄLJ
РУС: РЕЖИМ ЗВУКА ВЫБРАТЬ
한국어: 오디오 모드선택
日本語: オーディオモードの選択
简化字: 音频模式选择

USB PLAY & CHARGE PORT
DAN: USB-OPLADNINGSPORT
DEU: USB AUFLADEN PORT
ESP: PUERTO DE CARGA USB
FRA: PORT D'ALIMENTATION USB
ITA: PORTA DI CARICA USB
NED: USB LADEN POORT
NOR: USB LADE-PORT
POL: USB PORT ŁADOWANIA
POR: USB CARREGAMENTO PORTA
SUO: USB-LATAUSPORTTI
SVE: USB-LADDNINGS PORT
DEU: USB AUFLADEN PORT
ESP: PUERTO DE CARGA USB
FRA: PORT D'ALIMENTATION USB
ITA: PORTA DI CARICA USB
NED: USB LADEN POORT
NOR: USB LADE-PORT
POL: USB PORT ŁADOWANIA
POR: USB CARREGAMENTO PORTA
SUO: USB-LATAUSPORTTI
SVE: USB-LADDNINGS PORT
РУС: USB ЗАРЯДКА ПОРТ
한국어: USB 충전포트
日本語: USB充電ポート
简化字: USB 充电端口

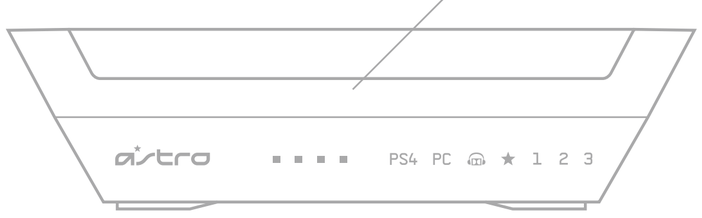

BASE STATION
DAN: BASE STATION
DEU: BASISSTATION
ESP: ESTACIÓN BASE
FRA: STATION DE BASE
ITA: STAZIONE BASE
NED: BASISSTATION
NOR: BASESTASJON
POL: STACJA BAZOWA
POR: ESTAÇÃO BASE
SUO: TUKIASEMA
SVE: BASSTATION
DEU: BASISSTATION
ESP: ESTACIÓN BASE
FRA: STATION DE BASE
ITA: STAZIONE BASE
NED: BASISSTATION
NOR: BASESTASJON
POL: STACJA BAZOWA
POR: ESTAÇÃO BASE
SUO: TUKIASEMA
SVE: BASSTATION
РУС: БАЗОВАЯ СТАНЦИЯ
한국어: 베이스 스테이션
日本語: ベースステーション
简化字: 支架

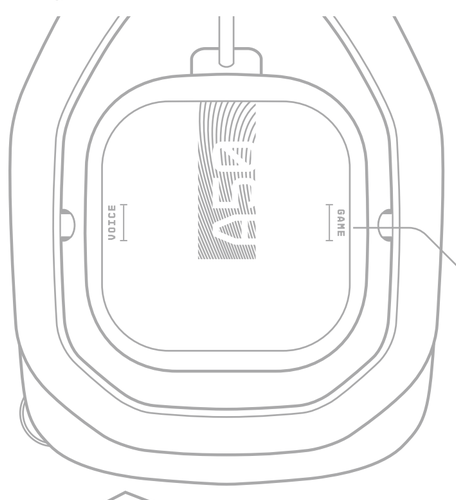

GAME / VOICE BALANCE
DAN: GAME : VOICE BALANCE
DEU: SPIEL:STIMME ABGLEICH
ESP: EQUILIBRIO JUEGO : VOZ
FRA: BALANCE JEU : VOIX
ITA: EQUILIBRIO GIOCO:VOCE
NED: GAME : SPRAAK BALANS
NOR: SPILL-:TALE-BALANSE
POL: BALANS GRY : GŁOSU
POR: JOGO :VOZ EQUILÍBRIO
SUO: PELI-:ÄÄNI-TASAPAINO
SVE: SPEL-:LJUD-BALANS
DEU: SPIEL:STIMME ABGLEICH
ESP: EQUILIBRIO JUEGO : VOZ
FRA: BALANCE JEU : VOIX
ITA: EQUILIBRIO GIOCO:VOCE
NED: GAME : SPRAAK BALANS
NOR: SPILL-:TALE-BALANSE
POL: BALANS GRY : GŁOSU
POR: JOGO :VOZ EQUILÍBRIO
SUO: PELI-:ÄÄNI-TASAPAINO
SVE: SPEL-:LJUD-BALANS
РУС: ИГРЫ : ГОЛОСА БАЛАНС
한국어: 게임 : 음성밸런스
日本語: ゲーム:音声バランス
简化字: 游戏:语音平衡

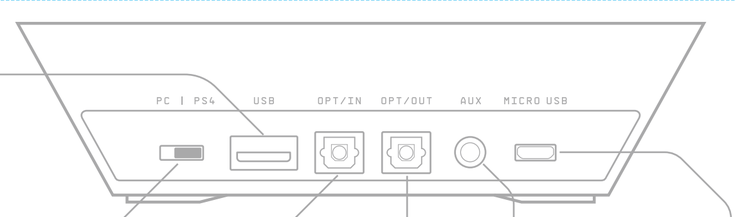

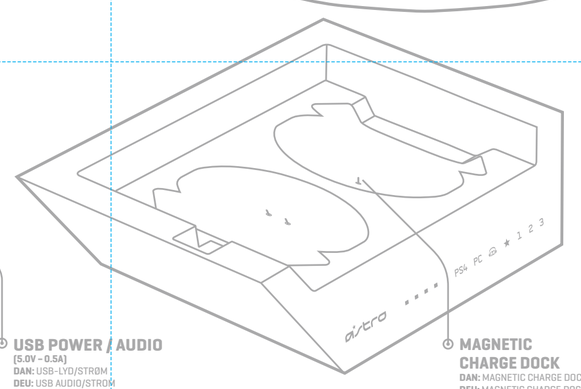

MODE SWITCH
DAN: AUX IN/MIC OUT
DEU: AUX EIN/MIKROFON AUS
ESP: ENTRADA AUX/SALIDA DE MIC
FRA: ENTRÉE AUX/SORTIE MICRO
ITA: INGRESSO AUSILIARIO/USCITA MICROFONO
NED: AUX-INGANG/MICROFOON-UITGANG
NOR: AUX INN/MIKROFON UT
POL: WEJŚCIE AUX/WYJŚCIE MIKROFONU
POR: ENTRADA AUX/SAÍDA MIC
SUO: AUX-SISÄÄNTULO / MIKROFONIN ULOSTULO
SVE: AUX IN / MIKROFON UT
DEU: AUX EIN/MIKROFON AUS
ESP: ENTRADA AUX/SALIDA DE MIC
FRA: ENTRÉE AUX/SORTIE MICRO
ITA: INGRESSO AUSILIARIO/USCITA MICROFONO
NED: OPTISCH IN VAN TV OF CONSOLE
NOR: OPTISK INN FRA TV ELLER KONSOLL
POL: WEJŚCIE OPTYCZNE Z TELEWIZORA LUB KONSOLI
POR: ENTRADA ÓTICA DA TV OU CONSOLA
SUO: OPTINEN SISÄÄNTULO TV:STÄ TAI KONSOLISTA
SVE: OPTISK-INGÅNG FRÅN TV ELLER KONSOL
DEU: OPTISCHER EINGANG VON TV ODER KONSOLE
ESP: ENTRADA ÓPTICA DE LA TELEVISIÓN O CONSOLA
FRA: ENTRÉE OPTIQUE DE LA TV OU CONSOLE
ITA: INGRESSO OTTICO
NED: OPTISCH IN VAN TV OF CONSOLE
NOR: OPTISK INN FRA TV ELLER KONSOLL
POL: WEJŚCIE OPTYCZNE Z TELEWIZORA LUB KONSOLI
POR: ENTRADA ÓTICA DA TV OU CONSOLA
SUO: OPTINEN SISÄÄNTULO TV:STÄ TAI KONSOLISTA
SVE: OPTISK-INGÅNG FRÅN TV ELLER KONSOL
РУС: ОПТИЧЕСКИЙ ВХОД С ТВ ИЛИ С КОНСОЛИ
한국어: TV나 콘솔로부터 OPTICAL IN
日本語: テレビまたはコンソールからの光デジタル入力
简化字: 从电视或游戏机光纤输入

OPTICAL IN PORT
DAN: OPTISK INDGANG FRA TV ELLER KONSOL
DEU: OPTISCHER EINGANG VON TV ODER KONSOLE
ESP: ENTRADA ÓPTICA DE LA TELEVISIÓN O CONSOLA
FRA: ENTRÉE OPTIQUE DE LA TV OU CONSOLE
ITA: INGRESSO OTTICO
NED: OPTISCH IN VAN TV OF CONSOLE
NOR: OPTISK INN FRA TV ELLER KONSOLL
POL: WEJŚCIE OPTYCZNE Z TELEWIZORA LUB KONSOLI
POR: ENTRADA ÓTICA DA TV OU CONSOLA
SUO: OPTINEN SISÄÄNTULO TV:STÄ TAI KONSOLISTA
SVE: OPTISK-INGÅNG FRÅN TV ELLER KONSOL
РУС: СКВОЗНОЙ РАЗЪЕМ ОПТИЧЕСКОГО ВЫХОДА
한국어: OPTICAL OUT 패스스루
日本語: 光デジタル出力パススルー
简化字: 光纤输出传递

OPTICAL OUT PORT
DAN: OPTICAL OUT PASSTHROUGH
DEU: OPTISCHE AUSGANGSDURCHLEITUNG
ESP: PASO DE SALIDA ÓPTICA
FRA: SORTIE OPTIQUE INTERMÉDIAIRE
ITA: USCITA OTTICA PASSANTE
NED: OPTISCH UIT-PASSTHROUGH
NOR: OPTISK UTGJENNOMGANG
POL: PRZELOTOWE WYJŚCIE OPTYCZNE
POR: PASSAGEM DE SAÍDA ÓTICA
SUO: OPTISEN ULOSTULON LÄPIKULKU
SVE: OPTISK-UTGÅNG GENOMSTRÖMNING
DEU: OPTISCHE AUSGANGSDURCHLEITUNG
ESP: PASO DE SALIDA ÓPTICA
FRA: SORTIE OPTIQUE INTERMÉDIAIRE
ITA: USCITA OTTICA PASSANTE
NED: OPTISCH UIT-PASSTHROUGH
NOR: OPTISK UTGJENNOMGANG
POL: PRZELOTOWE WYJŚCIE OPTYCZNE
POR: PASSAGEM DE SAÍDA ÓTICA
SUO: OPTISEN ULOSTULON LÄPIKULKU
SVE: OPTISK-UTGÅNG GENOMSTRÖMNING
РУС: СКВОЗНОЙ РАЗЪЕМ ОПТИЧЕСКОГО ВЫХОДА
한국어: OPTICAL OUT 패스스루
日本語: 光デジタル出力パススルー
简化字: 光纤输出传递

AUX IN / MIC OUT
DAN: AUX IN/MIC OUT
DEU: AUX EIN/MIKROFON AUS
ESP: ENTRADA AUX/SALIDA DE MIC
FRA: ENTRÉE AUX/SORTIE MICRO
ITA: INGRESSO AUSILIARIO/USCITA MICROFONO
NED: AUX-INGANG/MICROFOON-UITGANG
NOR: AUX INN/MIKROFON UT
POL: WEJŚCIE AUX/WYJŚCIE MIKROFONU
POR: ENTRADA AUX/SAÍDA MIC
SUO: AUX-SISÄÄNTULO / MIKROFONIN ULOSTULO
SVE: AUX IN / MIKROFON UT
DEU: AUX EIN/MIKROFON AUS
ESP: ENTRADA AUX/SALIDA DE MIC
FRA: ENTRÉE AUX/SORTIE MICRO
ITA: INGRESSO AUSILIARIO/USCITA MICROFONO
NED: AUX-INGANG/MICROFOON-UITGANG
NOR: AUX INN/MIKROFON UT
POL: WEJŚCIE AUX/WYJŚCIE MIKROFONU
POR: ENTRADA AUX/SAÍDA MIC
SUO: AUX-SISÄÄNTULO / MIKROFONIN ULOSTULO
SVE: AUX IN / MIKROFON UT
РУС: ВХОД AUX IN/ВЫХОД МИКРОФОНА
日本語: AUX入力/マイク出力
한국어: AUX IN/MIC OUT
简化字: AUX 输入/麦克风输出

USB POWER / AUDIO
(5.0V – 0.5A)
DAN: USB-LYD/STRØM
DEU: USB AUDIO/STROM
ESP: ENCENDIDO/AUDIO USB
FRA: USB AUDIO/ALIMENTATION
ITA: USB AUDIO/ALIMENTAZIONE
NED: USB-AUDIO/OPLADEN
NOR: USB LYD/STRØM
POL: USB AUDIO/ZASILANIE
POR: ENTRADA/ÁUDIO USB
SUO: USB-ÄÄNI/-VIRTA
SVE: USB LJUD / STRÖM
DEU: USB AUDIO/STROM
ESP: ENCENDIDO/AUDIO USB
FRA: USB AUDIO/ALIMENTATION
ITA: USB AUDIO/ALIMENTAZIONE
NED: USB-AUDIO/OPLADEN
NOR: USB LYD/STRØM
POL: USB AUDIO/ZASILANIE
POR: ENTRADA/ÁUDIO USB
SUO: USB-ÄÄNI/-VIRTA
SVE: USB LJUD / STRÖM
РУС: АУДИО/ПИТАНИЕ ЧЕРЕЗ USB-ПОРТ
한국어: USB 오디오/전원
日本語: USBオーディオ/電源
简化字: USB 音频/电源

MAGNETIC CHARGE DOCK
DAN: MAGNETIC CHARGE DOCK
DEU: MAGNETIC CHARGE DOCK
ESP: MAGNETIC CHARGE DOCK
FRA: MAGNETIC CHARGE DOCK
ITA: MAGNETIC CHARGE DOCK
NED: MAGNETIC CHARGE DOCK
NOR: MAGNETIC CHARGE DOCK
POL: MAGNETIC CHARGE DOCK
POR: MAGNETIC CHARGE DOCK
SUO: MAGNETIC CHARGE DOCK
SVE: MAGNETIC CHARGE DOCK
DAN: MAGNETIC CHARGE DOCK
DEU: MAGNETIC CHARGE DOCK
ESP: MAGNETIC CHARGE DOCK
FRA: MAGNETIC CHARGE DOCK
ITA: MAGNETIC CHARGE DOCK
NED: MAGNETIC CHARGE DOCK
NOR: MAGNETIC CHARGE DOCK
POL: MAGNETIC CHARGE DOCK
POR: MAGNETIC CHARGE DOCK
SUO: MAGNETIC CHARGE DOCK
РУС: MAGNETIC CHARGE DOCK
한국어: 광케이블
日本語: 光ケーブル
简化字: 光纤电缆

1.0M MICRO USB CABLE
DAN: 1,0M USB MICRO-KABEL
DEU: 1,0M USB-MIKROKABEL
ESP: CABLE MICRO-USB 1.0M
FRA: CÂBLE MICRO-USB 1M
ITA: CAVO MICRO USB 1 M
NED: 1,0M MICRO USB-KABEL
NOR: 1,0M USB-MIKROKABEL
POL: KABEL MIKRO USB 1,0M
POR: CABO MICRO USB 1,0M
SUO: 1,0M USB MICRO -JOHTO
SVE: 1,0M USB MICRO-KABEL
DAN: 1,0M USB MICRO-KABEL
DEU: 1,0M USB-MIKROKABEL
ESP: CABLE MICRO-USB 1.0M
FRA: CÂBLE MICRO-USB 1M
ITA: CAVO MICRO USB 1 M
NED: 1,0M MICRO USB-KABEL
NOR: 1,0M USB-MIKROKABEL
POL: KABEL MIKRO USB 1,0M
POR: CABO MICRO USB 1,0M
SUO: 1,0M USB MICRO -JOHTO
РУС: ПОРТ ЗАРЯДКИ USB 1,0M
한국어: 1.0M USB 마이크로 케이블
日本語: 1.0M USBマイクロケーブル
简化字: 1.0M USB 微电缆

1.0M TOSLINK OPTICAL CABLE
DAN: 1,0M TOSLINK-OPTISK KABEL
DEU: 1,0M TOSLINK OPTISCHES KABEL
ESP: CABLE ÓPTICO TOSLINK 1.0M
FRA: CÂBLE OPTIQUE TOSLINK 1M
ITA: CAVO OTTICO TOSLINK 1 M
NED: 1,0M OPTISCHE TOSLINK-KABEL
NOR: 1,0M TOSLINK OPTISKE KABLER
POL: TOSLINK KABEL OPTYCZNY 1,0 M
POR: CABO ÓTICO TOSLINK 1,0M
SUO: 1,0M TOSLINK OPTINEN JOHTO
SVE: 1,0M TOSLINK OPTISK KABEL
DAN: 1,0M TOSLINK-OPTISK KABEL
DEU: 1,0M TOSLINK OPTISCHES KABEL
ESP: CABLE ÓPTICO TOSLINK 1.0M
FRA: CÂBLE OPTIQUE TOSLINK 1M
ITA: CAVO OTTICO TOSLINK 1 M
NED: 1,0M OPTISCHE TOSLINK-KABEL
NOR: 1,0M TOSLINK OPTISKE KABLER
POL: TOSLINK KABEL OPTYCZNY 1,0 M
POR: CABO ÓTICO TOSLINK 1,0M
SUO: 1,0M TOSLINK OPTINEN JOHTO
РУС: TOSLINK ОПТИЧЕСКИЙ КАБЕЛЬ 1,0M
한국어: 1.0M TOSLINK 광케이블
日本語: 1.0M TOSLINK 光ケーブル
简化字: 1.0M TOSLINK 光纤电缆

BACK

BASE STATION LED BEHAVIOR

MODE INDICATOR
PS4 Mode: White PS4
PC Mode: White PC

PS4 PC

DAN: TILSTANDSINDIKATOR; KONSOLTILSTAND: RØD / PC-TILSTAND: HVID
DEU: MODUSANZEIGE; KONSOLENMODUS: ROT / PC-MODUS: WEIß
ESP: INDICADOR DE MODO; MODO CONSOLA: ROJO / MODO PC: BLANCO
FRA: INDICATEUR DE MODE; MODE CONSOLE : ROUGE / MODE PC : BLANC
ITA: INDICATORE DI MODALITÀ; MODALITÀ CONSOLE: ROSSO / MODALITÀ PC: BIANCO
NED: INDICATOR-MODUS; CONSOLE-MODUS: ROOD / PC-MODUS: WIT
NOR: MODUS-INDIKATOR; KONSOLLMODUS: RØD / PC-MODUS: HVIT
POL: WSKAŹNIK TRYBU; TRYB KONSOLI: CZERWONY/ TRYB PC: BIAŁY
POR: INDICADOR DE MODO; MODO DE CONSOLA: VERMELHO / MODO PC: BRANCO
SUO: TILAN MERKKIVALO; KONSOLITILA: PUNAINEN/ PC-TILA: VALKOINEN
SVE: LÅGESINDIKATOR; KONSOLLÅGE: RÖD / PC-LÅGE: VIT
DEU: MODUSANZEIGE; KONSOLENMODUS: ROT / PC-MODUS: WEIß
ESP: INDICADOR DE MODO; MODO CONSOLA: ROJO / MODO PC: BLANCO
FRA: INDICATEUR DE MODE; MODE CONSOLE : ROUGE / MODE PC : BLANC
ITA: INDICATORE DI MODALITÀ; MODALITÀ CONSOLE: ROSSO / MODALITÀ PC: BIANCO
NED: INDICATOR-MODUS; CONSOLE-MODUS: ROOD / PC-MODUS: WIT
NOR: MODUS-INDIKATOR; KONSOLLMODUS: RØD / PC-MODUS: HVIT
POL: WSKAŹNIK TRYBU; TRYB KONSOLI: CZERWONY/ TRYB PC: BIAŁY
POR: INDICADOR DE MODO; MODO DE CONSOLA: VERMELHO / MODO PC: BRANCO
SUO: TILAN MERKKIVALO; KONSOLITILA: PUNAINEN/ PC-TILA: VALKOINEN
SVE: LÅGESINDIKATOR ; KONSOLLÅGE: RÖD / PC-LÅGE: VIT
РУС: ИНДИКАТОР РЕЖИМА; ИНДИКАТОР КОНСОЛИ: КРАСНЫЙ / РЕЖИМ ПК: БЕЛЫЙ
한국어: 방식 표시 ; 콘솔 방식: 빨간색 / PC 방식: 흰색
日本語: モード表示 ; コンソールモード: 赤 / PCモード: 白
简化字: 稳定红色 ; 打开/全功率/USB 充电

DOLBY
White Headphone: Dolby On
White Star:
Source Audio Passthrough On

DAN: DOLBY; TÆNDT: HVID / SLUKKET: INGET LED-LYS
DEU: DOLBY; AN: WEIß / AUS: KEINE LED LEUCHTET AUF
ESP: DOLBY; ENCENDIDO: BLANCO / APAGADO: NO SE ILUMINA NINGÚN LED
FRA: DOLBY; ALLUMÉ : BLANC / ÉTEINT : PAS DE LED ALLUMÉE
ITA: DOLBY; ACCESO: BIANCO / SPENTO: NESSUN LED ILLUMINATO
NED: DOLBY; AAN: WIT / UIT: GEEN LED VERLICHT
NOR: DOLBY; PÅ: HVIT / AV: INGEN LED-BELYSNING
POL: DOLBY; WŁ.: BIAŁY / WYŁ.: BRAK PODŚWIETLENIA DIOD LED
POR: DOLBY; LIGADO: BRANCO / DESLIGADO: LED NÃO ILUMINADO
SUO: DOLBY; PÄÄLLÄ: VALKOINEN / POIS PÄÄLTÄ: LED-VALO EI PALA
SVE: DOLBY; PÅ VIT / AV: INGEN LED UPPLYST
DEU: DOLBY; AN: WEIß / AUS: KEINE LED LEUCHTET AUF
ESP: DOLBY; ENCENDIDO: BLANCO / APAGADO: NO SE ILUMINA NINGÚN LED
FRA: DOLBY; ALLUMÉ : BLANC / ÉTEINT : PAS DE LED ALLUMÉE
ITA: DOLBY; ACCESO: BIANCO / SPENTO: NESSUN LED ILLUMINATO
NED: DOLBY; AAN: WIT / UIT: GEEN LED VERLICHT
NOR: DOLBY; PÅ: HVIT / AV: INGEN LED-BELYSNING
POL: DOLBY; WŁ.: BIAŁY / WYŁ.: BRAK PODŚWIETLENIA DIOD LED
POR: DOLBY; LIGADO: BRANCO / DESLIGADO: LED NÃO ILUMINADO
SUO: DOLBY; PÄÄLLÄ: VALKOINEN / POIS PÄÄLTÄ: LED-VALO EI PALA
SVE: DOLBY; PÅ VIT / AV: INGEN LED UPPLYST
РУС: DOLBY; ВКЛ.: БЕЛЫЙ / ВЫКЛ.: БЕЗ ПОДСВЕТКИ СИД
한국어: DOLBY; 켜짐: 흰색 / 꺼짐: LED 조명 없음
日本語: DOLBY; オン: 白 / オフ: LEDの点灯はありません
简化字: DOLBY; 开: 白色 / 关: 非 LED 照明

BATTERY STATUS
Charge Level

25%
50%
75%
100%

DAN: BLINKER RØDT + HØRBART BIP; LAV STRØMSTYRKE / OPLAD STRAKS
DEU: BLINKT ROT + AKUSTISCHER PIEPTON; STROM GERING / SOFORT AUFLADEN
ESP: ROJO TITILANTE + BIP AUDIBLE; BATERÍA BAJA / CARGAR INMEDIATAMENTE
FRA: CLIGNOTEMENT ROUGE + BIP AUDIBLE; BATTERIE FAIBLE / RECHARGEZ IMMÉDIATEMENT
ITA: ROSSO LAMPEGGIANTE + SEGNALE ACUSTICO; UNITÀ SCARICA / CARICARE IMMEDIATAMENTE
NED: KNIPPEREND ROOD + PIEPTOON; LAAG VERMOGEN / ONMIDDELLIJK LADEN
NOR: BLINKER RØDT + LYDPIP; LAV STRØM / LAD UMIDDELBART
POL: KONTROLKA MIGAJĄCA NA CZERWONO + SYGNAŁ DŹWIĘKOWY; NISKIE NAPIĘCIE ZASILANIA / NATYCHMIAST DOŁADOWAĆ
POR: PISCAR A VERMELHO + BIP AUDÍVEL; CARGA BAIXA / CARREGAR IMEDIATAMENTE
SUO: VILKKUVA PUNAINEN + KUULUVA ÄÄNIMERKKI; LÄHES TYHJÄ AKKU / LATAA HETI
SVE: BLINKANDE RÖD + HÖRBAR LJUDSIGNAL ; LÅG LADDNING / LADDA OMEDELBART
ESP: ROJO TITILANTE + BIP AUDIBLE; BATERÍA BAJA / CARGAR INMEDIATAMENTE
FRA: CLIGNOTEMENT ROUGE + BIP AUDIBLE; BATTERIE FAIBLE / RECHARGEZ IMMÉDIATEMENT
ITA: ROSSO LAMPEGGIANTE + SEGNALE ACUSTICO; UNITÀ SCARICA / CARICARE
NED: KNIPPEREND ROOD + PIEPTOON; LAAG VERMOGEN / ONMIDDELLIJK LADEN
NOR: BLINKER RØDT + LYDPIP; LAV STRØM / LAD UMIDDELBART
POL: KONTROLKA MIGAJĄCA NA CZERWONO + SYGNAŁ DŹWIĘKOWY; ZASILANIA /DOŁADOWAĆ
POR: PISCAR A VERMELHO + BIP AUDÍVEL; CARGA BAIXA / CARREGAR IMEDIATAMENTE
SUO: VILKKUVA PUNAINEN + KUULUVA ÄÄNIMERKKI; LÄHES TYHJÄ AKKU / LATAA HETI
SVE: BLINKANDE RÖD + HÖRBAR LJUDSIGNAL
РУС: МИГАЮЩИЙ КРАСНЫЙ СИГНАЛ + ЗВУКОВОЙ СИГНАЛ НИЗКИЙ УРОВЕНЬ ЗАРЯДКИ / ЗАРЯДИТЕ НЕМЕДЛЕННО
한국어: 빨간색 깜박임 + 경고음 저전력 / 즉시 충전
日本語: 赤の点滅 + 発信音
バッテリー残量低/すぐに充電が必要
简化字: 稳定红色 / 电子音 / 10%的充电

Solid Red + Audible Tone
10% charge

DAN: LYSER RØD, UDEN AT BLINKE + HØRBAR TONE / 10% OPLADNING
DEU: DAUERHAFT ROT + AKUSTISCHER TON / 10% BATTERIEVERMÖGEN
ESP: ROJO SÓLIDO + TONO AUDIBLE / 10% DE CARGA
FRA: ROUGE CONTINU + SON AUDIBLE / BATTERIE À 10 %
ITA: ROSSO FISSO + SEGNALE ACUSTICO / 10% DI CARICA
NED: CONTINUE ROOD + GELUIDSSIGNAAL / 10% OPGELADEN
NOR: LYSENDE RØD + LYDSIGNAL / 10 % BATTERI
POL: JEDNOSTAJNY CZERWONY + SYGNAŁ DŹWIĘKOWY POZIOM NAŁADOWANIA 10%
POR: VERMELHO VIVO + TOM AUDÍVEL / 10% CARGA
SUO: TASAISEN PUNAINEN + ÄÄNIMERKKI / 10% VARAUSTA JÄLJELLÄ
SVE: SOLID RÖD + HÖRBAR TON / 10% LADDNING
DEU: DAUERHAFT ROT + AKUSTISCHER TON / 10% BATTERIEVERMÖGEN
ESP: ROJO SÓLIDO + TONO AUDIBLE / 10% DE CARGA
FRA: ROUGE CONTINU + SON AUDIBLE / BATTERIE À 10 %
ITA: ROSSO FISSO + SEGNALE ACUSTICO / 10% DI CARICA
NED: CONTINUE ROOD + GELUIDSSIGNAAL 10% OPGELADEN
NOR: LYSENDE RØD + LYDSIGNAL / 10 % BATTERI
POL: JEDNOSTAJNY CZERWONY + SYGNAŁ DŹWIĘKOWY POZIOM NAŁADOWANIA 10%
POR: VERMELHO VIVO + TOM AUDÍVEL / 10% CARGA
SUO: TASAISEN PUNAINEN + ÄÄNIMERKKI 10% VARAUSTA JÄLJELLÄ
SVE: SOLID RÖD + HÖRBAR TON / 10% LADDNING
РУС: ПОСТОЯННЫЙ КРАСНЫЙ СВЕТ + ЗВУКОВОЙ СИГНАЛ УРОВЕНЬ ЗАРЯДКИ 10%
한국어: 진한 빨간색 + 가청 톤 / 10% 충전
日本語: 赤色点滅と電子音 / 10%の充電
简化字: 稳定红色+蜂鸣声 / 电余量 10%

Blink Red + Audible Tone
5% charge

DAN: BLINKER RØDT + HØRBAR TONE / 5% OPLADNING
DEU: ROT BLINKEND + AKUSTISCHER TON / 5% BATTERIEVERMÖGEN
ESP: ROJO PARPADEANTE + TONO AUDIBLE / 5% DE CARGA
FRA: ROUGE CLIGNOTANT + SON AUDIBLE BATTERIE À 5%
ITA: ROSSO LAMPEGGIANTE + SEGNALE ACUSTICO 5% DI CARICA
NED: KNIPPEREND ROOD + GELUIDSSIGNAAL / 5% OPGELADEN
NOR: BLINKENDE RØD + LYDSIGNAL / 5 % BATTERI
POL: MIGAJĄCY CZERWONY + SYGNAŁ DŹWIĘKOWY POZIOM NAŁADOWANIA 5%
POR: VERMELHO A PISCAR + TOM AUDÍVEL / 5% CARGA
SUO: VILKKUVA PUNAINEN + ÄÄNIMERKKI 5% VARAUSTA JÄLJELLÄ
SVE: BLINKA RÖD + HÖRBAR TON / 5% LADDNING
DEU: ROT BLINKEND + AKUSTISCHER TON / 5% BATTERIEVERMÖGEN
ESP: ROJO PARPADEANTE + TONO AUDIBLE / 5% DE CARGA
FRA: ROUGE CLIGNOTANT + SON AUDIBLE BATTERIE À 5%
ITA: ROSSO LAMPEGGIANTE + SEGNALE ACUSTICO 5% DI CARICA
NED: KNIPPEREND ROOD + GELUIDSSIGNAAL / 5% OPGELADEN
NOR: BLINKENDE RØD + LYDSIGNAL / 5 % BATTERI
POL: MIGAJĄCY CZERWONY + SYGNAŁ DŹWIĘKOWY POZIOM NAŁADOWANIA 5%
POR: VERMELHO A PISCAR + TOM AUDÍVEL / 5% CARGA
SUO: VILKKUVA PUNAINEN + ÄÄNIMERKKI 5% VARAUSTA JÄLJELLÄ
SVE: BLINKA RÖD + HÖRBAR TON / 5% LADDNING
РУС: МИГАЮЩИЙ КРАСНЫЙ СВЕТ + ЗВУКОВОЙ СИГНАЛ УРОВЕНЬ ЗАРЯДКИ 5%
한국어: 깜박이는 빨간색 +가청 톤 / 5% 충전
日本語: 赤色点滅と電子音 / 5%充電
简化字: 闪烁红色+蜂鸣声 / 电余量 5%

EQ Mode
White 1. ASTRO
White 2. Pro
White 3. Studio

1 2 3

DAN: BLINKER RØDT + HØRBAR TONE / 5% OPLADNING
DEU: ROT BLINKEND + AKUSTISCHER TON / 5% BATTERIEVERMÖGEN
ESP: ROJO PARPADEANTE + TONO AUDIBLE / 5% DE CARGA
FRA: ROUGE CLIGNOTANT + SON AUDIBLE BATTERIE À 5%
ITA: ROSSO LAMPEGGIANTE + SEGNALE ACUSTICO 5% DI CARICA
NED: KNIPPEREND ROOD + GELUIDSSIGNAAL / 5% OPGELADEN
NOR: BLINKENDE RØD + LYDSIGNAL / 5 % BATTERI
POL: MIGAJĄCY CZERWONY + SYGNAŁ DŹWIĘKOWY POZIOM NAŁADOWANIA 5%
POR: VERMELHO A PISCAR + TOM AUDÍVEL / 5% CARGA
SUO: VILKKUVA PUNAINEN + ÄÄNIMERKKI 5% VARAUSTA JÄLJELLÄ
SVE: BLINKA RÖD + HÖRBAR TON / 5% LADDNING
DEU: ROT BLINKEND + AKUSTISCHER TON / 5% BATTERIEVERMÖGEN
ESP: ROJO PARPADEANTE + TONO AUDIBLE / 5% DE CARGA
FRA: ROUGE CLIGNOTANT + SON AUDIBLE BATTERIE À 5%
ITA: ROSSO LAMPEGGIANTE + SEGNALE ACUSTICO 5% DI CARICA
NED: KNIPPEREND ROOD + GELUIDSSIGNAAL / 5% OPGELADEN
NOR: BLINKENDE RØD + LYDSIGNAL / 5 % BATTERI
POL: MIGAJĄCY CZERWONY + SYGNAŁ DŹWIĘKOWY POZIOM NAŁADOWANIA 5%
POR: VERMELHO A PISCAR + TOM AUDÍVEL / 5% CARGA
SUO: VILKKUVA PUNAINEN + ÄÄNIMERKKI 5% VARAUSTA JÄLJELLÄ
SVE: BLINKA RÖD + HÖRBAR TON / 5% LADDNING
РУС: МИГАЮЩИЙ КРАСНЫЙ СВЕТ + ЗВУКОВОЙ СИГНАЛ УРОВЕНЬ ЗАРЯДКИ 5%
한국어: 깜박이는 빨간색 +가청 톤 / 5% 충전
日本語: 赤色点滅と電子音 / 5%充電
简化字: 闪烁红色+蜂鸣声 / 电余量 5%

PS4 SETUP

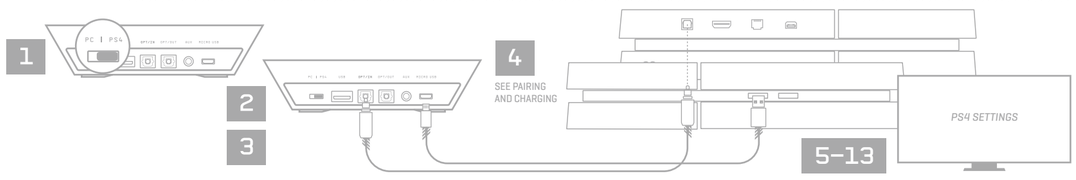

ENG
1. Ensure the Mode Switch on the Base Station is set to PS4.
2. Plug Micro end of the Micro USB cable into the Base Station & the USB end into the PlayStation 4.
3. Plug TOSLink Optical Cable into the PS4 Optical port & plug the other end into the Optical In port on the the Base Station.
4. Your A50 Wireless Headset comes pre-paired to the Base Station. However, you will need to charge your headset before use. To do so, use both hands to reseat the headset into the Base Station.
5. Once the Base Station is connected to the PS4, the Base Station will detect automatically as a USB device.
6. From the Dashboard, navigate to 'Settings' then select 'Devices' and select 'Audio Devices.'
7. Ensure Input Device is set to USB Headset (Astro A50 Voice) and the Output Device is set to the same.
8. Ensure the Output to Headphones is set to "Chat Audio."
9. Navigate back to the Settings menu, then select "Sound and Screen."
10. Navigate to Audio Output Settings, and ensure Primary Output Port is set to Digital Out (Optical) and Audio Format (Priority) is set to Bitstream (Dolby).
11. Change the Input and Output Device to USB Headset (ASTRO Wireless Transmitter).
12. To toggle to a new EQ preset, press the EQ Button until the desired preset is selected.
13. That's it! Your A50 Wireless Headset and PS4 are set up and ready to game!

DAN
1. Ensure the Mode Switch on the Base Station is set to PS4.
2. Plug Micro end of the Micro USB cable into the Base Station & the USB end into the PlayStation 4.
3. Plug TOSLink Optical Cable into the PS4 Optical port & plug the other end into the Optical In port on the the Base Station.
4. Your A50 Wireless Headset comes pre-paired to the Base Station. However, you will need to charge your headset before use. To do so, use both hands to reseat the headset into the Base Station.
5. Once the Base Station is connected to the PS4, the Base Station will detect automatically as a USB device.
6. From the Dashboard, navigate to 'Settings' then select 'Devices' and select 'Audio Devices.'
7. Ensure Input Device is set to USB Headset (Astro A50 Voice) and the Output Device is set to the same.
8. Ensure the Output to Headphones is set to "Chat Audio."
9. Navigate back to the Settings menu, then select "Sound and Screen."
10. Navigate to Audio Output Settings, and ensure Primary Output Port is set to Digital Out (Optical) and Audio Format (Priority) is set to Bitstream (Dolby).
11. Change the Input and Output Device to USB Headset (ASTRO Wireless Transmitter).
12. To toggle to a new EQ preset, press the EQ Button until the desired preset is selected.
13. That's it! Your A50 Wireless Headset and PS4 are set up and ready to game!

DEU
1. Ensure the Mode Switch on the Base Station is set to PS4.
2. Plug Micro end of the Micro USB cable into the Base Station & the USB end into the PlayStation 4.
3. Plug TOSLink Optical Cable into the PS4 Optical port & plug the other end into the Optical In port on the the Base Station.
4. Your A50 Wireless Headset comes pre-paired to the Base Station. However, you will need to charge your headset before use. To do so, use both hands to reseat the headset into the Base Station.
5. Once the Base Station is connected to the PS4, the Base Station will detect automatically as a USB device.
6. From the Dashboard, navigate to 'Settings' then select 'Devices' and select 'Audio Devices.'
7. Ensure Input Device is set to USB Headset (Astro A50 Voice) and the Output Device is set to the same.
8. Ensure the Output to Headphones is set to "Chat Audio."
9. Navigate back to the Settings menu, then select "Sound and Screen."
10. Navigate to Audio Output Settings, and ensure Primary Output Port is set to Digital Out (Optical) and Audio Format (Priority) is set to Bitstream (Dolby).
11. Change the Input and Output Device to USB Headset (ASTRO Wireless Transmitter).
12. To toggle to a new EQ preset, press the EQ Button until the desired preset is selected.
13. That's it! Your A50 Wireless Headset and PS4 are set up and ready to game!

ESP
1. Ensure the Mode Switch on the Base Station is set to PS4.
2. Plug Micro end of the Micro USB cable into the Base Station & the USB end into the PlayStation 4.
3. Plug TOSLink Optical Cable into the PS4 Optical port & plug the other end into the Optical In port on the the Base Station.
4. Your A50 Wireless Headset comes pre-paired to the Base Station. However, you will need to charge your headset before use. To do so, use both hands to reseat the headset into the Base Station.
5. Once the Base Station is connected to the PS4, the Base Station will detect automatically as a USB device.
6. From the Dashboard, navigate to 'Settings' then select 'Devices' and select 'Audio Devices.'
7. Ensure Input Device is set to USB Headset (Astro A50 Voice) and the Output Device is set to the same.
8. Ensure the Output to Headphones is set to "Chat Audio."
9. Navigate back to the Settings menu, then select "Sound and Screen."
10. Navigate to Audio Output Settings, and ensure Primary Output Port is set to Digital Out (Optical) and Audio Format (Priority) is set to Bitstream (Dolby).
11. Change the Input and Output Device to USB Headset (ASTRO Wireless Transmitter).
12. To toggle to a new EQ preset, press the EQ Button until the desired preset is selected.
13. That's it! Your A50 Wireless Headset and PS4 are set up and ready to game!

FRA
1. Ensure the Mode Switch on the Base Station is set to PS4.
2. Plug Micro end of the Micro USB cable into the Base Station & the USB end into the PlayStation 4.
3. Plug TOSLink Optical Cable into the PS4 Optical port & plug the other end into the Optical In port on the the Base Station.
4. Your A50 Wireless Headset comes pre-paired to the Base Station. However, you will need to charge your headset before use. To do so, use both hands to reseat the headset into the Base Station.
5. Once the Base Station is connected to the PS4, the Base Station will detect automatically as a USB device.
6. From the Dashboard, navigate to 'Settings' then select 'Devices' and select 'Audio Devices.'
7. Ensure Input Device is set to USB Headset (Astro A50 Voice) and the Output Device is set to the same.
8. Ensure the Output to Headphones is set to "Chat Audio."
9. Navigate back to the Settings menu, then select "Sound and Screen."
10. Navigate to Audio Output Settings, and ensure Primary Output Port is set to Digital Out (Optical) and Audio Format (Priority) is set to Bitstream (Dolby).
11. Change the Input and Output Device to USB Headset (ASTRO Wireless Transmitter).
12. To toggle to a new EQ preset, press the EQ Button until the desired preset is selected.
13. That's it! Your A50 Wireless Headset and PS4 are set up and ready to game!

ITA
1. Ensure the Mode Switch on the Base Station is set to PS4.
2. Plug Micro end of the Micro USB cable into the Base Station & the USB end into the PlayStation 4.
3. Plug TOSLink Optical Cable into the PS4 Optical port & plug the other end into the Optical In port on the the Base Station.
4. Your A50 Wireless Headset comes pre-paired to the Base Station. However, you will need to charge your headset before use. To do so, use both hands to reseat the headset into the Base Station.
5. Once the Base Station is connected to the PS4, the Base Station will detect automatically as a USB device.
6. From the Dashboard, navigate to 'Settings' then select 'Devices' and select 'Audio Devices.'
7. Ensure Input Device is set to USB Headset (Astro A50 Voice) and the Output Device is set to the same.
8. Ensure the Output to Headphones is set to "Chat Audio."
9. Navigate back to the Settings menu, then select "Sound and Screen."
10. Navigate to Audio Output Settings, and ensure Primary Output Port is set to Digital Out (Optical) and Audio Format (Priority) is set to Bitstream (Dolby).
11. Change the Input and Output Device to USB Headset (ASTRO Wireless Transmitter).
12. To toggle to a new EQ preset, press the EQ Button until the desired preset is selected.
13. That's it! Your A50 Wireless Headset and PS4 are set up and ready to game!

NED
1. Ensure the Mode Switch on the Base Station is set to PS4.
2. Plug Micro end of the Micro USB cable into the Base Station & the USB end into the PlayStation 4.
3. Plug TOSLink Optical Cable into the PS4 Optical port & plug the other end into the Optical In port on the the Base Station.
4. Your A50 Wireless Headset comes pre-paired to the Base Station. However, you will need to charge your headset before use. To do so, use both hands to reseat the headset into the Base Station.
5. Once the Base Station is connected to the PS4, the Base Station will detect automatically as a USB device.
6. From the Dashboard, navigate to 'Settings' then select 'Devices' and select 'Audio Devices.'
7. Ensure Input Device is set to USB Headset (Astro A50 Voice) and the Output Device is set to the same.
8. Ensure the Output to Headphones is set to "Chat Audio."
9. Navigate back to the Settings menu, then select "Sound and Screen."
10. Navigate to Audio Output Settings, and ensure Primary Output Port is set to Digital Out (Optical) and Audio Format (Priority) is set to Bitstream (Dolby).
11. Change the Input and Output Device to USB Headset (ASTRO Wireless Transmitter).
12. To toggle to a new EQ preset, press the EQ Button until the desired preset is selected.
13. That's it! Your A50 Wireless Headset and PS4 are set up and ready to game!

NOR
1. Ensure the Mode Switch on the Base Station is set to PS4.
2. Plug Micro end of the Micro USB cable into the Base Station & the USB end into the PlayStation 4.
3. Plug TOSLink Optical Cable into the PS4 Optical port & plug the other end into the Optical In port on the the Base Station.
4. Your A50 Wireless Headset comes pre-paired to the Base Station. However, you will need to charge your headset before use. To do so, use both hands to reseat the headset into the Base Station.
5. Once the Base Station is connected to the PS4, the Base Station will detect automatically as a USB device.
6. From the Dashboard, navigate to 'Settings' then select 'Devices' and select 'Audio Devices.'
7. Ensure Input Device is set to USB Headset (Astro A50 Voice) and the Output Device is set to the same.
8. Ensure the Output to Headphones is set to "Chat Audio."
9. Navigate back to the Settings menu, then select "Sound and Screen."
10. Navigate to Audio Output Settings, and ensure Primary Output Port is set to Digital Out (Optical) and Audio Format (Priority) is set to Bitstream (Dolby).
11. Change the Input and Output Device to USB Headset (ASTRO Wireless Transmitter).
12. To toggle to a new EQ preset, press the EQ Button until the desired preset is selected.
13. That's it! Your A50 Wireless Headset and PS4 are set up and ready to game!

POL
1. Ensure the Mode Switch on the Base Station is set to PS4.
2. Plug Micro end of the Micro USB cable into the Base Station & the USB end into the PlayStation 4.
3. Plug TOSLink Optical Cable into the PS4 Optical port & plug the other end into the Optical In port on the the Base Station.
4. Your A50 Wireless Headset comes pre-paired to the Base Station. However, you will need to charge your headset before use. To do so, use both hands to reseat the headset into the Base Station.
5. Once the Base Station is connected to the PS4, the Base Station will detect automatically as a USB device.
6. From the Dashboard, navigate to 'Settings' then select 'Devices' and select 'Audio Devices.'
7. Ensure Input Device is set to USB Headset (Astro A50 Voice) and the Output Device is set to the same.
8. Ensure the Output to Headphones is set to "Chat Audio."
9. Navigate back to the Settings menu, then select "Sound and Screen."
10. Navigate to Audio Output Settings, and ensure Primary Output Port is set to Digital Out (Optical) and Audio Format (Priority) is set to Bitstream (Dolby).
11. Change the Input and Output Device to USB Headset (ASTRO Wireless Transmitter).
12. To toggle to a new EQ preset, press the EQ Button until the desired preset is selected.
13. That's it! Your A50 Wireless Headset and PS4 are set up and ready to game!

HEADSET LED BEHAVIOR

INDICATOR LED
Amber: Charging
White: Power On

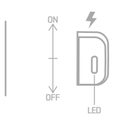

DAN: INDIKATOR LED / RAVGUL: OPLADER / RØD: TÆNDT
DEU: ANZEIGE LED: BERNSTEIN: LÄDT AUF / ROT: STROM EINGESCHALTET
ESP: LED INDICADOR / ÁMBAR: EN CARGA / ROJO: ENCENDIDO
FRA: LED INDICATEUR / ORANGE : EN CHARGEMENT / ROUGE : ALLUMÉ
ITA: INDICATORE LED / AMBRA: IN CARICA / ROSSO: ACCESO
NED: LED-INDICATOR; ORANJE: WORDT OPGELADEN / ROOD: STAAT AAN
NOR: INDIKATOR-LED / GULT: LADER / RØD: STRØM PÅ
POL: WSKAŹNIK LED: POMARAŃCZOWY: LADOWANIE / CZERWONY: ZASILANIE WŁĄCZONE
POR: INDICADOR LED / ÁMBAR: A CARREGAR / VERMELHO: LIGADO
SUO: LED-MERKKIVALO: ORANSSI: AKKU LATAUTUU / PUNAINEN: VIRTA PÄÄLLÄ
SVE: LED INDIKATOR / GUL: LADDNING / RÖD: STRÖM PÅ
DEU: ANZEIGE LED: BERNSTEIN: LÄDT AUF / ROT: STROM EINGESCHALTET
ESP: LED INDICADOR / ÁMBAR: EN CARGA / ROJO: ENCENDIDO
FRA: LED INDICATEUR / ORANGE : EN CHARGEMENT / ROUGE : ALLUMÉ
ITA: INDICATORE LED / AMBRA: IN CARICA / ROSSO: ACCESO
NED: LED-INDICATOR / ORANJE: WORDT OPGELADEN / ROOD: STAAT AAN
NOR: INDIKATOR-LED / GULT: LADER / RØD: STRØM PÅ
POL: WSKAŹNIK LED: POMARAŃCZOWY: LADOWANIE / CZERWONY: ZASILANIE WŁĄCZONE
POR: INDICADOR LED: ÁMBAR: A CARREGAR / VERMELHO: LIGADO
SUO: LED-MERKKIVALO: ORANSSI: AKKU LATAUTUU / PUNAINEN: VIRTA PÄÄLLÄ
SVE: LED INDIKATOR: GUL: LADDNING / RÖD: STRÖM PÅ
РУС: ИНДИКАТОР СИД: ЖЕЛТЫЙ: ЗАРЯЖАЕТСЯ / КРАСНЫЙ: ПИТАНИЕ ВКЛ.
한국어: 표시 LED: 주황색: 충전중 / 빨간색: 전원 켜진 상태
日本語: 表示LED; 琥珀色: 充電中 / 赤: 起動
简化字: 显示器 LED; 琥珀色: 正在充电 / 红色: 电源开

PAIRING AND CHARGING

***BEFORE 1ST USE, CHARGE HEADSET FULLY.** **DAN:** KONTROLLÉR, AT HEADSETTET ER FULDT OPLADET, INDEN DET TAGES I BRUG FØRSTE GANG. **DEU:** VOR DEM ERSTGEBRAUCH DAS HEADSET VOLLSTÄNDIG AUFLADEN. **ESP:** CARGAR POR COMPLETO LOS AURICULARES CON MICRÓFONO ANTES DE SU PRIMER USO. **FRA:** AVANT LA PREMIÈRE UTILISATION, CHARGEZ COMPLÈTEMENT LE CASQUE. **ITA:** PRIMA DEL PRIMO UTILIZZO, CARICARE COMPLETAMENTE LA CUFFIA. **NED:** LAAD DE HEADSET VOLLEDIG OP VÓÓR HET EERSTE GEBRUIK. **NOR:** FØR FØRSTEGANGSBRUK MÅ HEADSETTET LADES HELT OPP. **POL:** PRZED PRZYSTĄPIENIEM DO PIERWSZEGO KORZYSTANIA NALEŻY CAŁKOWICIE NAŁADOWAĆ SŁUCHAWKI. **POR:** ANTES DA PRIMEIRA UTILIZAÇÃO, CARREGUE O AURICULAR NA TOTALIDADE. **SUO:** LATAA KUULOKKEIDEN AKKU TÄYTEEN ENNEN ENSIMMÄISTÄ KÄYTTÖKERTAA. **SVE:** LADDA HEADSETET HELT FÖRE FÖRSTA ANVÄNDING. **DAN:** ADET, INDEN DET TAGES I BRUG FØRSTE GANG. **DEU:** VOR DEM ERSTGEBRAUCH DAS HEADSET VOLLSTÄNDIG AUFLADEN. **ESP:** CARGAR POR COMPLETO LOS AURICULARES CON MICRÓFONO ANTES DE SU PRIMER USO. **FRA:** AVANT LA PREMIÈRE UTILISATION, CHARGEZ COMPLÈTEMENT LE CASQUE. **ITA:** PRIMA DEL PRIMO UTILIZZO, CARICARE COMPLETAMENTE LA CUFFIA. **NED:** LAAD DE HEADSET VOLLEDIG OP VÓÓR HET EERSTE GEBRUIK. **NOR:** FØR FØRSTEGANGSBRUK MÅ HEADSETTET LADES HELT OPP. **POL:** PRZED PRZYSTĄPIENIEM DO PIERWSZEGO KORZYSTANIA NALEŻY CAŁKOWICIE NAŁADOWAĆ SŁUCHAWKI. **POR:** ANTES DA PRIMEIRA UTILIZAÇÃO, CARREGUE O AURICULAR NA TOTALIDADE. **SUO:** LATAA KUULOKKEIDEN AKKU TÄYTEEN ENNEN ENSIMMÄISTÄ KÄYTTÖKERTAA. **SVE:** LADDA HEADSETET HELT FÖRE FÖRSTA ANVÄNDING. **DAN:** ADET, INDEN DET TAGES I BRUG

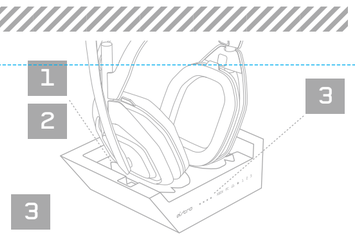

1
ALIGN MICROPHONE WITH MIC SLOT, THEN PLACE HEADSET ONTO BASE STATION.
DAN: PLACÉR MIKROFONEN, SÅ DEN FLUGTER MED MIKROFONINDGANGEN, OG PLACÉR DEREFTER HEADSETTET PÅ DOCKEN.
DEU: DAS MIKROFON MIT DEM MIKROFONSCHLITZ AUSRICHTEN, DANN DAS HEADSET AUF DER BASISSTATION ABLEGEN.
ESP: ALINEAR EL MICRÓFONO CON LA FICHA PARA MICRÓFONO Y COLOCAR LOS AURICULARES EN LA ESTACIÓN BASE.
FRA: ALIGNEZ LE MICROPHONE AVEC L'EMPLACEMENT QUI LUI EST RÉSERVÉ, PUIS PLACEZ LE CASQUE SUR LA STATION DE BASE.
ITA: ALLINEARE IL MICROFONO CON LO SLOT E POSIZIONARE LE CUFFIE SULLA STAZIONE BASE.
NED: LIJN DE MICROFOON UIT MET MIC-SLEUF [MIC SLOT] EN PLAATS DE HEADSET DAN OP HET BASISSTATION.
NOR: SETT MIKROFONEN I MIKROFONINNGANGEN OG SETT HEADSETTET I BASESTASJONEN.
POL: USTAW MIKROFON W JEDNEJ LINII Z GNIAZDEM, A NASTĘPNIE UMIEŚĆ SŁUCHAWKI W STACJI BAZOWEJ.
POR: ALINHE O MICROFONE COM A RANHURA DO MIC, E DEPOIS COLOQUE O AURICULAR NA ESTAÇÃO BASE.
SUO: ASETA MIKROFONI MIKKUIRAAN JA SIJOITA KUULOKKEET TUKIASEMAAN.
SVE: RÄTA UPP MIKROFONEN MED MIKROFONPLATSEN OCH PLACERA HEADSETET PÅ BASSTATIONEN.
DEU: DAS MIKROFON MIT DEM MIKROFONSCHLITZ AUSRICHTEN, DANN DAS HEADSET AUF DER BASISSTATION ABLEGEN.
ESP: ALINEAR EL MICRÓFONO CON LA FICHA PARA MICRÓFONO Y COLOCAR LOS AURICULARES EN LA ESTACIÓN BASE.
FRA: ALIGNEZ LE MICROPHONE AVEC L'EMPLACEMENT QUI LUI EST RÉSERVÉ, PUIS PLACEZ LE CASQUE SUR LA STATION DE BASE.
ITA: ALLINEARE IL MICROFONO CON LO SLOT E POSIZIONARE LE CUFFIE SULLA STAZIONE BASE.
NED: LIJN DE MICROFOON UIT MET MIC-SLEUF [MIC SLOT] EN PLAATS DE HEADSET DAN OP HET BASISSTATION.