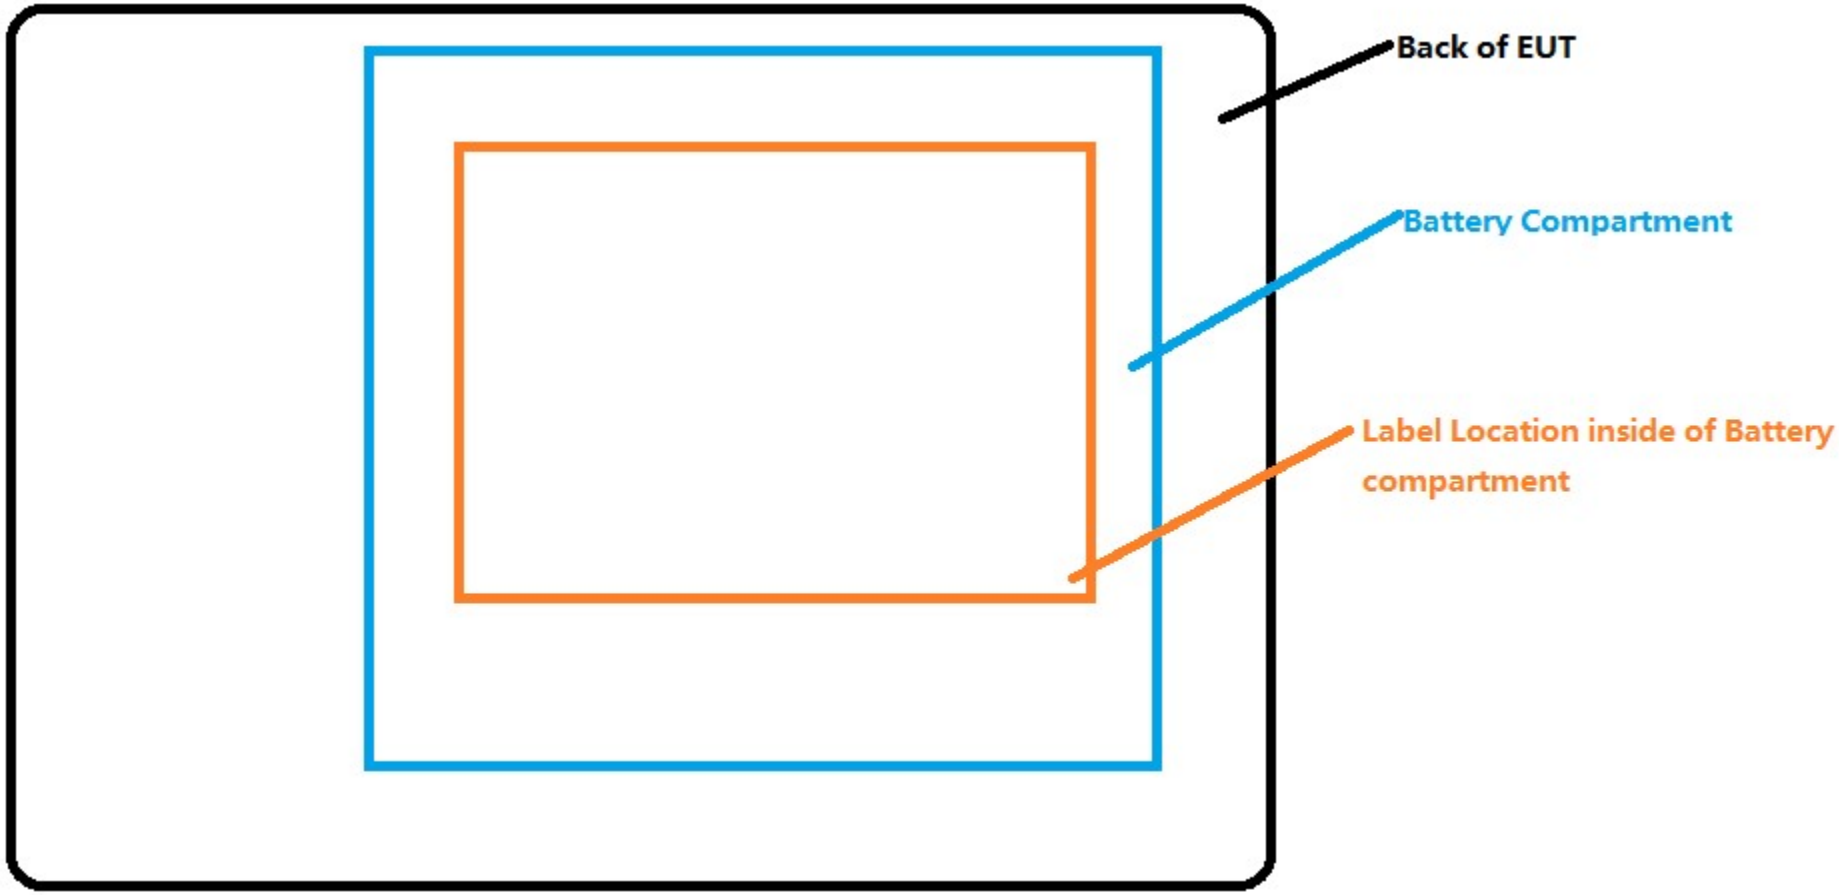
Back of EUT
Battery Compartment
Label Location inside of Battery compartment