Handset (Front)

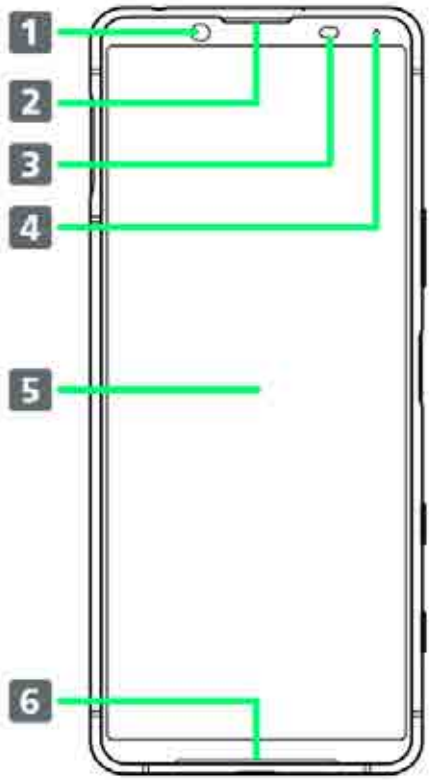

Part	Description
1 **Front Camera**	Use to shoot still images, videos of yourself, etc.
2 **Earpiece/Speaker**	Hear the other party's voice here.
3 **Proximity/Light Sensor**	Detects surrounding brightness to automatically adjust Display or backlight and prevent Touchscreen misoperation during a call.
4 **Notification Lamp**	Flashes for notifications while Display is off. Lights while charging.
5 **Display**	Touchscreen-type display, operate with your fingers on Display.
6 **Speaker**	Listen to music as well as video, etc. audio.

Handset (Back/Side)

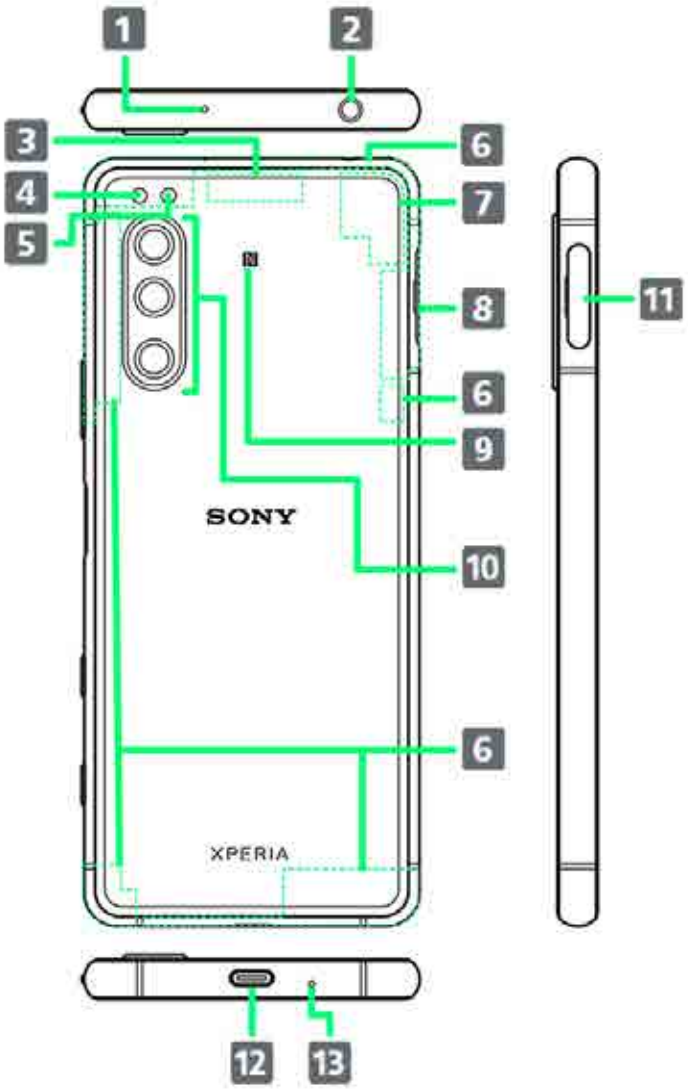

Part	Description
1 **Second Mic**	Reduces noise for calling.
2 **Headphone Port**	Connect commercially available headphones.
3 **Wi-Fi® Antenna Area**	Internal Antenna for Wi-Fi.
4 **Flash/Photo Light**	Use as camera flash when taking photos, etc.
5 **RGBC-IR Sensor**	Automatically adjusts white balance based for shooting based on the light source.
6 **5G/4G antenna**	Internal Antenna for calls and data communication.
7 **5G/4G antenna/Wi-Fi® antenna**	Internal Antennas for calls, data communication, and Wi-Fi.
8 **5G/4G antenna/Wi-Fi/GPS/Bluetooth® antenna**	Internal Antennas for calls, data communication, and Wi-Fi, GPS, and Bluetooth features.
9 **NFC / Osaifu-Keitai® Detection Area**	Hold up to a reader/writer to use NFC / Osaifu-Keitai®.
10 **Main Camera**	Capture still images and videos.
11 **SIM Card/SD Card Slot**	Insert SIM Card/SD Card.
12 **USB Type-C™ Port**	Connect USB Type-C cable (commercially available), etc.
13 **Mic**	Speak here.

Handset Keys

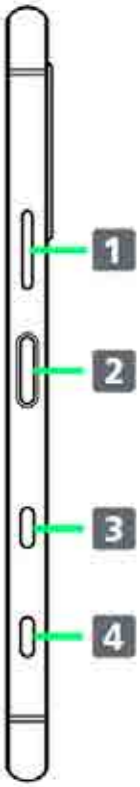

Part	Description
1 **Volume/Zoom Up/Down Key**	Adjust Volume. Adjust Zoom while using Camera.
2 **Power Key/ Fingerprint Sensor**	Long Press for power on/off. Turn Display on/off. Or, use Fingerprint authentication.
3 **Google Assistant Key**	Launch the Google Assistant.
4 **Camera Key**	Use as Camera shutter. Long Press to launch Camera.

Inserting SIM Card

SIM Card is an IC card containing phone number and other customer information.
Always unmount SD Card beforehand.

1

Pull Tray out from handset

■ Pull SIM Card/SD Card Slot Cover out straight using fingernail in groove.

2

Set SIM Card into Tray with IC chip facing down

- Check SIM Card orientation by notch.
- Make sure SIM Card is in Tray securely.

3

Holding handset held level, press Tray in straight

SIM Card is inserted.

- Check Tray orientation.
- Press firmly where circled ○, and make sure there is no gap between handset and SIM Card/SD Card Slot Cover.

Handling SIM Card

For SIM Card handling, see following items.

① IC chip

For SIM Card handling, see Ymobile Website.
https://www.ymobile.jp/support/product/usim/

- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage SIM Card.

SIM Card Cautions

Observe the following when using SIM Card.

- Customer is responsible for any damage caused by inserting SIM Card in an other-brand IC card reader, etc. Ymobile Corp. is not responsible in such case.
- SIM Card is the property of Ymobile Corp.
- SIM is replaceable (at cost) in case of loss/damage.
- Return SIM Card to Ymobile Corp. when cancelling subscription.
- Returned SIM Cards are recycled for environmental purposes.
- Note that SIM Card specifications and performance may change without notice.

- It is recommended that you keep a separate copy of information that is stored on SIM Card. Ymobile Corp. is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your SIM Card or handset (SIM Card inserted) is lost/stolen. For details, contact Customer Service.

Powering On

1

Long Press Power Key until handset vibrates once

Lock Screen appears.

- Startup wizard appears for the first time handset is powered on. Follow onscreen instructions.
- Battery level is not sufficient if low battery indicator appears when Power Key is Pressed with handset powered off. Charge Internal Battery.

FCC ID

To view the regulatory compliance mark

- Find and tap Settings ➔ About phone ➔ Certificates
  Regulatory compliance mark such as FCC ID is displayed on the screen.