PTAB1050: User Manual

11/27/2012

In the box

Location of controls

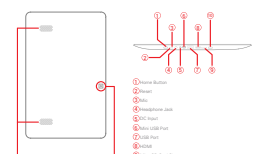

Basic operation

Charging the battery: Connect the tablet to a wall outlet using the included AC adapter.

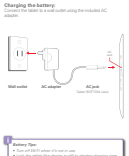

Turning on the tablet

Lock (standby) the tablet
To lock or unlock the tablet, briefly press the <Button (Lock the device to conserve the battery).

Battery Tips:
- Turn off DLNA when it is not in use.
- Turn the tablet the display it will be in standby mode.
- To optimize battery time and performance, adjust the "Screen timeout" and "Screen brightness" options in the Settings app.

Turning off the tablet
For quick power-off, you can select the "Power" button on the Polaroid Settings widget to turn off the tablet.

Home screen

On the home screen, you can place app shortcuts and widgets.

Access apps & widgets screen
Press to access the Apps & widgets screens.

Placing apps & widgets on the Home screen
Press & hold an app or widget to place it on one of the Home screens.

Removing shortcuts or widgets
Press and hold the app or widget and slide it as shown below.

Connecting to Wi-Fi & downloading apps

Status Bar
The Status Bar is available on all screens and apps of the tablet.

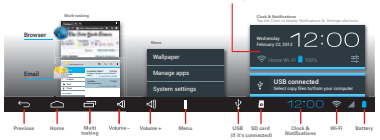

Setting up Wi-Fi
To browse the web, use email and download apps, you must first connect the tablet to the internet.
To set up Wi-Fi, use the "Polaroid Settings" widget on the Home screen.

1. Swipe the Home screen to the left to access the Polaroid Settings widget

2. Select "Wi-Fi Setup"

3. Select a network.

4. If required, enter the correct password and select "Connect".

5. When the tablet is connected to a network, the Wi-Fi icon in the Status Bar will display. A "Connected" will appear under the selected network.

Downloading App Stores

Downloading an App Store
To find and download interesting apps and games, you need to download an app store. We have provided links to several app stores that can be easily accessed by selecting the "Download App Stores" option on the Settings widget.

1. After successfully connecting the tablet to Wi-Fi, select "Download App Stores" on the Polaroid Settings widget.



2. Select an app store, and follow the instructions to download and install it on the tablet.

3. Click here.

4. Select the downloaded app store (.apk file) from the Polycat window.

5. Select "Install" to install the app.



6. The app store appears on the Apps screen.

Downloading and installing apps:
Once you have downloaded an app store, it is possible to download and install apps directly to the tablet - these apps will appear on the Apps screen.

Bluetooth

You can use the Bluetooth in your tablet to connect to various Bluetooth devices such as speakers and headphones.

Turn Bluetooth on or off
1. Open the Settings application.
2. Check or uncheck Bluetooth to turn it ON or OFF.

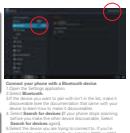

Unpair a Bluetooth device
1. Select the paired Bluetooth device to erase all pairing information about it.
2. Select the Settings menu next to the device's name.
3. Select Unpair.

Camera and video chat

Camera
Select on the apps screen to go to camera mode. It is particularly useful to take pictures or videos with the built-in, front or rear facing camera.

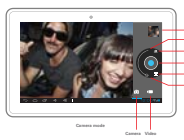

Video chat
Use the pre-loaded, front facing camera to video chat with friends and family.
There are many different services that offer video chat, which are available on the app stores.

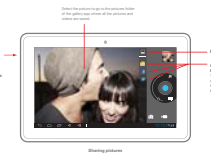

Web browsing

Select "Browser" on the Home or Apps screen (You must connect to Wi-Fi before accessing the web).

Setting up e-mail

Select "Email" on the Home or Apps screen and follow the instructions to set up your email account on the tablet. (You must connect to Wi-Fi before accessing or setting up email accounts).

Photo gallery

Select "Gallery" on the Home or Apps screen to access pictures and videos stored on the tablet or micro SD card.



Viewing pictures:
Pinch to enlarge or shrink, and swipe to go to previous or next pictures.

Watching videos:
While playing a video, tap the display to access the video controller, tap the display again to hide the controller.

Share pictures to Email, Facebook or Twitter:
To utilize this feature you must have a Facebook or Twitter account and be logged in, for Email, an account must be set up for the option to appear.

Share: Share the selected picture through Email, Facebook, or Twitter.
Trash: Delete the selected picture
Menu: Slideshow, edit and more

Transferring and managing files

It is possible to manage and transfer media files to the tablet by connecting it to your computer.

Conserve Internal Memory!
It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

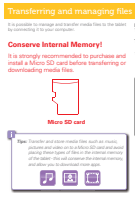

Inserting Micro SD card
The tablet supports Micro SD cards up to 32GB (not included).

To install a Micro SD card into the tablet:
1. Insert the card face up into the card slot until it clicks and locks into place.

2. Once the card is inserted, the card icon appears on the Status Bar.

3. To access the Micro SD card, select "File Manager" from the Apps screen.

Unmount & remove the Micro SD card:
1. Open "Settings".
2. Select "Storage".
3. Select "Unmount Micro SD card".
4. Select "OK" when the "Unmount SD card" dialog box appears.
5. To remove the card, gently push it in until it pops out.

Connecting the tablet to a PC or Mac:
1. Connect the smaller end of the included USB cable to the "Mini USB port" of the tablet and the bigger end of the cable to the computers USB port.

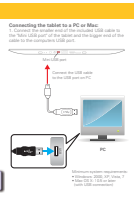

2. The "USB connected" screen appears, select "Turn on USB storage", then select "OK".

3. The "Autoplay" window appears on your computer's display, select "INTERNAL" to view and manage files on the tablet, or if a Micro SD card is inserted, select "Removable Disk" to manage files on the card.

Browsing files

4. Copy media files from your computer to the Micro SD card.

Tips: Organize your media (pictures, videos and music) by creating folders and naming them "Pictures" and "Movies" on the Micro SD card as shown below.



5. Select "Turn off USB storage" on the tablet to disconnect it from the computer.

Explorer app:
Use the Explorer app to copy or delete files on the internal memory of the Tablet, or the inserted Micro SD card, select "Explore" on the Apps screen.

1. Briefly press a file or folder to open it. To copy, move or delete a file or folder, press & hold the file and the options window appears.

2. Select an option from the options window.

3. If you select "Copy" or "Move", over the "Home" or "Internal" memory at the top bar, and select a location to move the file or folder to, and press "Enter" and select "Paste".

Multimedia

Use the Tablet to store and play music, pictures and video files.

Music
Access music files stored on the tablet.

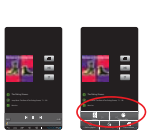

HDMI cable & USB stick

You can connect the tablet to an HD display with an HDMI cable (not included).

To connect an HDMI cable:
1. Connect one end of the included HDMI cable to the "HDMI port" of the tablet.
2. Connect the other end of the HDMI cable to the "HDMI port" of the TV or display.
3. The tablet display is now shown on your TV or Display.

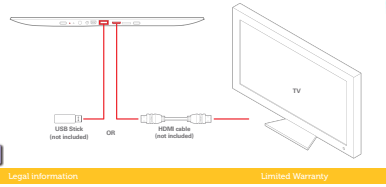

Inserting a USB Stick
The tablet supports using/reading files from a USB stick(not included).

To insert a USB stick:
1. Insert a USB stick as shown below.
2. Once the USB stick is inserted, an icon appears on the status bar.
3. To access the USB stick, select file manager from the App screen.
4. To disconnect and remove the USB stick, see "Transferring and managing files" above.

Settings

Online help

Resetting

In the event that the tablet freezes or does not function correctly, you can perform a reset by pressing the RESET button located on the bottom panel shown below.

Use a paper clip or the tip of a stylus to press the RESET button. Data stored on the tablet will not be effected by using the RESET button.

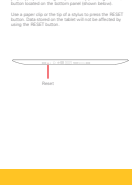

Restore

Specifications

Specifications:
Operating System: Android 4.1 (Jelly Bean)
Processor: ARM CORTEX-A9*2
Processor Speed: 1.6 GHz
RAM: 1GB DDR3
Graphic accelerator: OpenGL ES 2.0 (3D game support)

Display:
- 10.1" capacitive multi-touch screen
- Display resolution: 1024*600
- 4 way auto rotation

Network: WiFi (802.11 b/g/n)

Memory:
- Internal Memory: 4GB*
- External Memory: Micro SD card slot (max 32GB)

*Actual internal memory may vary depending on the operating system of the device and preloaded apps.

Legal information

FCC Part 15:
This device has been tested and found to comply with the requirements for a Class B digital device, under PART 15 of the Federal Communications Commission (FCC) rules. These rules are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. *This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLR IP Holdings, LLC, its licensors and affiliates, fully support the protection of copyright and intellectual property rights. In environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable laws and regulations. You may be responsible for paying for any damages suffered by PLR IP Holdings, LLC, its licensors and affiliates as a result of your violation of applicable laws. For more information regarding the proper disposal, recycling, or reuse of this product, please contact your local city office, your household waste disposal service or the retailer where you purchased this product.

You may also go to www.polaroid.com and reference **Social Responsibility** http://www.polaroid.com/social-responsibility to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal data is stored, please be aware that in order to avoid unauthorized data use/collection before you dispose of your device you must contact AT or an authorized service provider for problem resolution instructions. Please be aware that you may be liable for any loss of or damage to your device, and/or any loss of data on the Product is within the applicable Warranty periods. MUST contact AT or an authorized service provider for problem resolution instructions, or in order to obtain the requested service.

Shipping expenses to the authorized service center or Return Facility are not covered by this warranty and must be paid by the consumer.

Exclusions and Limitations
This Warranty covers manufacturing defects in materials and workmanship in the normal use of the Product and does not cover: (1) damage to the Product caused by accident, abuse, misuse, misapplication or improper service; (2) damage or damage due to acts of nature, accident, misuse, abuse, negligence or commercial use, or modification of or to any part of the Product. In addition, this Warranty does not cover images "burnt" into the screen.

This Warranty applies to the original consumer only and does not cover Products sold "AS IS" or "WITH ALL FAULTS" or Refurbished, Refurbished or Remanufactured, or consumables (e.g., fuses, batteries, bulbs etc). The Warranty is invalid if the factory-applied serial number has been altered or removed from the Product. This Warranty is valid only in the country where the consumer purchased the product, and only applies to products purchased and retained in that country.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE, SHALL APPLY TO THE PRODUCT. EXCEPT FOR ALL WARRANTIES WITHIN THE EXPRESS WARRANTY TERMS STATED ABOVE, NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT OR REFUND OF THE ORIGINAL PURCHASE PRICE AT DISTRIBUTOR'S SOLE DISCRETION. ANY THE EXCLUSIVE REMEDIES OF THE CONSUMER SHALL BE AS PROVIDED FOR IN THIS WARRANTY. IN NO EVENT SHALL PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS CAUSED BY THE USE OR INABILITY TO USE THE PRODUCT, EVEN IF PLR IP HOLDINGS, LLC HAS BEEN ADVISED HEREIN, NO OTHER WARRANTIES SHALL APPLY NOTWITHSTANDING THE FOREGOING, CONSUMER'S SOLE AND EXCLUSIVE REMEDY AND LIABILITY FOR THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

This Product including any accessories included in the original packaging as supplied and distributed new by an authorized distributor of Polaroid in the country in which the consumer purchases against defects in materials and workmanship ("Warranty") as follows:

Product Type: Tablet PC
Territory: USA / Canada
Limited Warranty: 1 Year
Labor Warranty: 1 Year

To obtain Warranty Service and Troubleshooting Information:
1. Call us at 1-866-628-1640
2. Email us at: polaroid@dpiamericas.com
3. Chat us at: http://www.polaroid.com/support/tablets

To receive Warranty service, the original consumer purchaser must contact AT or an authorized service provider for problem resolution instructions. If AT or its authorized service provider in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty periods. MUST contact AT or an authorized service provider for problem resolution instructions, or in order to obtain the requested service.

Shipping expenses to the authorized service center or Return Facility are not covered by this warranty and must be paid by the consumer.

Exclusions and Limitations
This Warranty covers manufacturing defects in materials and workmanship in the normal use of the Product and does not cover: (1) damage to the Product caused by accident, abuse, misuse, misapplication or improper service; (2) damage or damage due to acts of nature, accident, misuse, abuse, negligence or commercial use, or modification of or to any part of the Product. In addition, this Warranty does not cover images "burnt" into the screen.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or limitations on warranties, so limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have rights that vary from state to state or province to province. Certain other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product. This Warranty is not transferable and applies to product or private any Manufacturer's Warranty or support.

To receive Warranty service, the original consumer purchaser must contact AT or an authorized service provider for problem resolution instructions. If AT or its authorized service provider in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty periods. MUST contact AT or an authorized service provider for problem resolution instructions, or in order to obtain the requested service.

© 2012 All Rights Reserved.

internetablet

FRONT

BACK