netis Wireless N Router
Quick Installation Guide

1.Package Contents

"netis Wireless N Router"is 150Mbps/300Mbps wireless N routerg.
- The product model shown in this QIG is W2, as an example.

* The product model shown in this QIG is W2

2.Hardware Connection

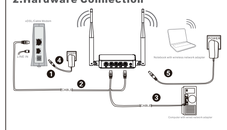

2.1. Power off your Modem .
2.2. Connect the **WAN** port on netis Router to the Modem's **LAN** port with an Ethernet cable.
2.3. Connect your computer to one of the **LAN** ports on netis Router with an Ethernet cable.
2.4. Power on your Modem .
2.5. Plug the provided Power Adapter into the **PWR** jack of netis Router and the other end to a standard electrical socket. Then wait for one minute.

3.Configure the Router via Web Management Page

3.1. Set the IP address of the wired network adapter on your computer as"**Automatic**" or "**DHCP**".

For Windows 8/ 7/Vista
1) Go to "**Settings**" (Win 8)/ "**Start**" (Win 7/Vista)> "**Control Panel**".
2) Left-click on "**Network and Internet**"> "**Network and Sharing Center**"> "**Change adapter settings**" (Win 8/7)/ "**Manage network connections**" (Win Vista).
3) Right-click on "**Local Area Connection**" and left-click on "**Properties**".
4) Double-click on "**Internet Protocol Version 4 (TCP/IPv4)**".
5) Select "**Obtain an IP address automatically**" and "**Obtain DNS server address automatically**" then left-click on "**OK**".

For Windows XP/2000
1) Go to "**Start**"> "**Control Panel**".
2) Left-click on "**Network and Internet Connections**"> "**Network Connections**".
3) Right-click on "**Local Area Connection**" and left-click on "**Properties**".
4) Double-click on "**Internet Protocol (TCP/IP)**".
5) Select "**Obtain an IP address automatically**" and "**Obtain DNS server address automatically**" then left-click on "**OK**".

For MAC OS
1) Click on the "**Apple**" menu> "**System Preferences**".
2) Click on the "**Network**" icon.
3) Click on "**Ethernet**" in the left side box and click on "**Advanced**" in the lower right corner.
4) In the top options, select "**TCP/IP**".
5) In the pull-down menu next to "**Configure IPv4**", select "**Using DHCP**".
6) Click "**OK**" then "**Apply**".

3.2. Open your browser and type **http://netis.cc** in the address field to visit router's web management page.

http://netis.cc

Federal Communication Commission Interference Statement

This equipment has been tested and found to comfy with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation.This equipment generates,uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.However,there is no guarantee that interference will not occur in particular installation.If this equipment does cause harmful interference to radio or television reception,which can be determined by one of the following measures:

•Reorient or relocate the receiving antenna.
•Increase the separation between the equipment and receiver.
•Connect the equipment into an outlet on a circuit different from that to which the reveiver is connected.
•Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:

1.The equipment complies with RF exposure limits set forth for an uncontrolled environment.The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2.This equipment complies with FCC RF radiation exposure limits set set forth for an uncontrolled environment.
3.This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

FCC Caution:Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions:
(1)this device may not cause harmful interference and
(2)this device must accept any interference received,including interference that may cause undesired operation

USA Office---Los Angeles, USA Netis Systems USA Corporation
731 Bear Canyon Road, Suite 10, Walnut, CA 91789
+1 626 810 1888
+1 626 810 1889
usa_support@netis-systems.com (Technical Support)
Technical Support: support@netis-systems.com
NETIS SYSTEMS CO.,LTD.
NETIS SYSTEMS.com
SHEN ZHEN CHINA

EAC

P/N:03.01.0000.00
2011.06.01
Version:1.0

4.Troubleshooting

Q How do I restore my netis Router's configuration to its default settings?

A With the router powered on, use a pin to press and hold the **WPS/RESET** button on the rear panel for 8 to 10 seconds before releasing it. The router will reboot reboot and all configurations are back to factory default.

Q What can I do if my Internet cannot be accessed?

A 1) Check to verify the hardware connections are correct.
Please refer to the "**Hardware Connection**" step.
2) Login to netis Router's web management page and ensure that you set the correct Internet Connection Type .
For cable modem users, please configure "**MAC Clone**" additionally.
On the left-side menu, left-click on Advanced , > "**Network**"> "**WAN**". And in the middle page, left-click on "**Advanced**"> "**MAC Clone**" and then "**Save**" it.

MAC Address	08:10:76:1a:70:fb	MAC Clone	Default MAC

3) Reboot the modem first and then netis Router. Wait for one minute before you check the Internet again.
4) If Internet access is not available, please connect your computer directly to your modem and try the Internet again.
If the Internet is still not working, please contact your ISP for further help.

CE warning:
Regulatory Conformance Hereby, **NETIS SYSTEMS CO., LTD.** declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. Do not expose your device to extreme temperatures lower than 0°C and higher than + 40°C. Keep your device away from water, fire, liquids and explosive substances. The data transmission, Adapter shall be installed near the equipment and shall be easily accessible.

3. 3. Select the language as you need on the top box,default is in English.

1) In "**Quick Setup**" page, select your **Internet Connection Type**.
If "**DHCP (Cable Modem)**" is selected, the router will automatically receive the IP parameters from your ISP (Internet Service Provider).
If "**Static IP**" is selected, please enter the **IP Address/Subnet Mask/Default Gateway/DNS Servers** given by your ISP.
If "**PPPoE**" is selected, please enter the **Username** and **Password** given by your ISP.
2) Under **Wireless Setup**, configure your wireless network name (SSID) and password.
3) Left-click on "**Save**" to make your settings take effect.

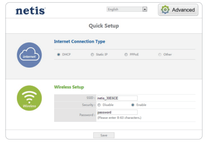

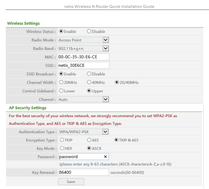

Tip 1:
Default address: **http://netis.cc**
Default SSID: **netis_XXXXXX**
Default wireless password: **password**
(XXXXXX: Last 6 digits of LAN MAC Address)
Tip 2:
You can click on Advanced button on the top for other Internet connection types and further settings.