사용자 매뉴얼

STA1200BSW

2.1채널 슬림 사운드 바
블루투스 무선스피커

EXELWAY

Operation Manual

STA1200BSW

2.1 Ch Worlds Slim Sound Bar
Bluetooth Speaker

EXELWAY

Welcome to EXELWAY

저희 엑셀웨이 제품을 구입해주셔서 감사합니다.
㈜엑셀웨이는 최상의 음질을 구현하여 공급하는데 최선을 다하겠습니다.
본 매뉴얼에는 제품사용안내와 사용시 주의사항이 포함되어 있습니다.
매뉴얼을 숙지하시면 보다 더 좋은 Sound Life를 즐기실 수 있습니다.

일반사항

+ EXELWAY는 ㈜엑셀웨이의 등록상표입니다.
+ 본 사용설명서는 ㈜엑셀웨이가 저작권을 갖고 있으며 ㈜엑셀웨이의 사전 서면 동의없이 사용설명서의 일부 또는 전체를 임의로 무단 배포하는 것은 금지되어 있습니다.
+ 본 설명서는 현재 제품 사양을 기준으로 작성되었으며 기재된 각종 예제 원문, 도표와 예시용사진, 제품의 세부적 기능 및 H/W, S/W 스펙은 별도 예고없이 변경될 수 있습니다.

Class B 기기 (가정용 방송통신 기기)

본 제품은 가정용으로 전자파 적합 등록을 한 기기로서 주로 가정에서 사용하는 목적으로 하며 모든 지역에서 사용할 수 있습니다. **해당 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다.**

1. 기기명칭(모델명) : STA1200BSW
2. 인증번호 : MSIP-CMM-EW1-STA1000TBR
3. 제조년월일 : 포장박스상에 표시
4. 인증회사명 : ㈜엑셀웨이
5. 제조사 / 제조국 : (주)엑셀웨이 / 대한민국

패키지 구성품




1. 스탠드

2. 리모트 컨트롤러


3. 서브우퍼


6. DC 어댑터


7. 옵티컬 케이블


8. Aux 케이블

9. 벽걸이용 브라켓

+ 제품 개봉시 상기 제품이 모두 들어있는지 확인하시기 바랍니다.

Welcome to EXELWAY Audio

Thank you for purchasing this EXELWAY product.
This manual will provide operation instructions and safety information please follow carefully so that you can enjoy many hours of audio pleasure.

General Information

+ EXELWAY is the trademark of EXELWAY Inc.
+ This manual has the copyright of EXELWAY Inc. and it is prohibited to distribute the whole or the part of the manual without notice.
+ This manual was written on the basis of present product specifications. Each and every example original which is written, tables and example photos, detailed function of the product and hardware & software specs can be changed with no special prediction.
+ The information in this User operation manual is subject to change without notice.

B-class device (home broadcasting communication device)

This product is an electronic goods that have registered electronic wave suitability for home use, and it is mainly used at homes and can be used at any region.

1. Model name: STA1200BSW
2. Company name certified: EXELWAY Inc.
3. Produced date: Written on the product box
4. Manufacturer/Manufacturing country: EXELWAY Inc. / Republic of Korea

Package components




1. Stand

2. Remote Controller


3. Sub Woofer


5. DC Adapter


6. Optical Cable

7. Aux Cable

8. Wall Bracket

9. S

+ Check the enclosed accessories inside package.



4. 사용설명서

5. 벽걸이 설치 가이드

4EA

10. 스크류-25mm(H)

4EA

11. 월 플러그

각 부의 명칭과 기능

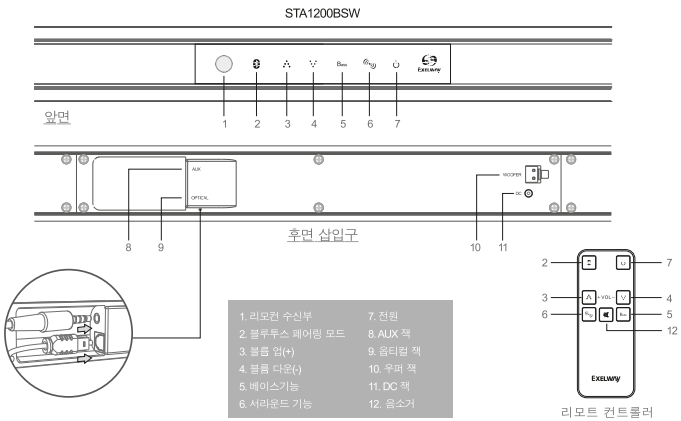

1. 리모컨 수신부	7. 전원
2. 블루투스 페어링 모드	8. AUX 잭
3. 볼륨 업(+)	9. 옵티컬 잭
4. 볼륨 다운(-)	10. 우퍼 잭
5. 베이스기능	11. DC 잭
6. 서라운드 기능	12. 음소거

리모트 컨트롤러

설치방법

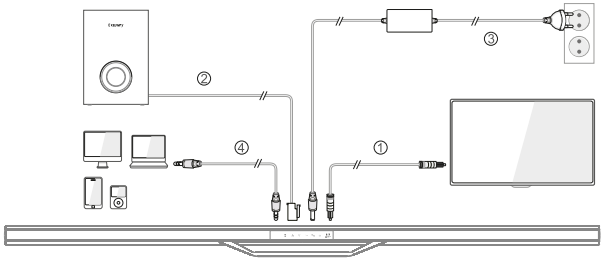

① TV연결 : TV에있는 Optical 단자와 Sound Bar Speaker의 Optical 단자를 디지털 Optical (광)케이블로 연결합니다.

② Woofer연결 : Woofer단자를 Speaker 본체의 Woofer입력단자에 연결하시면 설치가 끝납니다.

③ 전원연결 : Speaker 뒷면의 "DC Jack"에 "Adaptor Jack"을 연결하시고 전원버튼을 누르세요.

④ AUX연결 : 음원장치(PC, 스마트 폰 등)에 있는 Aux 단자와 Sound Bar Speaker 의 Aux 단자를 Aux 케이블로 연결합니다.

*주의사항 : 설치 연결시 위의 순서대로 진행하시고, 모든 잭이 연결된 것을 확인 후 전원버튼을 눌러주십시오.

---

4. User's Manual

5. Wall Bracket Install Guide

4EA

crew-25mm(H)

4EA

10. Plastic wall plug fixing

Touch Keys and function

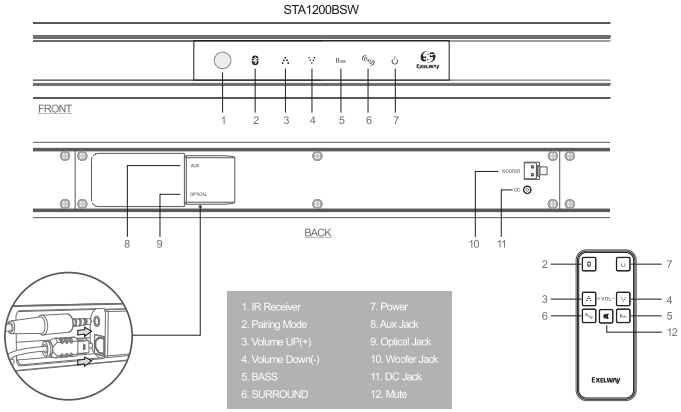

1. IR Receiver	7. Power
2. Pairing Mode	8. Aux Jack
3. Volume UP(+)	9. Optical Jack
4. Volume Down(-)	10. Woofer Jack
5. BASS	11. DC Jack
6. SURROUND	12. Mute

Remote Control

Connections

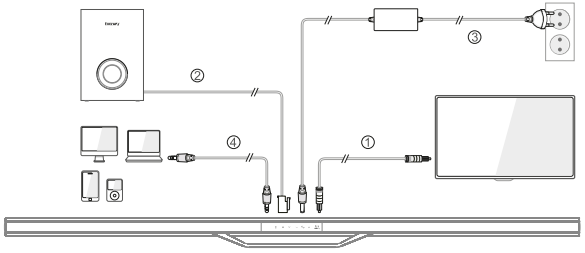

① TV Connection: Connect the "Optical cable" supplied to the Digital Audio Out (Optical / SPDIF) connection of your TV or STB to the Optical connection of your EXELWAY Soundbar.

② Sub Woofer Connection: Connect the "Woofer Cable Jack" to the "Woofer" connection of your EXELWAY Soundbar.

③ Power Connection: Connect the "DC Adapter Jack" to the "DC" connection of your EXELWAY Soundbar.

④ If your TV set does not have a Optical connection please connect the "AUX cable" supplied to the "AUX" connection of your EXELWAY Soundbar to the TV set.

* Note: please only use one connection to your TV set, Optical or AUX; if you connect both connections the AUX connection will take precedence.

* Warning: Only Power On the EXELWAY Soundbar after all of the require connections above are connected.

LED 표시등



LED 색깔	동작유형	기능
1. 파랑	깜빡거림	블루투스 준비상태
파랑	켜짐	블루투스 연결
2. 초록	켜짐	베이스음 강화
3. 주황	켜짐	서라운드 모드
4. 빨강	켜짐	전원켜짐
빨강	깜빡거림	볼륨 업 다운
빨강	연속 깜빡거림	음소거

블루투스 연결 방법



블루투스 버튼을 누르면 연결준비상태가 됩니다.



블루투스기기를 켜고 기기검색을
한 후, "XLBLUE"와 연결하세요.



페어링시 PIN code 에는
'0000' (영영영영)을 입력하세요.



블루투스 호환 제품 :
PC, 노트북, MP3, MP4, PDA,
스마트폰, 모바일폰 등

STA1200BSW와 함께 음악을 자유롭게 감상하실 수 있습니다.

제품 사양

	STA1200BSW
임피던스	8Ω
재생 주파수 범위	40Hz ~14KHz
음압	90dB ± 3dB
엠프 정격 출력	80W RMS(max. 120W)
스피커 허용 입력	180W(전면 20W / Ch x 4(80W) & 100W 6.5" 4 Ohm 서브우퍼)
음장효과	Bass Booster / Surround
연결성	무선 : Bluetooth 3.0 + EDR / 유선 : Optical Cable, AUX Cable
입력단자	Optical cable(1) / Power Supply(1)
출력단자	AV Jack(1) to Sub Woofer
어댑터 입력단자	100 - 240V ~ 50/60Hz
어댑터 출력단자	DC 18V 3.0A
크기(사이즈)	전면 : 1200(W) x 37(H) x 20(D) mm, 서브우퍼 : 195(W) x 266(H) x 265(D) mm
무선 리모콘	○
색상	● Black
작동 온도	0° ~ 40°C

LED Indicator



LED color	Motion frequency	Function
1. Blue	Blinked continuously	Bluetooth Pairing mode
Blue	Turned on continuously	Bluetooth operation mode
2. Green	Turned on continuously	Bass Booster
3. Orange	Turned on continuously	Surround Mode
4. Red	Turned on continuously	Power on
Red	Blinked once	Volume Up, Down
Red	Blinking continuously	Mute has been pressed

Bluetooth connection methods



Press the "Pairing mode" button on the remote control
or on the control panel of the EXELWAY Soundbar.



Turn on "Bluetooth" of Phone/Notebook,
Select Bluetooth ID "XLBLUE" on Phone/Notebook,
in "Bluetooth Device Searching Mode".



Pairing PIN code is '0000'.

If requested the Pairing PIN Code is "0000"



Bluetooth compatible ;
(PC, laptop, MP3, MP4, PDA,
Smart phone, Mobile phone)

After pairing is completed the LED will stay Blue on the control panel of the EXELWAY Soundbar.

Product Specification

	STA1200BSW
Impedance	8Ω
Frequency Range	40Hz ~14KHz
Sound Pressure Level	90dB ± 3dB
Amplifier Power Rating	80W RMS(max. 120W)
Speaker System	80W(20W / Ch x 4)Front & 100W 6.5" 4 Ohm Passive)
Sound Effect	Bass Booster / Surround
Connectivity	Wireless : Bluetooth 3.0 + EDR / Wire : Optical Cable, AUX Cable
In-put	Optical cable(1) / Power Supply(1)
Out-put	AV Jack(1) to Sub Woofer
Adapter In-put	100 - 240V ~ 50/60Hz
Adapter Out-put	DC 18V 3.0A
Dimension	Front : 1200(W) x 37 (H) x 20(D) mm, Sub Woofer : 195(W) x 266(H) x 265(D) mm
Remote Controller	○
Color	● Black
Operating ambient temperature	0° to 40° C

Note: The specifications are subject to change without notice.

고장이라 생각하기 전

본제품의 사용 중 이상하다고 느껴지신다면 A/S를 의뢰하시기 전에 아래내용을 점검해 주시기 바랍니다.
점검 후에도 정상적인 작동이 안된다면 구입처나 고객지원센터 또는 EXELWAY 홈페이지를 이용하여 주시기 바랍니다.

+소리가 찢어지거나 노이즈가 심한 경우
1. 외부기기의 볼륨이 너무 높게 설정되어 허용치 이상의 전류가 흐르는 경우 발생될 수 있습니다.
2. 외부기기의 볼륨이 너무 높게 설정되어 있을 경우 볼륨을 적절하게 낮추어 사용하시기 바랍니다.
3. 허용치 이상의 전류가 흐르는 경우에도 엠프 및 스피커 보호회로가 자동으로 작동되어 안전하게 사용하실 수 있습니다.

+리모콘조작이 안되는 경우
1. 리모콘과 IR센서 수신부 사이에 장애물이 있는지 확인 바랍니다.
2. 건전지를 교환하시기 바랍니다.

+블루투스 연결이 안되는 경우
– 블루투스 연결이 안될 시에는 스피커 본체 전원을 리셋하시고, 블루투스 송신기기에서 페어링 해제 후 다시 연결하시기 바랍니다.

품질 보증

1. 품질보증 기한
   본체 1년 / 기타 모든 액세서리 및 소모품 3개월
2. 보증 내용
   보증기간 동안 정상적으로 사용된 상태에서 고장이 발생하면, 재경부 고시 품목별 소비자 피해보상규정에 의거하여 적법한 유무형의 서비스가 제공됩니다.
3. 제품 교체관련 세부
   공정거래법과 소비자보호법, 그리고 재경부 고시 품목별 소비자 피해보상 규정 및 동일/유사 사례에 대한 한국 소비자보호원의 유권해석상, 타당한 사유가 발생했을 경우 실시합니다.
   제품 교환은 동일모델 1:1 교환이며 타 모델로의 교환은 불가합니다.

제품사용시 주의 사항

제품의 올바른 사용을 위한 주의사항이므로 고객여러분께서 반드시 숙지하여 주시기 바랍니다.
주의사항의 불이행으로 인하여 발생하는 모든 사고에 대하여 회사에서는 배상의 책임을 지지 않습니다.

1. 사용설명서에 기재되어 있는 사항 외에 다른 목적으로 제품을 사용하지마십시오.
2. 제품을 임의로 분해 또는 개조할 경우 무상 서비스를 받으실 수 없습니다.
3. 제품을 떨어뜨리거나 충격을 가하지 마십시오. 고장의 직접적인 원인이 되어 보증기간내라도 무상 A/S가 불가능할 수 있습니다.
4. 이용중 제품에 이상이 있을 때는 제품동작을 중지한 후 A/S 센터(02-859-0029)로 문의하여 주시기 바랍니다.
5. 제품을 물에 빠뜨리거나 습기가 많은 곳에서 장시간 보관하지 마십시오.
   침수 사유로 분류되어 무상 A/S를 받으실 수 없습니다.
6. 제품 이용시 정전기 발생이 심한 환경을 피해 주십시오. 오작동을 일으킬 수도 있습니다.
7. 자석 또는 자기장 근처에 제품을 두지 마십시오. 고장의 원인이 될 수 있습니다.
8. 제품 근처에 저장매체를 가까이 두지 마십시오. 제품안에 자성물질이 있어 저장매체에 영향을 미칠 수 있습니다.
   이에 관하여 당사는 저장매체에 대한 책임을 지지 않습니다.

* 콘센트는 기기 근처에 설치해야하며 쉽게 접근 할 수 있어야합니다.

A/S 처리 기준

1. 품질보증 기간내에 발생하는 제품하자에 대해서는 제조사에서 무상 A/S를 하는 것을 원칙으로 합니다.
2. 다음과 같은 경우에는 보증기간 이내라도 소정의 수리비용이 청구되거나 부득이 유상으로도 A/S가 불가할 수 있습니다.
   1) 이용자의 과실/충격/침수 등 사용상 부주의로 고장이 났을 경우
   2) 임의로 제품을 분해, 개조했을 경우
   3) 화재, 지진, 수해 등의 천재지변으로 고장이 났을 경우
   4) 당사 서비스센터가 아닌 곳에서 수리를 받은 경우
3. 상담하실 때는 제품 명, 고장상태, 구입 년, 월 일 등을 자세히 알려 주시기 바랍니다.

Troubleshooting

Before contacting us for help please check the following useful information to resolve any issues you may be experiencing:

No Sound / Distorted Sound

- No audio coming from the soundbar.
- Check that the cable (Optical or AUX) is connected correctly between the soundbar and the TV set.
- Check that the soundbar is powered on (RED light).
- Check that the either the soundbar or the TV are on Mute and the volume is turned up.
- Check the Audio settings on your TV and if required change the audio output or PCM or Stereo.
- Check that you do not have a Bluetooth device connected as this will take priority over the other connections.
- If connected via Optical cable, connect the soundbar to your TV using the AUX cable.

- No Power / Soundbar not switching on.
- Check that the mains cable is connected to the AC Adapter, when powered there is a blue light on the AC Adapter.
- Check that the cable from the AC Adapter to the soundbar is connected correctly.
- Check that the soundbar is powered on, either using the power button on the remote or touching the power button on the soundbar control panel.
- When powered up the power button on the soundbar control panel will be red.

Remote control is not working
- Check that the battery inserted correctly.
- Use the remote in a direct line with the sound, so nothing is obstructing it.
- Change the battery in the remote control.

Can I connect multiple items to the soundbar?
- Multiple items can be connected however the soundbar will output audio in the following priority order:
1. Bluetooth - when paired with a device this will take priority over any other connected devices.
2. AUX
3. Optical

Note: If you have a TV connected or multiple devices connected with Optical and AUX then AUX will always be outputted.
If you wish to use Optical please remove the AUX cable from the soundbar.

I cannot find the EXELWAY soundbar when trying to connect via Bluetooth.
- Check that the Bluetooth is switched on by press the Bluetooth button on the remote or soundbar control panel.
- Check that the Bluetooth light is flashing blue continuously (if no devices have been paired) or is constantly blue when a device is paired and connected.
- When searching for the soundbar it will appear as "XLBLUE" on your Device List.
- If prompted for a password / Pin code to pair the Bluetooth device please enter 0000.
- If the soundbar is already listed as Paired please remote / un-pair the device and try pairing again.

Service and Support

Information concerning troubleshooting, software upgrade and product support is provided in the following websites and call centers. Should your product require warranty service, please contact EXELWAY to obtain the appropriate authorisation.

EXELWAY Call Center

Tel:	+82-2-859-0029
Opening Hours:	Mon - Fri 09:00 – 17:30 (excluding Bank Holidays)
Email:	info@exelway.com
Website:	www.exelway.com
Language:	English

EXELWAY Warranty

EXELWAY warrants this product to be free of defects in material and workmanship subject to conditions set below.

CONDITIONS
- In the event that this product fails to function properly during the 12 month warranty period, EXELWAY will make this product capable of operating for the purpose of which it was designed, without charging for labour and parts.
- This warranty will be honoured only if a valid receipt or proof of purchase is presented confirming the date and retailer of purchase. EXELWAY reserves the right to refuse repairing the product if the above document is not available or the information is not complete or illegible.
- This warranty does not cover shipping or transportation charges from you to us.
- The obligations of the distributor are limited to the repair of defect parts.
- Costs and risks of transport to the retailer as well as removal and installation of the product, and any other costs directly or indirectly related to its repair, are not covered by the warranty.
- All warranty repairs performed by non-authorized repair shops will not be reimbursed and if such repairs damage this product such damage will not be covered by this warranty.
- This warranty is not applicable in cases other than defects in materials or workmanship and, in particular, does not cover:

a) periodic check-ups, adjustments, maintenance or conversions as well as replacement of parts due to normal wear and tear;
b) damage caused by accidents, negligence, modifications, use of non-EXELWAY parts, improper use, installation or package;
c) damage caused by lightning, water, fire, acts of war, public disturbances, incorrect mains voltages, incorrect ventilation or any other cause beyond the control of the distributor.
d) products where the label bearing the serial number has been removed, defaced or is illegible.

EXELWAY's maximum liability shall not exceed the actual purchase price paid by you for the product. In no event shall EXELWAY be liable for special, incidental, consequential or indirect damages.

사운드 바 설치 방법

벽걸이형 사운드 바 설치하기

벽걸이형으로 설치할 때에는 모든 케이블의
연결을 완료한 후 설치하세요. 케이블 연결의
자세한 내용은 매뉴얼을 참고하세요.

사용시 주의사항

벽걸이형으로 제품을 설치하시면 아래와 같은 사항에 주의하세요.
제품 파손이나 상해의 원인이 될 수 있습니다.
–본 기기를 거꾸로 설치하지 마세요.
–벽걸이로 설치된 제품 위에 물체를 올려놓지 마세요.
–벽걸이로 설치된 제품이 떨어지지 않도록 단단히 고정시키세요.
–설치된 제품을 아이들이 당기거나 흔들어 떨어뜨리지 않도록 주의하세요.

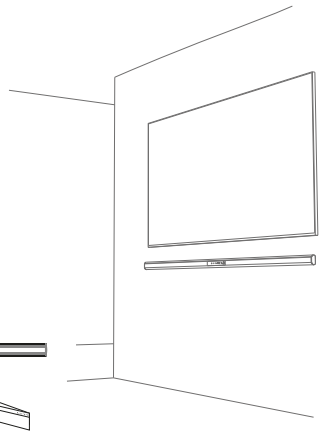

설치 시 필요한 구성품





1. 벽걸이 설치 가이드 (WALL BRACKET INSTALL GUIDE)의 수평,중앙을 TV 수평,중앙에 맞추고,
벽걸이 설치 가이드 (WALL BRACKET INSTALL GUIDE) 위에 벽걸이용 브라켓을 부착시킬 위치를 표시하세요.



2. 표시한 위치에 드릴을 이용하여 나사 구멍을 만드세요.

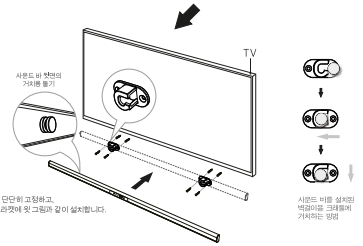

3. 제공된 나사와 월 플러그를 이용하여 벽걸이용 브라켓를 벽에 단단히 고정하고,
사운드 바 뒷면에 있는 양쪽 2개의 거치용 돌기를 벽걸이용 브라켓에 윗 그림과 같이 설치합니다.

Memo

CE

The CE marking certifies that the product comply with essential requirements of the CE(R&TTE)+EMC on radio equipment and telecommunication, as well as directive, CE2200.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause un-desired operation.

Warning : Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is con-nected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID : ZVW-STA1000TBR

Safety Warning

This product has been manufactured to comply with international safety standards. Please read the following safety precautions carefully.

Safety Instructions and Precautions

1. MAINS SUPPLY
Operate this product only from the type of power supply indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company.
Disconnect the product from the mains before you start any maintenance or installation procedures.

2. OVERLOADING
Do not overload a wall outlet, extension cord or adapter as this may result in electric fire or shock.

3. LIQUID
The product should not be exposed to liquid of any kind. In addition, no objects filled with liquid should be placed on the apparatus.

4. CLEANING
Disconnect the product from the wall outlet before cleaning.
Use a light damp cloth (no solvents) to dust the product.

5. VENTILATION
The slots on top of the product must be left uncovered to allow proper airflow into the unit.
Do not stand the product on soft furnishings or carpets.
Do not stack electronic equipments on top of the product.

6. ATTACHMENTS
Do not use any unsupported attachments as these may be hazardous or cause damage to the product.

7. LIGHTNING, STORM OR NOT IN USE
Unplug the product from the wall outlet and disconnect the antenna during a thunderstorm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-surges.

8. EXTRANEOUS OBJECTS
Do not insert anything through the openings in the unit, where they can touch dangerous voltage points or damage parts.

9. REPLACEMENT OF PARTS
When replacement of parts is required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitution may result in additional damage to the unit.

* The socket-outlet shall be installed near the equipment and shall be easily accessible.

Installation Guide

How to Install Sound Bar on the wall

Before mounting sound bar on the wall ,
Please plug in all cables connected tightly.
Please refer to below installation guide.

Warning!

When the sound bar mounted on wall,
it may cause product damaged,,,
–Do not fix sound bar upside down.
–Do not place something on Sound Bar mounted on the wall.
–Please fix sound bar tightly not to be dropped down.
–Please keep children not to shake sound bar or hang something on it.

Necessary Accessories



Memo

(주) 엑셀웨이
150-803 서울시 금천구 가산동 505-18 에이스 하이엔드타워 5차 1204, 1404
EXELWAY A/S및 고객지원 : (02) 859-0029
info@exelway.com
www.EXELWAY.COM

제품 사양은 성능향상을 위해 사전 예고없이 변경될 수 있으며 매뉴얼 내 이미지는 실제 제품 이미지와 다소 차이가 있을 수 있습니다.

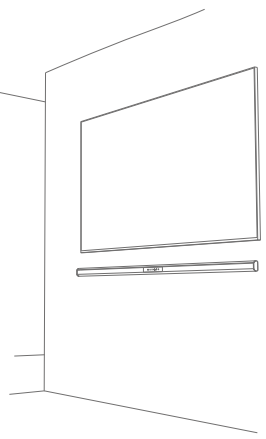



1. Please keep "WALL BRACKET INSTALL GUIDE" with center position of Television horizontally
Please mark screw position of Wall Bracket" on "WALL BRACKET INSTALL GUIDE".



2. Please make holes for screws on wall by using drill.



3. Please fix the screws and wall plugs enclosed tightly on wall,
Please mount hooks of back plate on wall bracket like above picture.



How to hook up Sound Bar
on Wall Bracket

EXELWAY Inc.
No. 1204 Ace High-end the 5th 505-18 Gasan-dong
Geumcheon-gu Seoul Korea 153-803
info@exelway.com
www.EXELWAY.COM

The product specifications may change without predictions for improvements of performances,
and the image within the manual may be somewhat different from the real product image.