




**Determining Handing** 

The hand of a door is determined from the secure side of the


door. The term "secure" means the side from which you initially

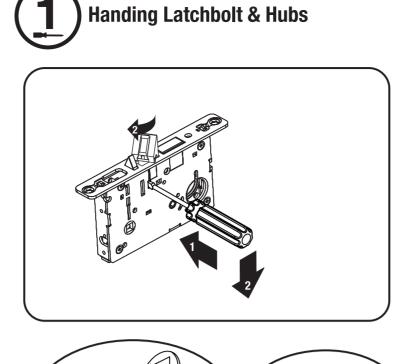

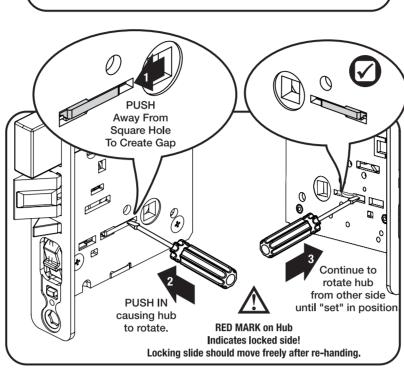


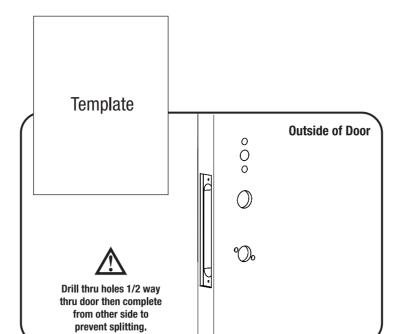

**Preparing Door** 

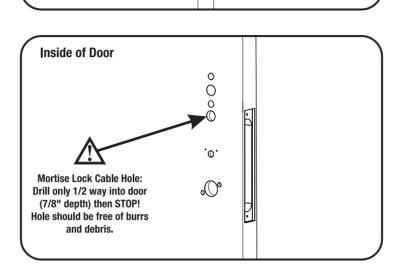




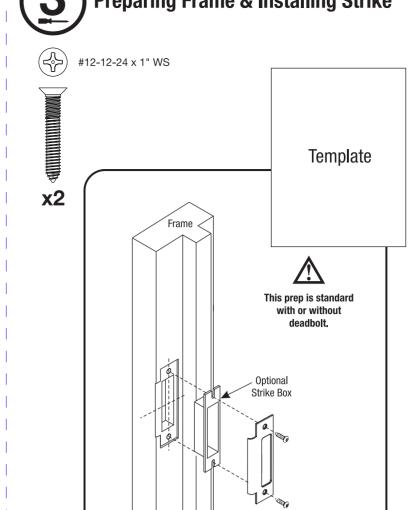






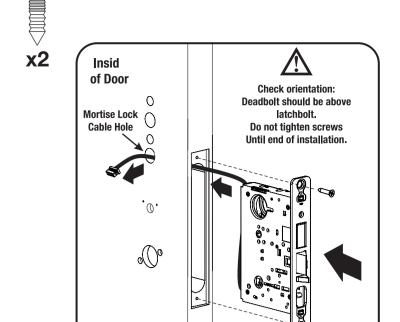





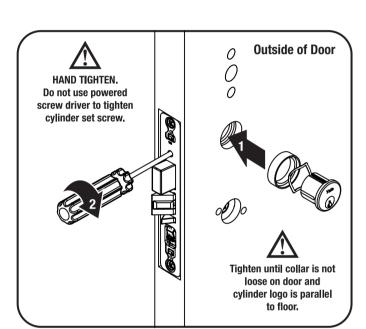







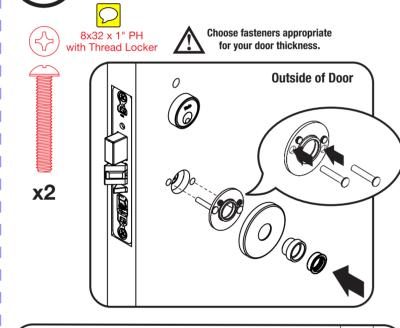

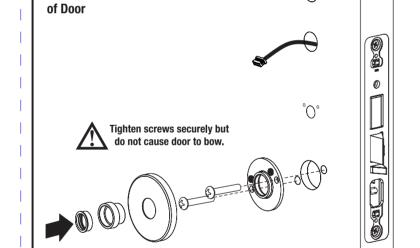


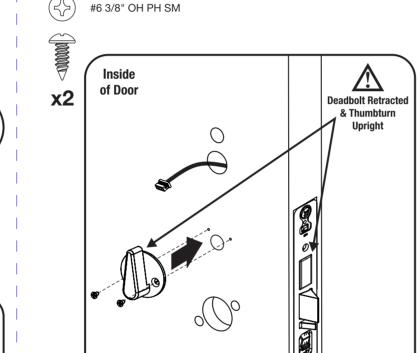


#### **Preparing Levers Installing Thumbturn** Not Including SL Trim

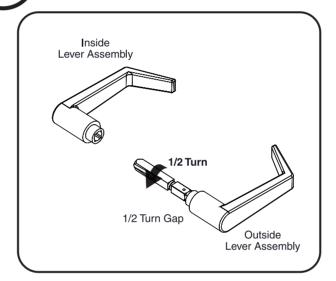




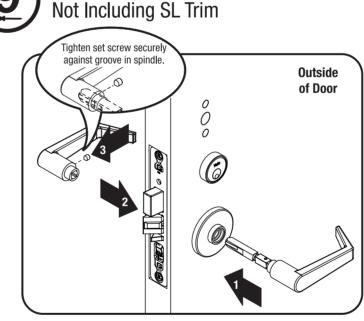

#### **Test Operation**

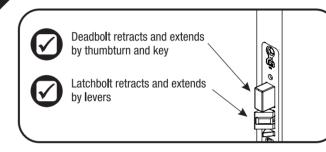





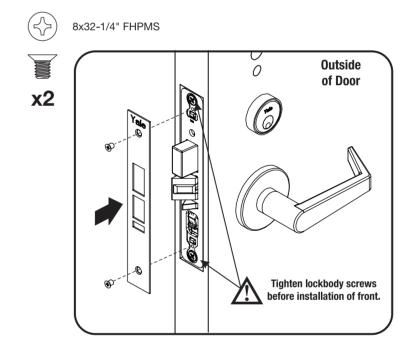







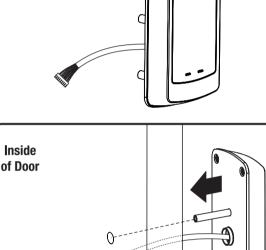

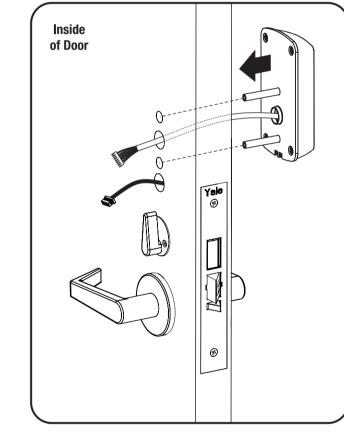


# **Installing Interior Mounting Plate**

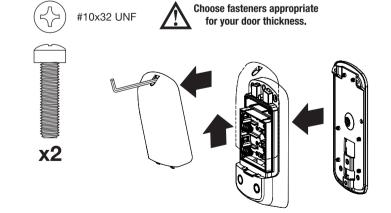


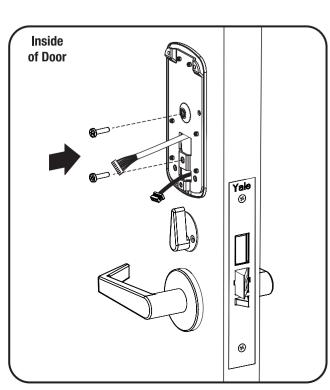


## **13** Attaching Cables

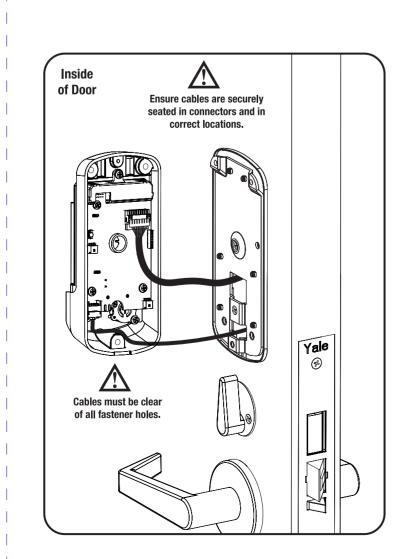

### **Installing Interior Escutcheon**

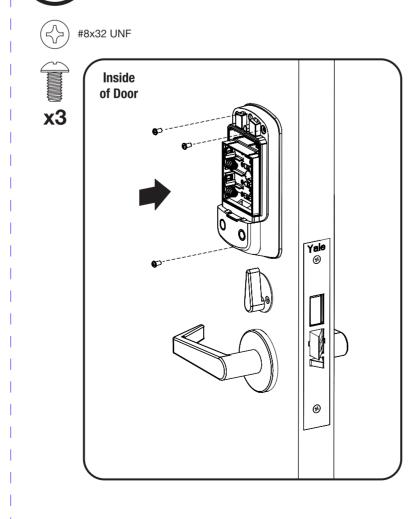


#### **Installing Batteries & Cover**

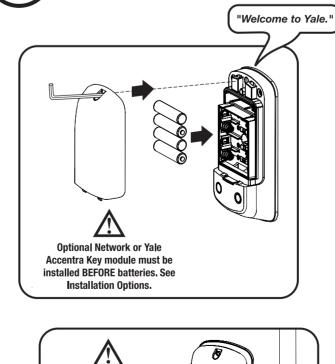



## **Installation Options**



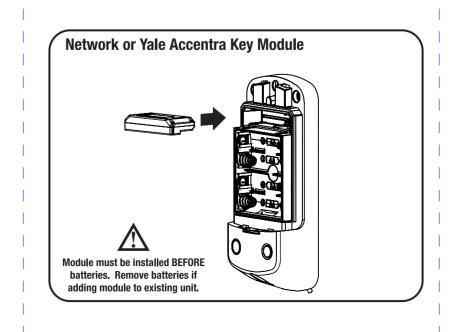

Congratulations, you've installed the Yale nexTouch® Access Mortise Lock! Turn sheet over to customize your product.



Space for layout tweaking.