


DIE LINE

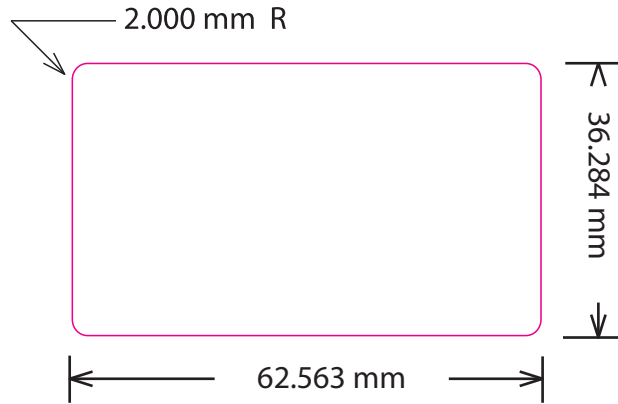

Serial Number



Date code =
YYDD Format



Serial number to match
each unit inside of carton

YYDD : Julian Date Code
YY = Year
DDD = Day of the Year
EXAMPLE: 11001 = January 1, 2011
11002 = January 2, 2011

Unit Model Designator
This can be whatever the
designated Model is.
Example: LW1500RS
The designator is not
always required.

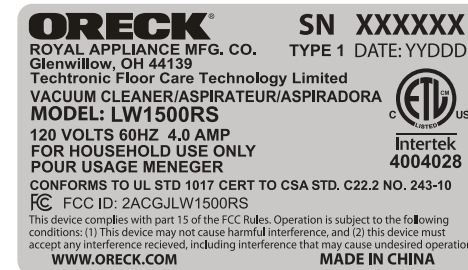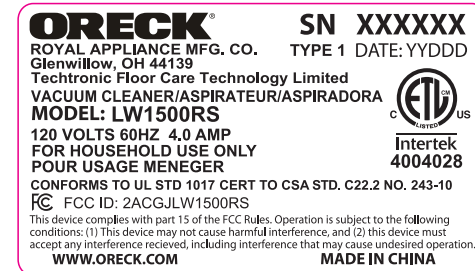

NOTES:

1. ALL MATERIALS AND ADHESIVES ARE TO MEET U.L. AND C.S.A. REQUIREMENTS.
2. THE BACKGROUND TO BE SATIN SILVER SUBSTRATE MATERIAL.
3. THE LETTERING TO BE PRINTED BLACK..

REV 01 June 18, 2014 K Waltz

1. Changed: "CERTIFIED" to "CERT".
2. Added: "STD."

INDUSTRIAL DESIGN DEPARTMENT					
<p>TTI Floor Care North America 7005 Cochran Road Glenwillow, OH 44139-3383 (888) 321-1134 www.ttifloorcare.com</p>	ART NO.	ID-111342	REV	01	METHOD
	TITLE	"DATA PLATE"		NOTES	Project: Mfg: Cleanbloom
	MODELS	LW1500RS		BY	KSW
				DATE	28 May, 2014
					WHITE
					SATIN SILVER SUBSTRATE
					BLACK