

SETUP PHOTOGRAPHS

This document contains 7 photographs


Photograph No.1
Carrier field strength and OBW measurement setup




Photograph No.2
Spurious emissions measurement setup in the anechoic chamber below 30 MHz



Photograph No.3
Spurious emissions measurement setup in the anechoic chamber in 30 -1000 MHz

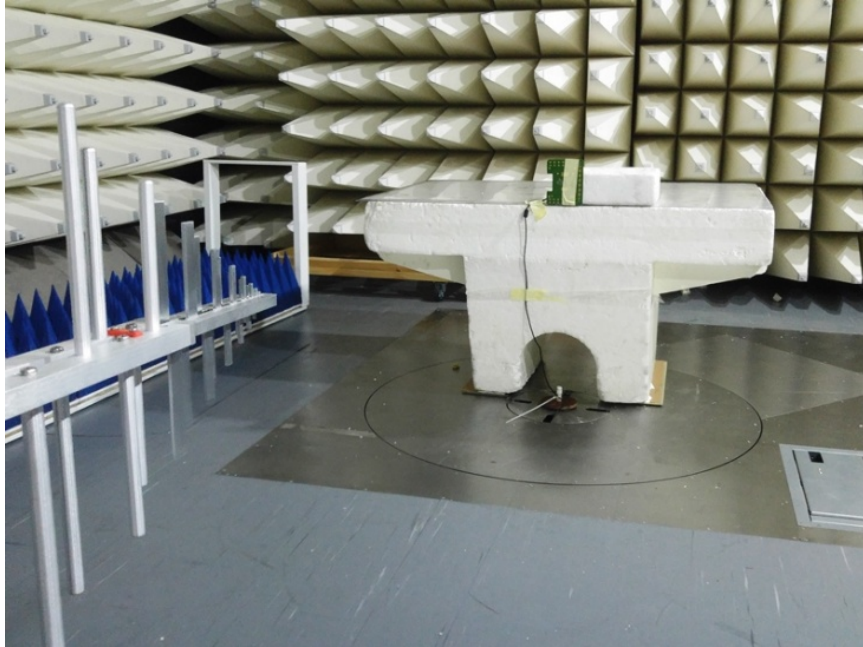

Photograph No.4
Spurious and band edge emissions measurement setup in the anechoic chamber
above 1 GHz

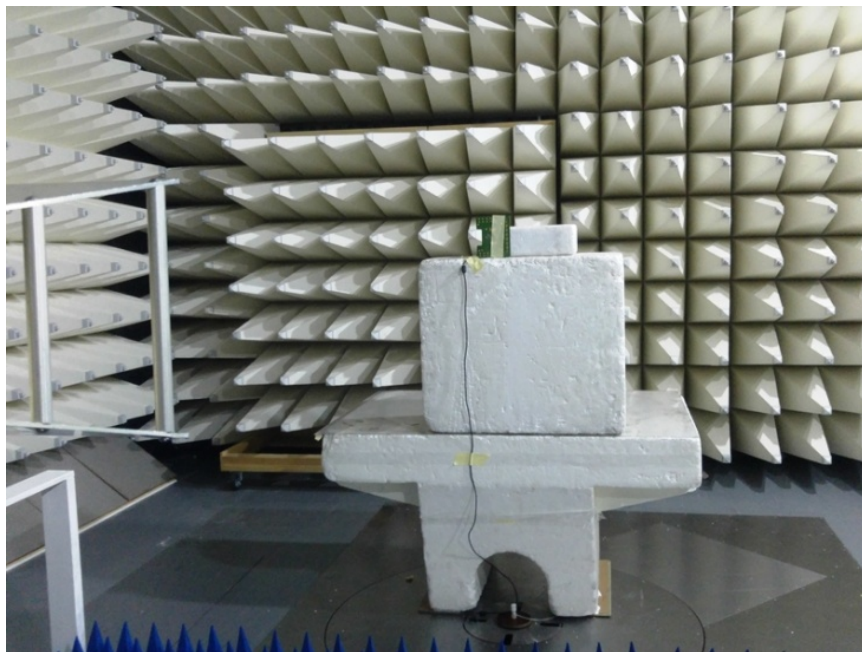

Photograph No.5
Spurious emissions measurement setup at the OATS in 1-18 GHz



Photograph No.6
Spurious emissions measurement setup at the OATS in 18 -40 GHz



Photograph No.7
Setup for conducted emission measurements on AC power lines

