



# bandedge for BT 3.0+HS, 2.1+EDR

Low CH

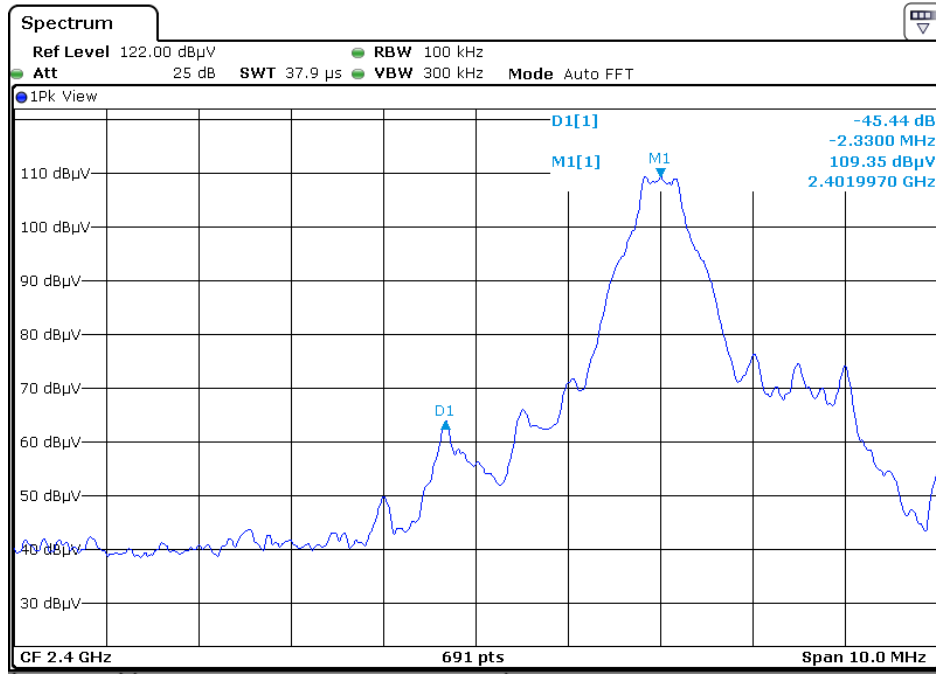


High CH

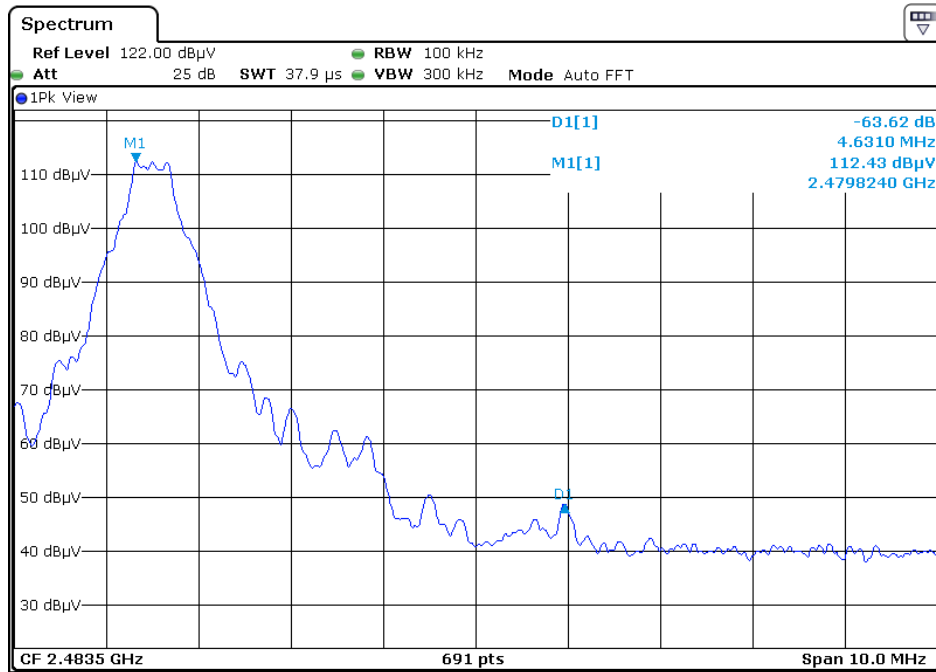

# bandedge for BT 4.1+LE

Low CH

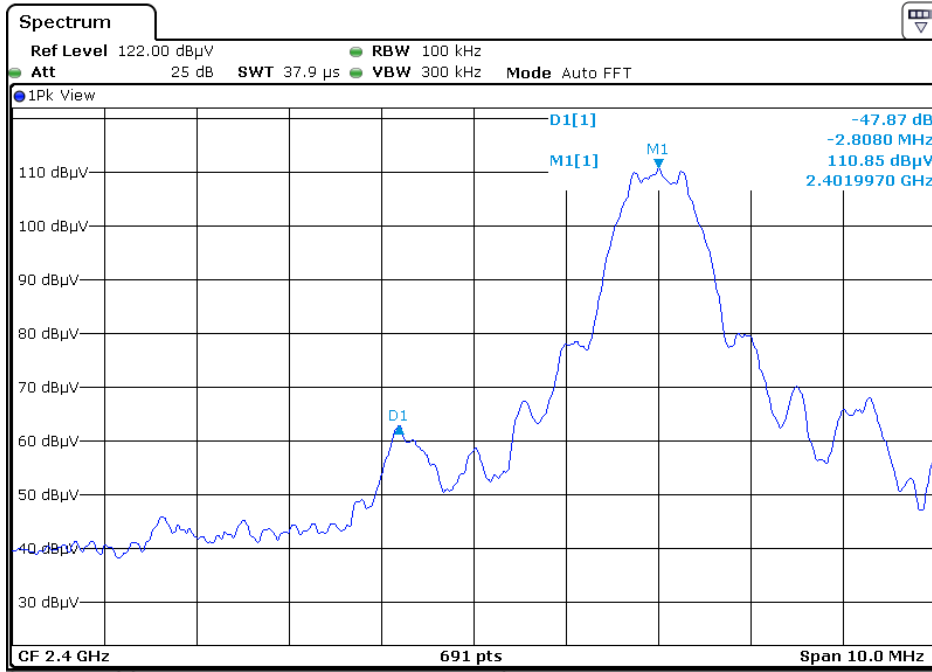

High CH

