


1.1 Set-up for Conducted Emissions



Below 1 GHz

1.2 Set-up for Conducted RF test at Antenna Port

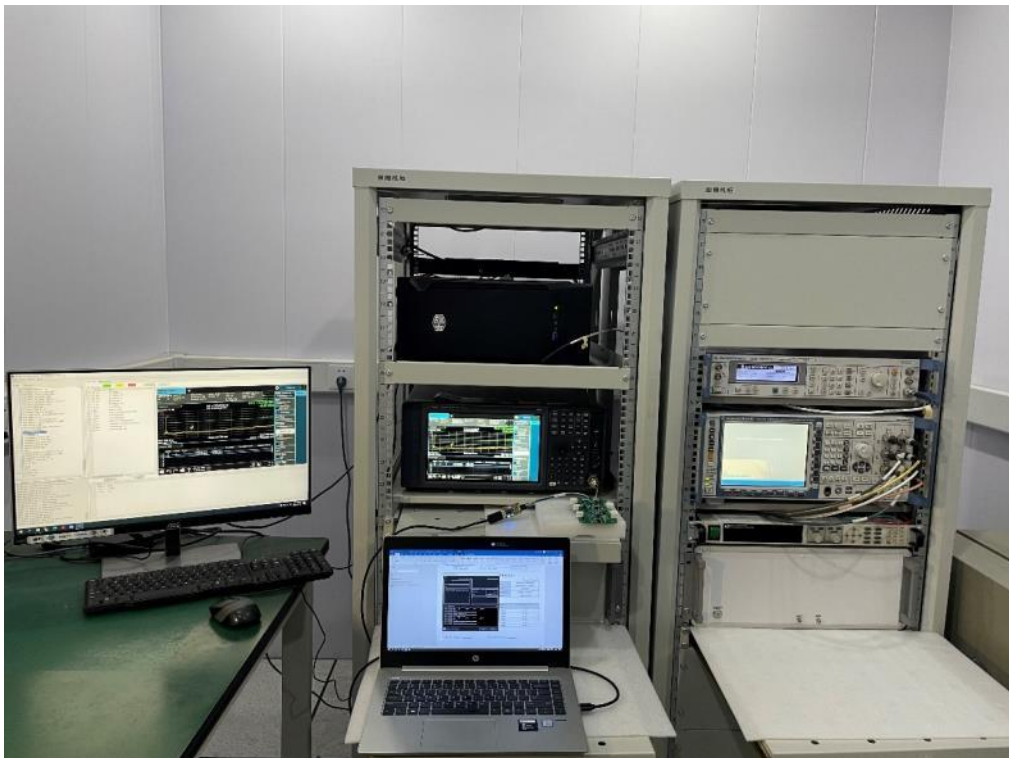

Above 1 GHz

1.3 Set-up for Spurious Emissions above 1GHz



Below 1 GHz

1.4 Set-up for Spurious Emissions above 1GHz



Above 1 GHz