


1.1 Set-up for Conducted Emissions



1.2 Set-up for Conducted RF test at Antenna Port





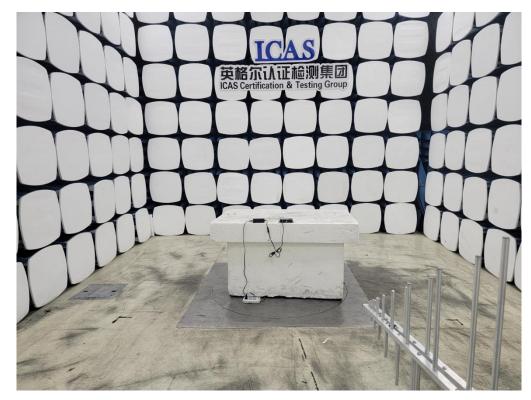

1.3 Set-up for Spurious Emissions below 1GHz

Below 1 GHz



1.4 Set-up for Spurious Emissions above 1GHz

Above 1GHz