


## 1.1 Conducted Emissions at AC Power Line (150kHz-30MHz) Test Setup



## 1.2 Field Strength of the Fundamental Signal Test Setup

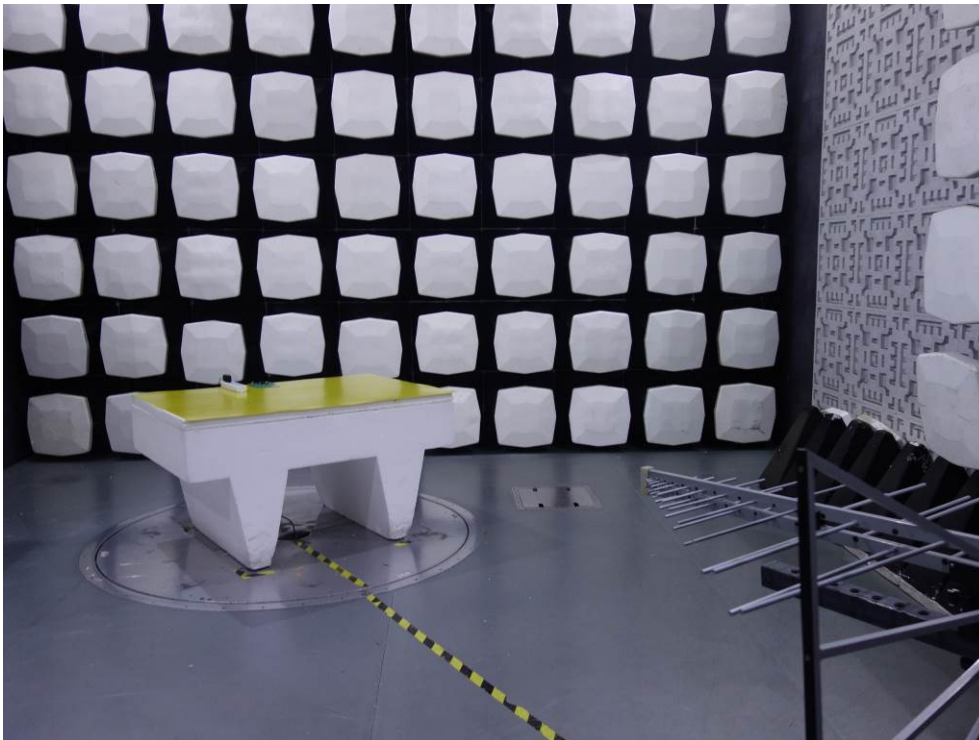

### 1.3 Radiated Emissions Test Setup(below 1GHz)



### 1.4 Radiated Emissions Test Setup(above 1GHz)

