


WHAT'S IN THE BOX

- 1x Quad Lock® Motorcycle Wireless Charging Head
- 1x 50cm and 1.5m USB-A to USB-C cable
- 1x SAE to USB-A Powerbox with Surge Protection
- 1x 20cm SAE to battery terminal cable
- 1x M5 35mm screw
- 5x Zip ties
- 1x Allen key


INSTALLATION

REMOVE EXISTING MOUNTING HEAD

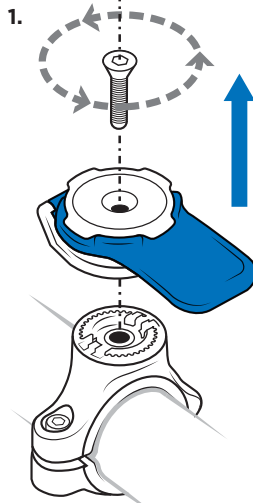


NOTE.
Motorcycle Handlebar Mount shown as example. Mount not included

ATTACH WIRELESS CHARGING HEAD

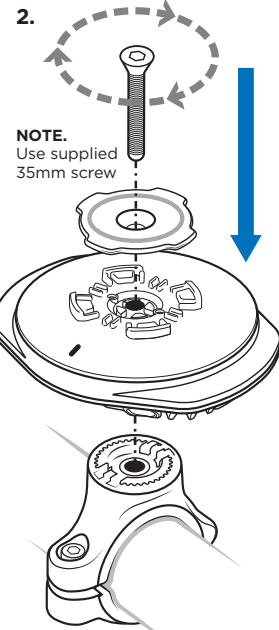


NOTE.
Use supplied 35mm screw

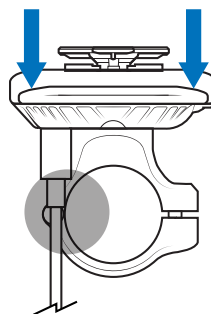


CABLE CLEARANCE
When installing your Wireless Charging Head ensure the cable doesn't interfere with any aspects of the motorcycle




WIRING OPTION 1 - FACTORY USB-A PORT

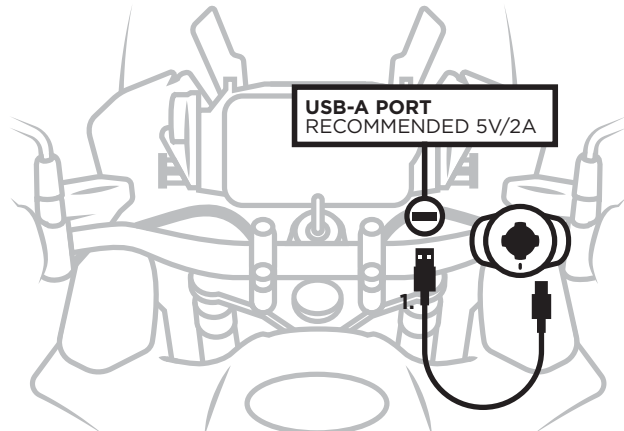


NOTE.
The location of your USB-A port may differ from shown

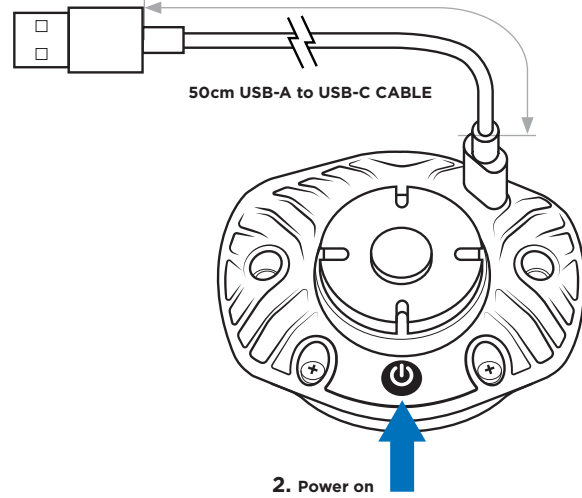


WIRING OPTION 2 - CONNECT WITH RING TERMINALS

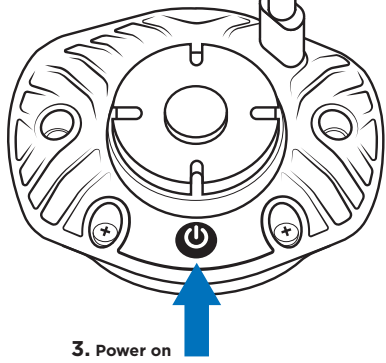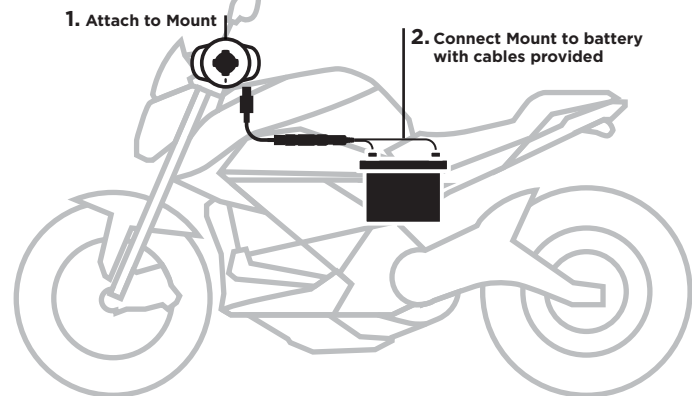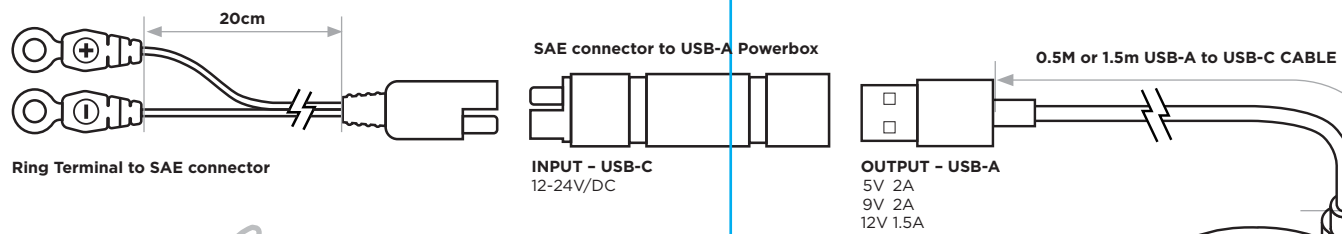

ATTACHING YOUR PHONE

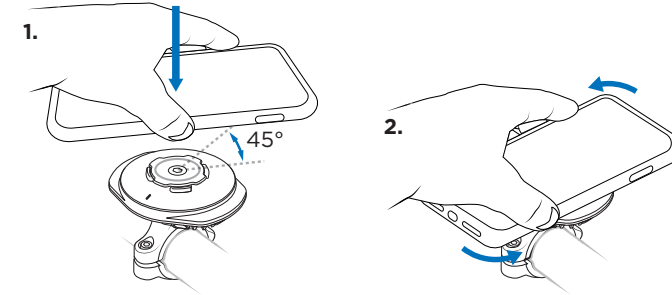

DETACHING YOUR PHONE

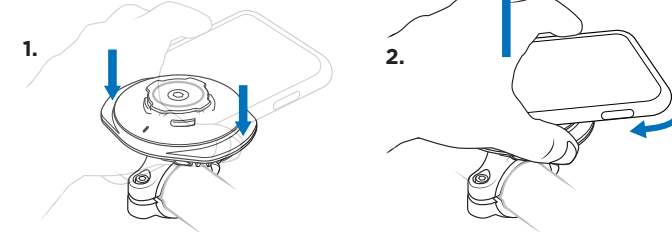

LED STATES

	POWER ON
	ERROR MODE
	CHARGING
	LOW INPUT POWER MODE <5W (5V/1A)
	FULL CHARGE
	WIRELESS CHARGER OVER HEATING

The phone may reach 100% charge but in some instances it may take a long time for the cyan light to show.



MOTORCYCLE WIRELESS CHARGING HEAD

KEEP IN TOUCH

- QUADLOCKCASE
- @QUADLOCKCASE
- @QUADLOCKCASE

QUADLOCKCASE.COM

NOTE. We highly recommend installation be carried out by a qualified mechanic or technician

