


## Photograph No.1 Radiated emissions and OBW measurement setup in the anechoic chamber below 30 MHz

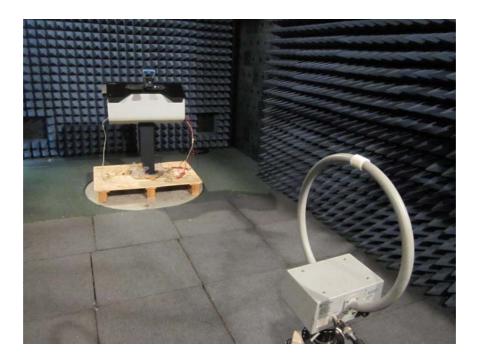

Photograph No.2 Radiated emissions measurement setup in the anechoic chamber in 30 – 1000 MHz





Photograph No.3 Radiated emissions measurement setup at the OATS in 30 – 200 MHz



Photograph No.4 Radiated emissions measurement setup at the OATS in 200 – 1000 MHz

## Photograph No.3 Radiated emissions measurement setup, EUT close view



## Photograph No.6 Frequency stability measurement setup

Photograph No.7 Setup for conducted emission measurement on AC power lines

