

**WARNING:** If not attached correctly, product and/or phone may dislodge or be thrown into air in event of crash. Consult your car's manual to ensure mount does not cover or interfere with operation of airbag.

## USE



### Attaching Phone

Car Mount magnetically connects to the back of your phone. Requires **Peak Design Case** or MagSafe Phone/Case. Once connected, confirm phone is charging via phone screen.




### Removing Mount

We recommend breaking the adhesive bond using dental floss. Wrap floss behind mount and move down in a sawing motion.

! **Stay safe.** Follow local regulations for phone use while driving.

## WIRELESS CHARGING CAR MOUNT

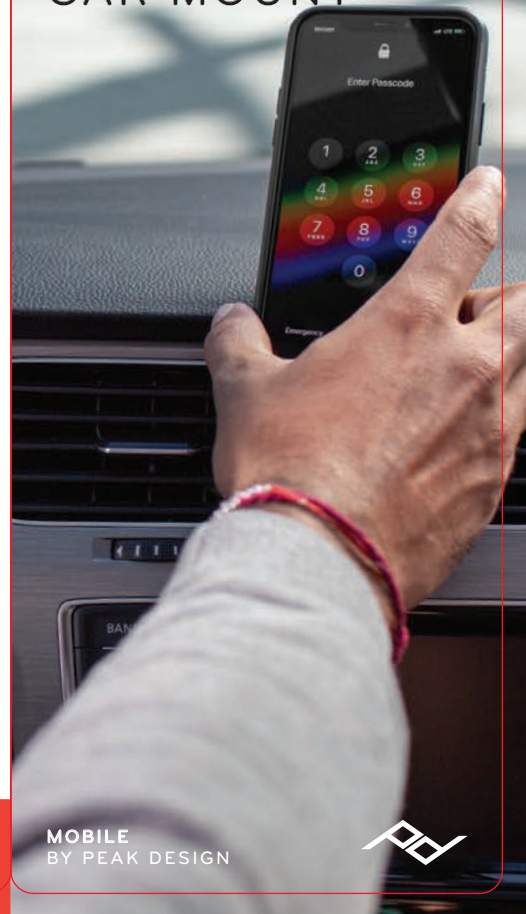

**MOBILE**  
BY PEAK DESIGN



## WHAT'S IN THE BOX

requires Peak Design Case  
or MagSafe Phone/Case  
not included



Allow 24 hours for Base Plate to adhere to surface before use! REALLY!



Cable Clips  
x3



Charging Port



USB-C to  
USB-C Cable  
(1m)

get started

[pkdsn.com/carmount](https://pkdsn.com/carmount)

## INSTALLATION

🕒 Installation takes 24 hours!



1. Locate a spot on your dash or console to attach your **Car Mount**. For ideal adhesion, mount to a hard, smooth, flat surface. Soft plastics and leathers with texture should be avoided to ensure a ideal bond.

Test fit to ensure the **Base Plate** can match the contours of the dash.



2. Clean surface with provided wipe.

🕒! Wait five minutes for the surface to dry. Not allowing surface to fully dry may result in failure to bond.



3. Remove adhesive backing and attach the **Car Mount** by pressing and holding firmly.

🕒! Press down firmly for 30 seconds on the **Base Plate** (not the **Mount Head**).

🕒! Wait 24 hours before use. Failure to wait a full 24 hours will result in a weak bond.

4. Repeat steps 2-3 to install **Cable Clips** routing the **Cable** to the **Charging Port**.

### ADHESIVE FAILURE

In the event the adhesive fails, remove the adhesive from the mount using your thumb by slowly peeling from the plastic base.

Apply a new adhesive pad to the base of the mount.

Install the mount again following the installation steps exactly.