



Test Setup Photograph


Mode 1: WPT Radiated Spurious Emission Test Setup for below 30MHz

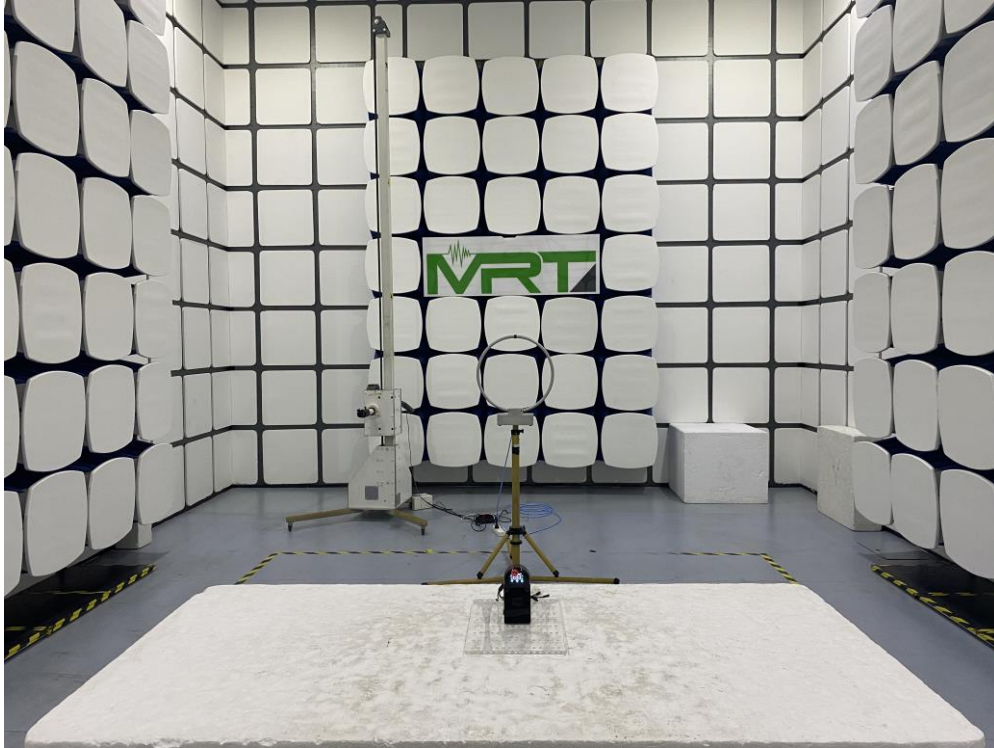


Mode 1: WPT Radiated Spurious Emission Test Setup for 30MHz ~ 1GHz

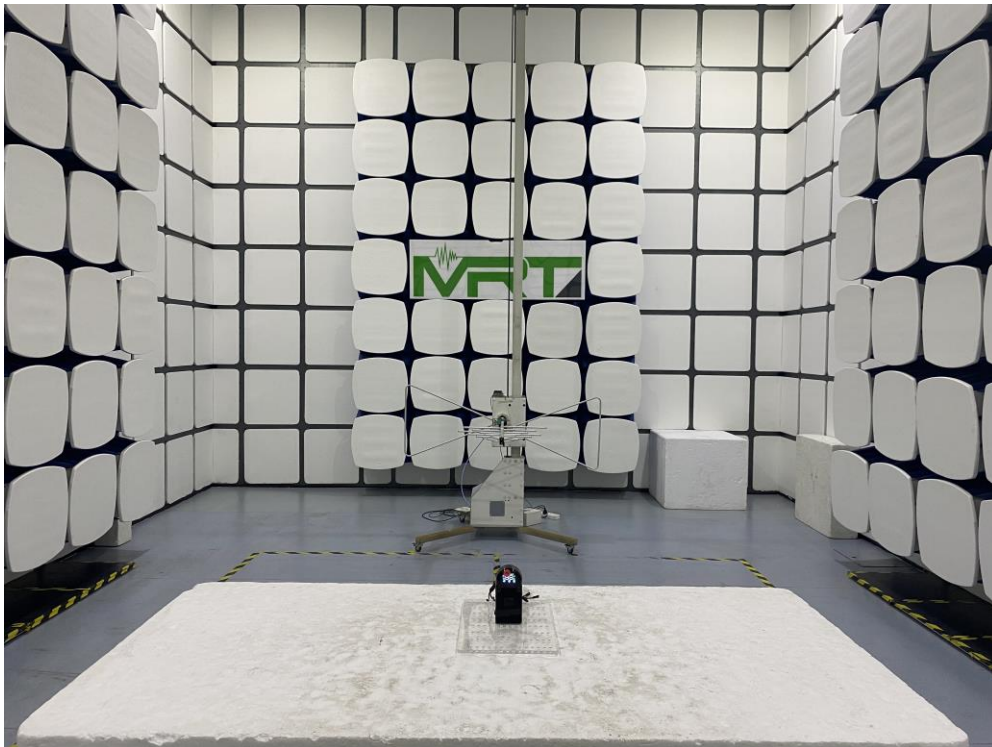


Mode 2: WPT Radiated Spurious Emission Test Setup for below 30MHz

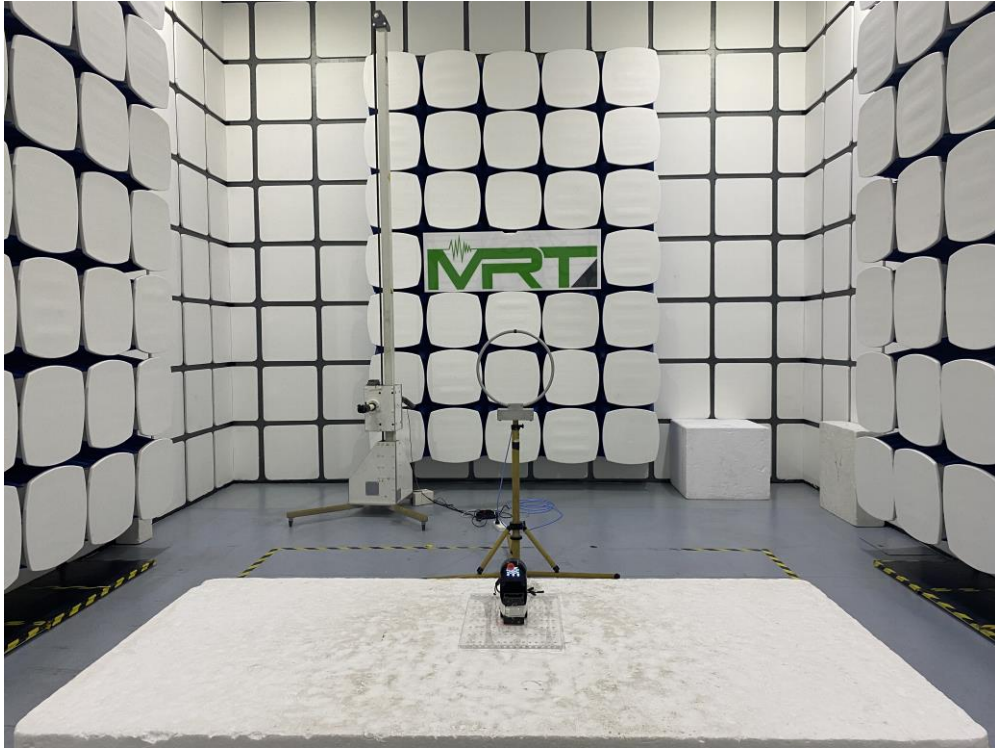


Mode 2: WPT Radiated Spurious Emission Test Setup for 30MHz ~ 1GHz

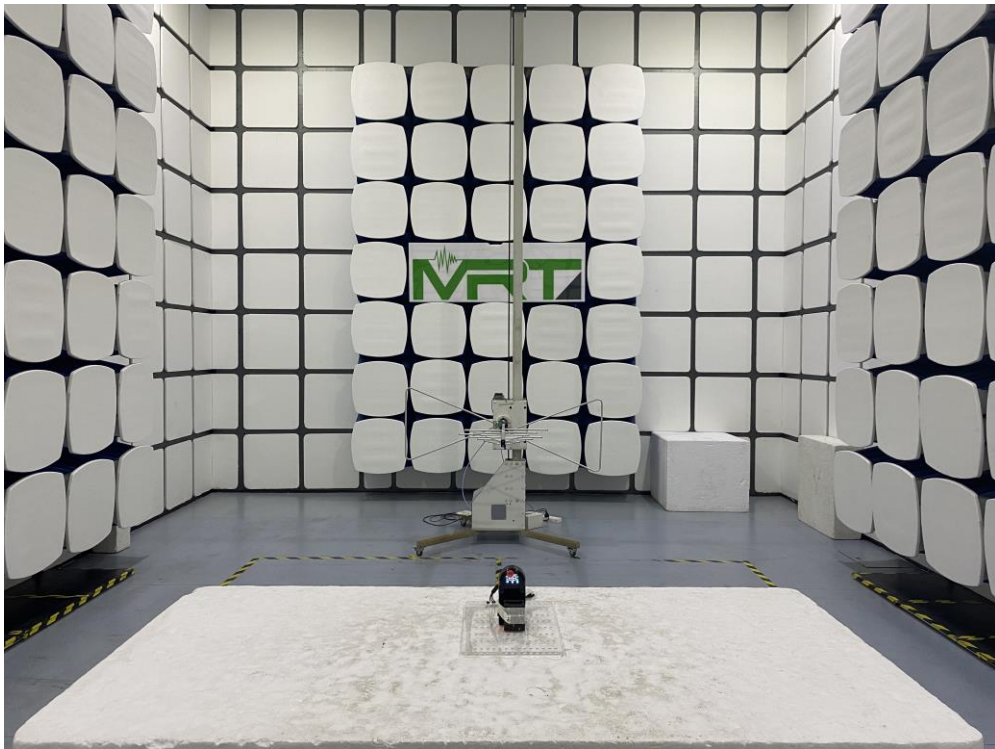


Mode 3: WPT Radiated Spurious Emission Test Setup for below 30MHz

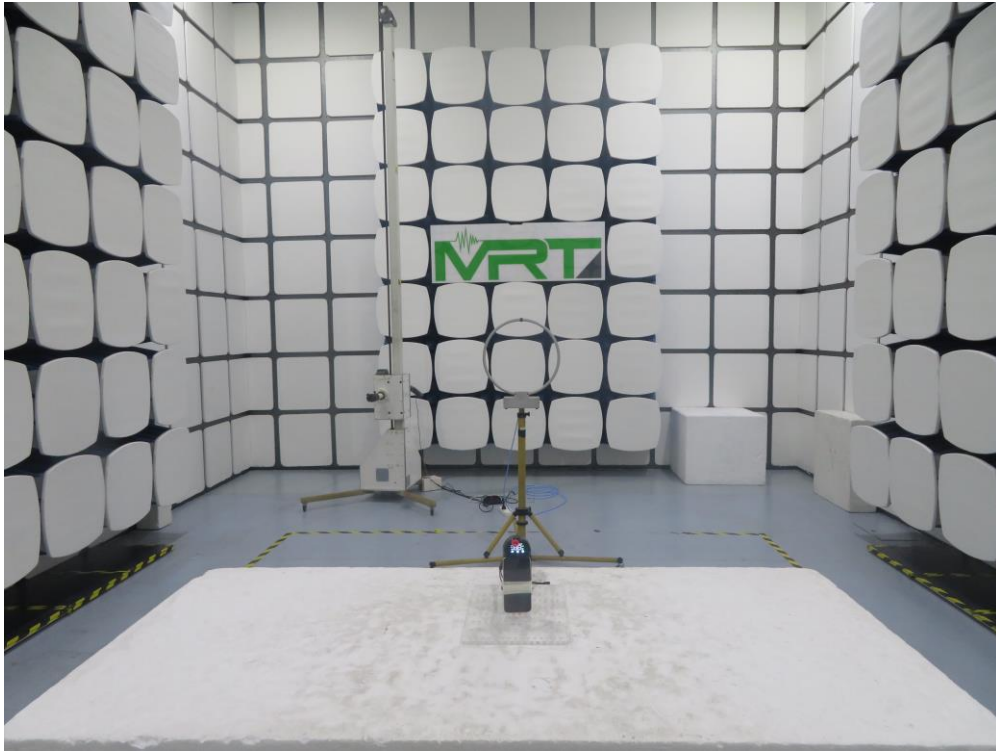


Mode 3: WPT Radiated Spurious Emission Test Setup for 30MHz ~ 1GHz

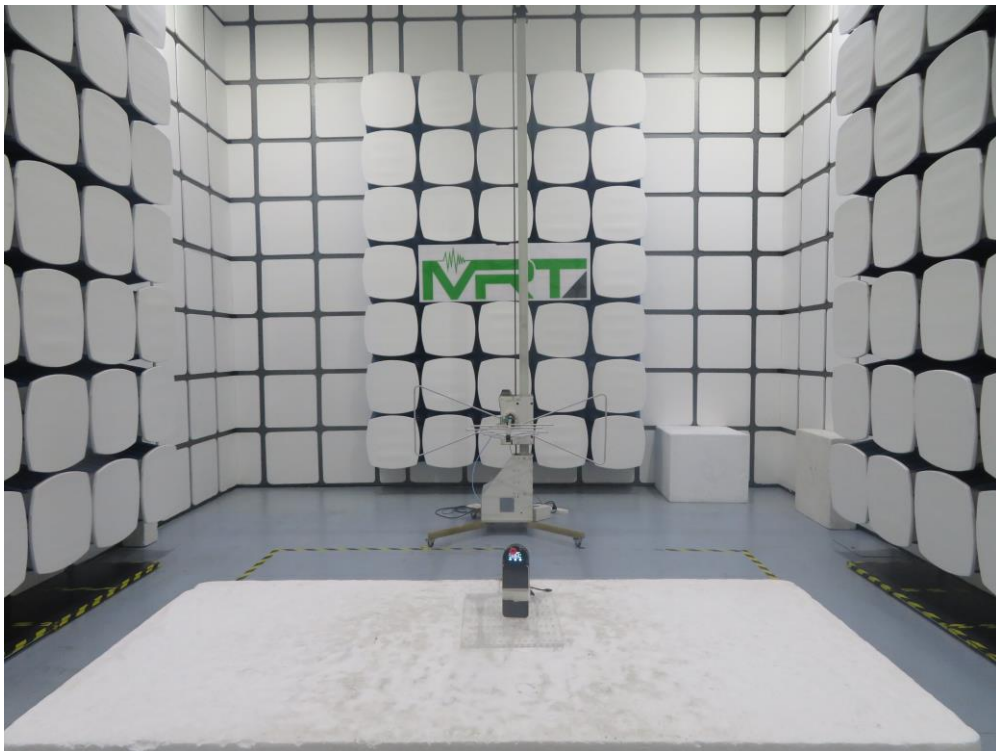


Description: NFC Radiated Spurious Emission Test Setup for below 30MHz

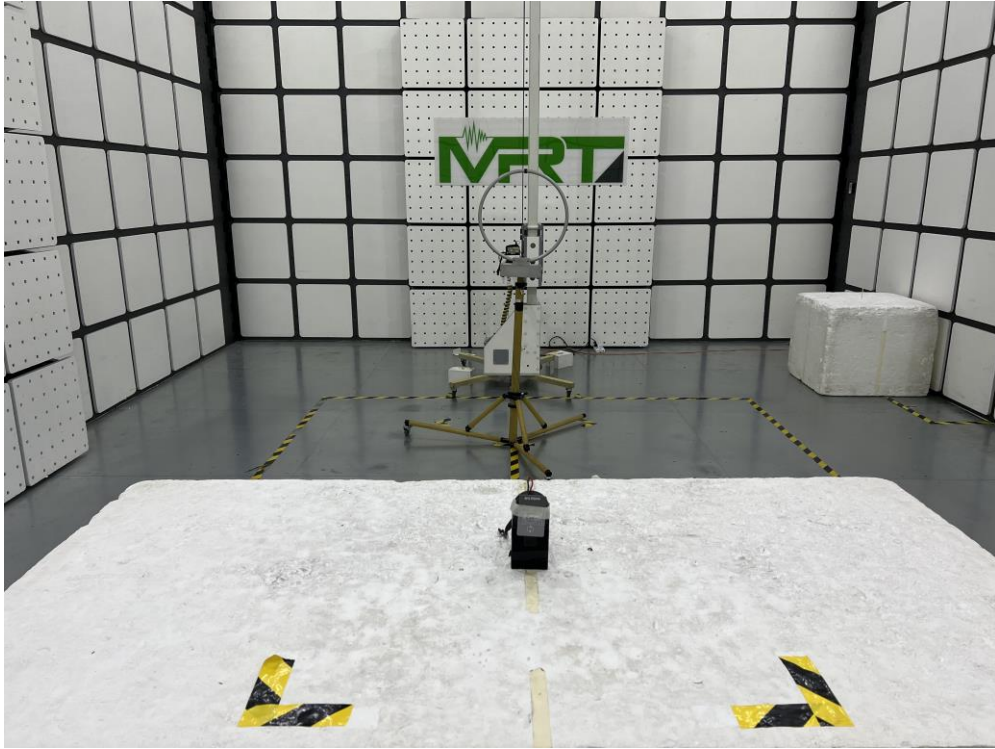


Description: NFC Radiated Spurious Emission Test Setup for 30MHz ~ 1GHz

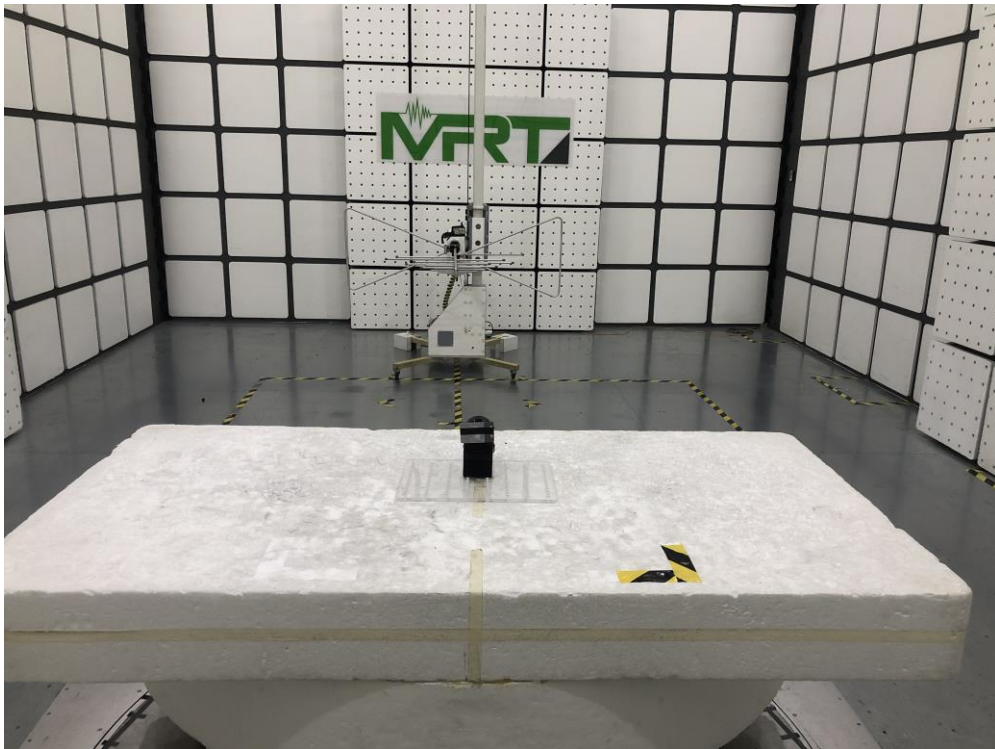


Mode 1: WPT RF Exposure Test Setup for Electric Field Emissions

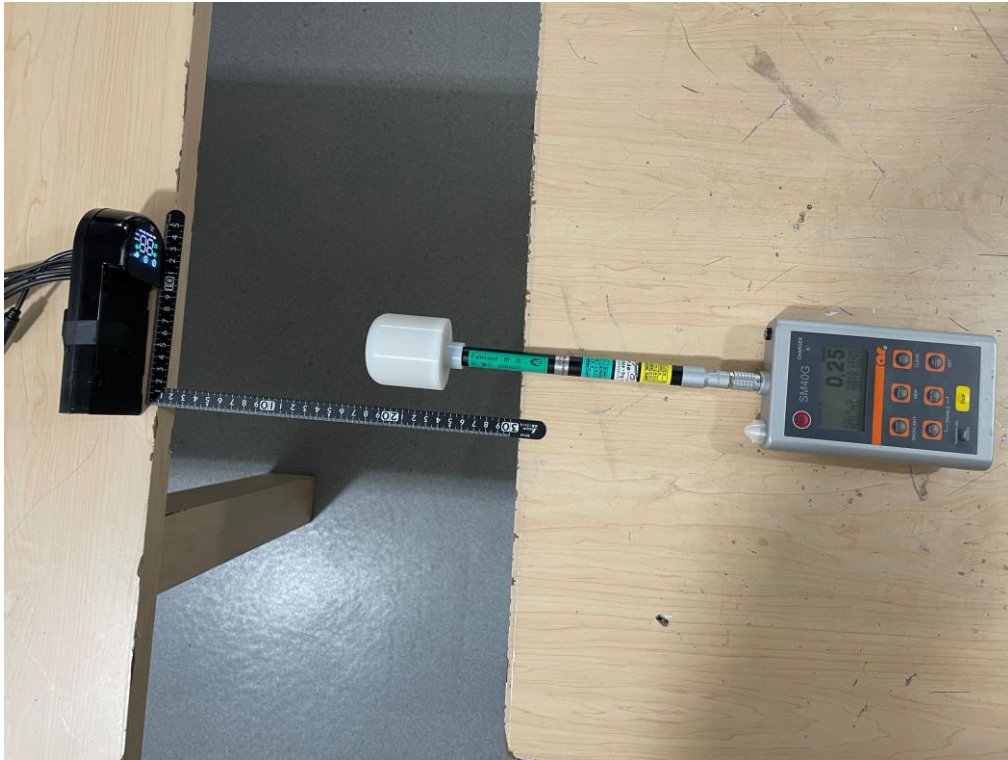


Mode 1: WPT RF Exposure Test Setup for Magnetic Field Emissions

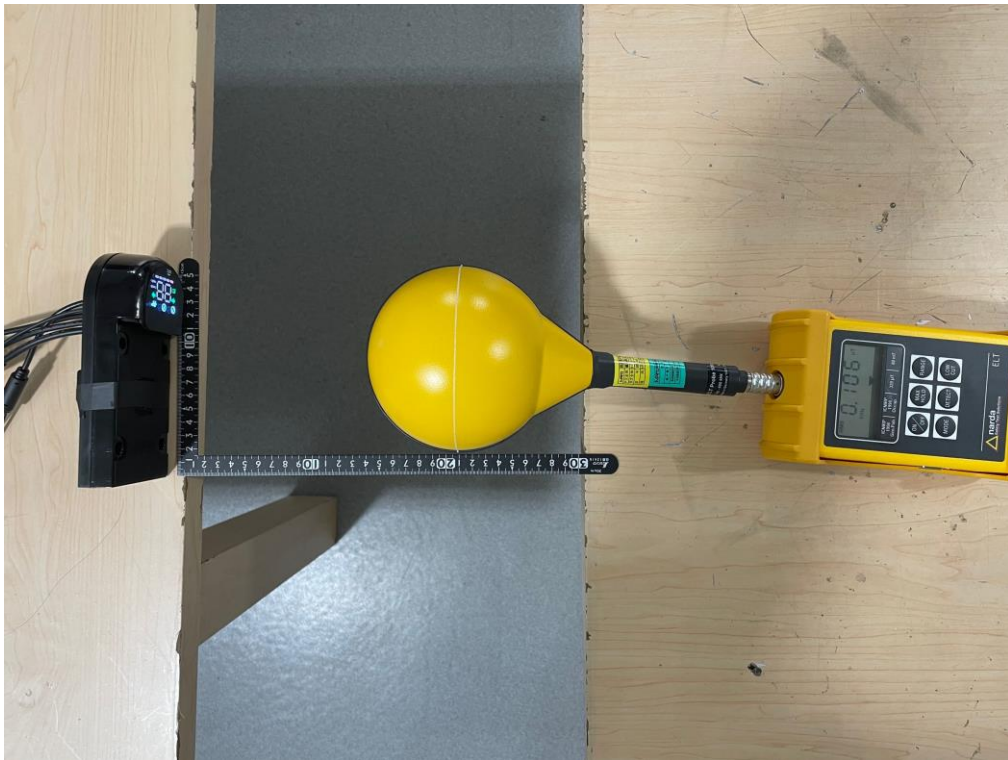


Mode 2: WPT RF Exposure Test Setup for Electric Field Emissions

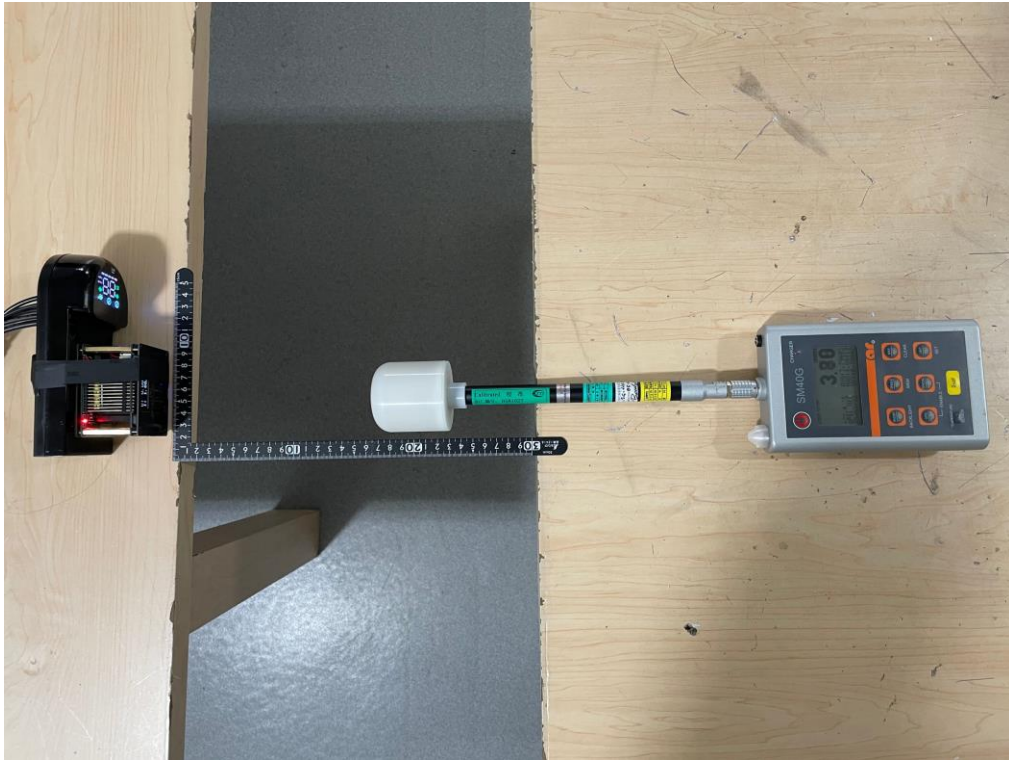

Mode 2: WPT RF Exposure Test Setup for Magnetic Field Emissions

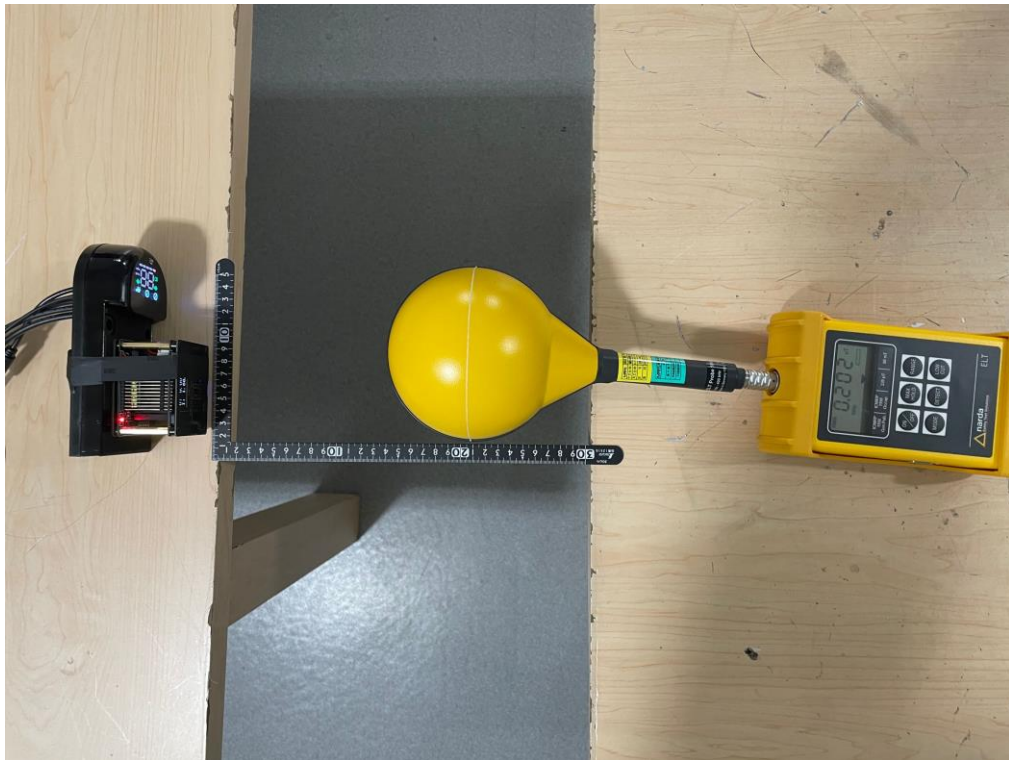

Mode 3: WPT RF Exposure Test Setup for Electric Field Emissions

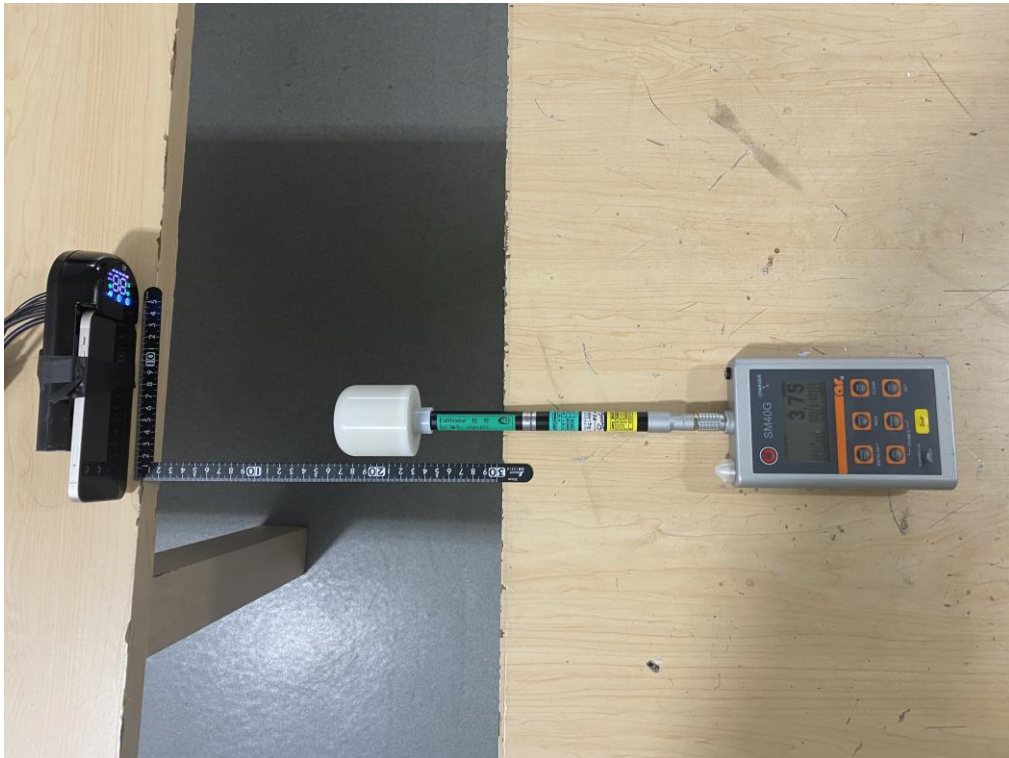

Mode 3: WPT RF Exposure Test Setup for Magnetic Field Emissions

