
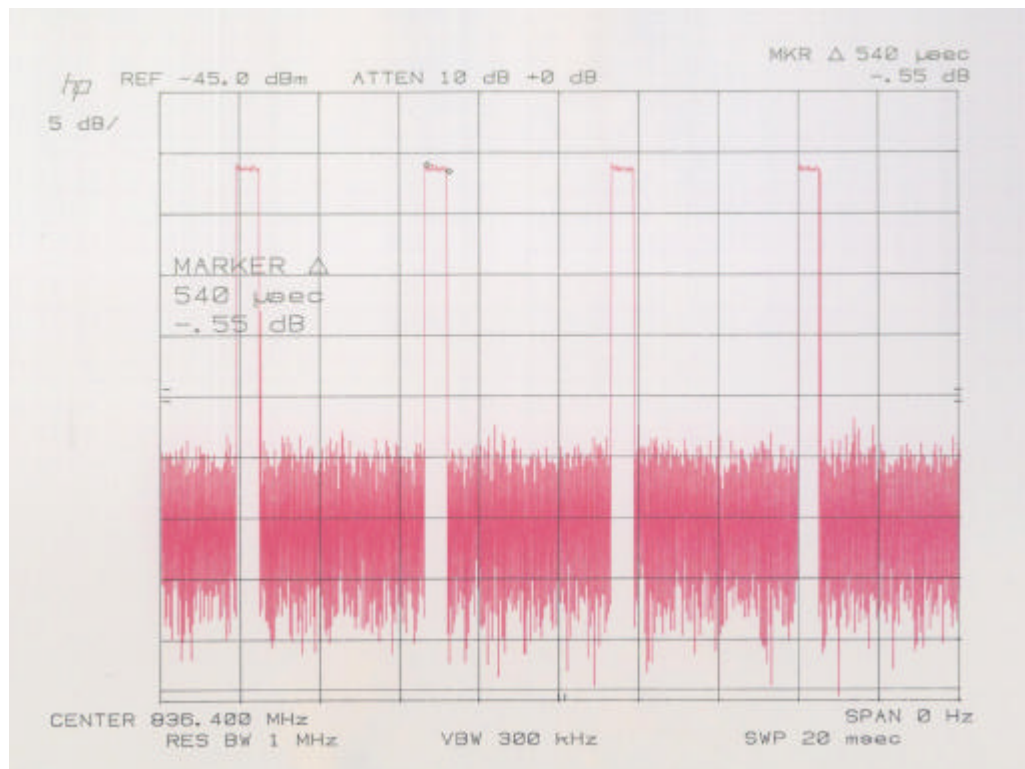


Duty Cycle Plots

Modulation Type: GSM 850



$$\text{Duty Cycle: } 100 \times (0.540/4.680) = 11.54\%$$

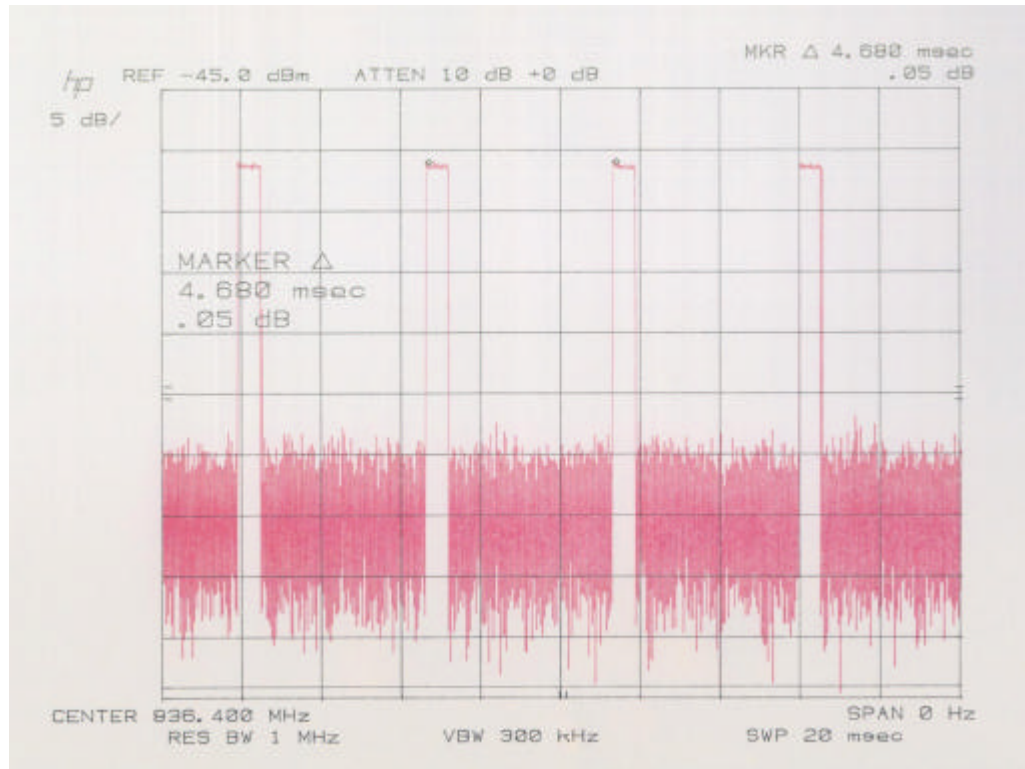

Duty Cycle Plots

Modulation Type: GPRS 850



$$\text{Duty Cycle: } 100 \times (1.140/4.720) = 24.15\%$$

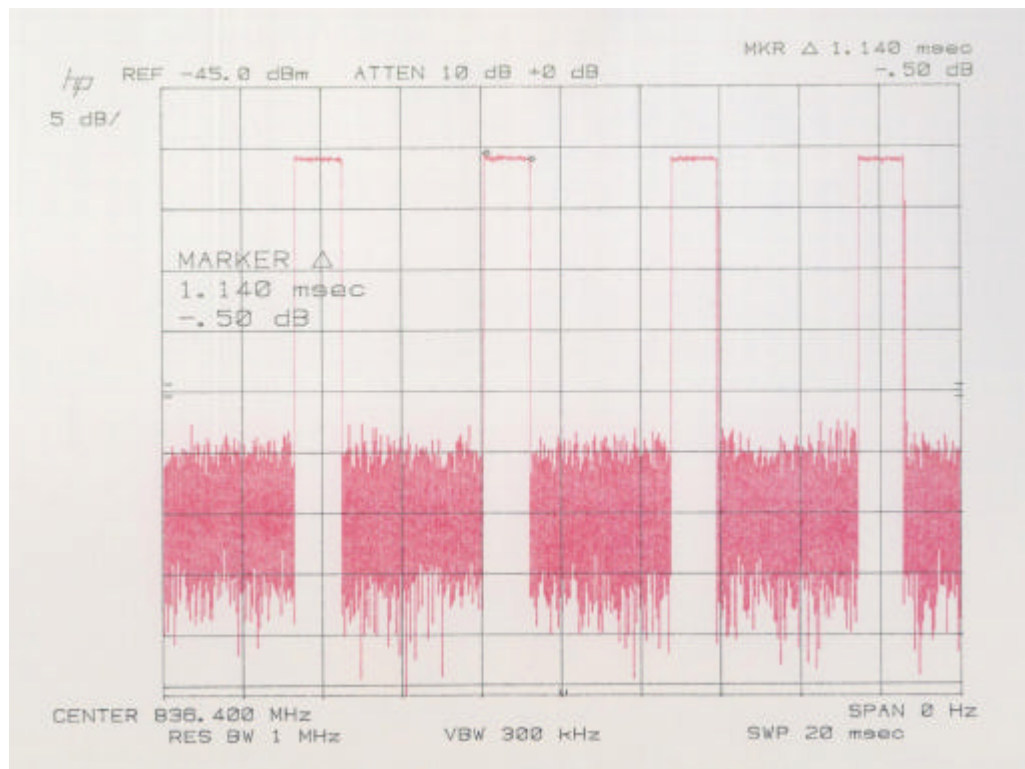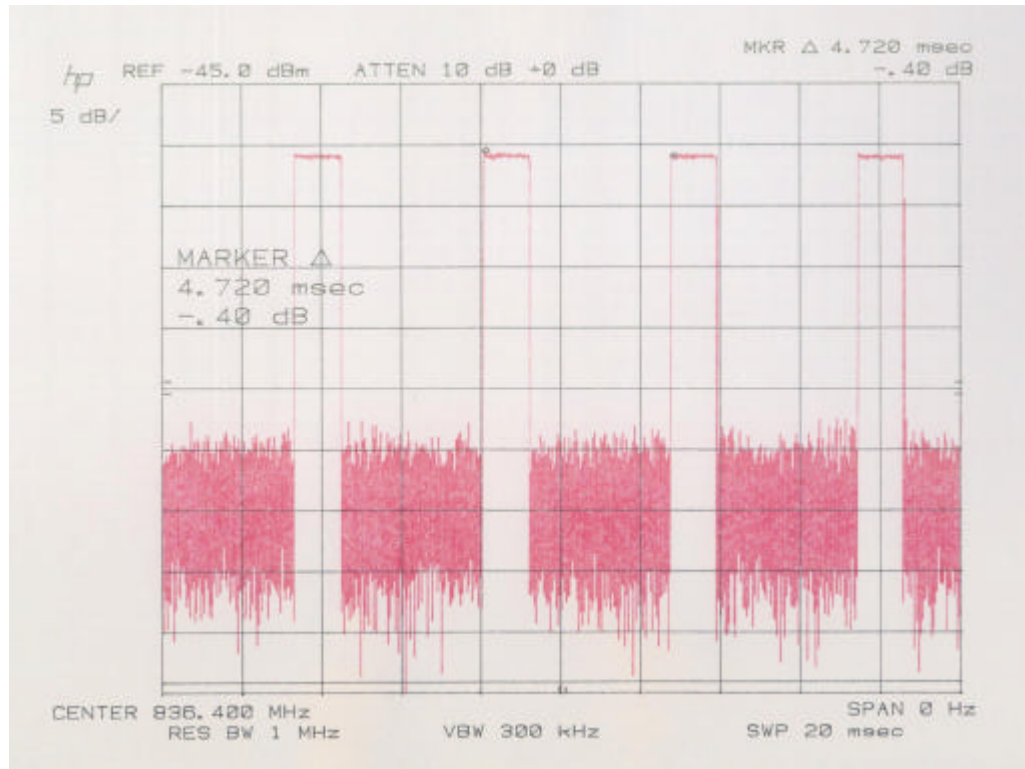

Duty Cycle Plots

Modulation Type: PCS 1900

$$\text{Duty Cycle: } 100 \times (0.540/4.580) = 11.79\%$$

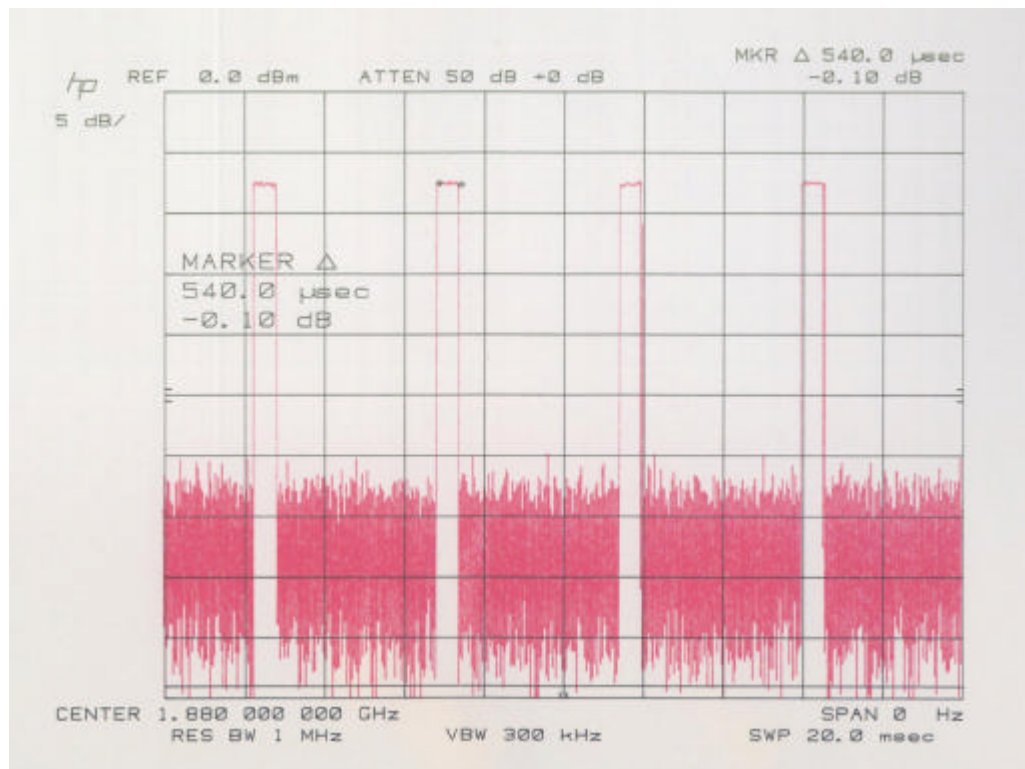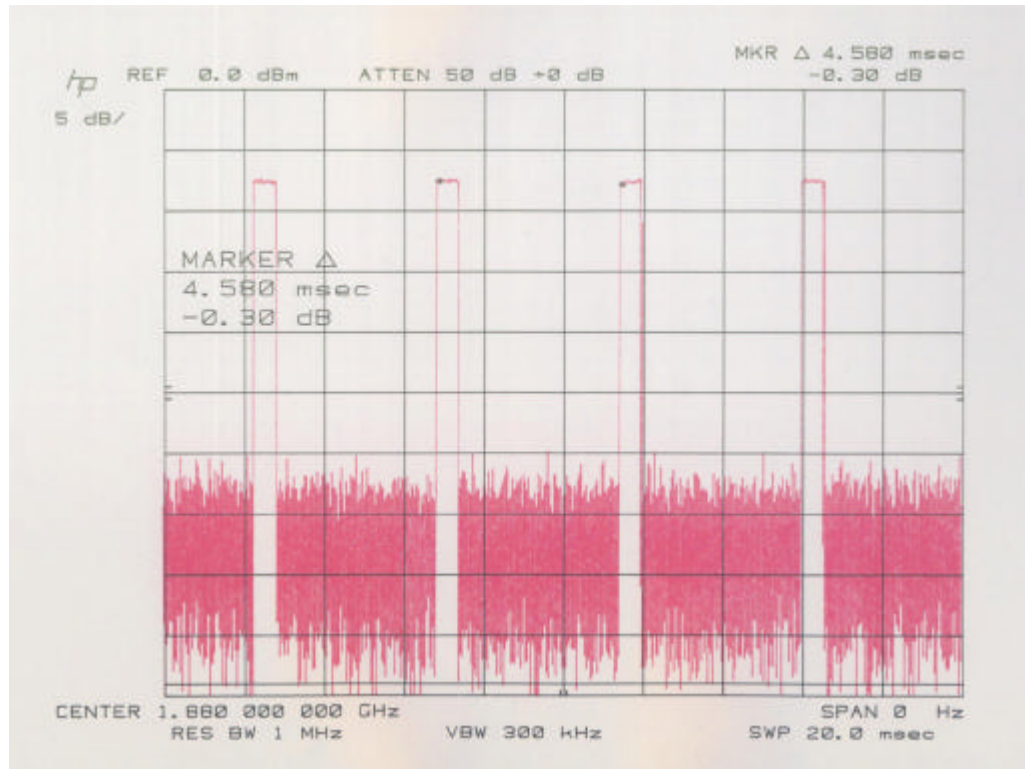

Duty Cycle Plots

Modulation Type: GPRS 1900

Duty Cycle: $100 \times (1.120/4.580) = 24.45\%$

