	Document name: NURIT 8400 Total Assembly Instructions	Ins Name:INS_ASSY_8400_A02	
<b>Written by:</b> Felix Schwartz	<b>Checked by:</b> Shmuel Lepel	Date: 25/12/2006	Page 20 of 21
	<b>Approved by:</b> Shmuel Lepel		

- 10.6 Affix all the labels specified in the product tree to the back of the Terminal.
- 10.7 If the model require S.C cover it's should be assembled in the entrance of the S.C (see Fig No.10.7).

Fig. No. 10.6


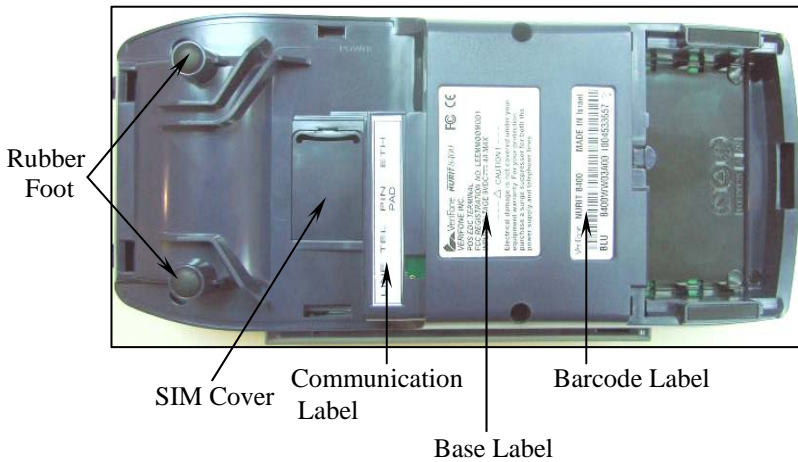


Fig. No. 10.7



- 10.8 Remove the Paper Spindle carefully from the Printer.
- 10.9 Assemble the Paper Spindle in the Paper Cover (see Fig. No. 10.9).
- 10.10 Assemble the Paper Cover Assembly to the Panel and lock the assembly until you hear the locking click.

Fig. No. 10.9

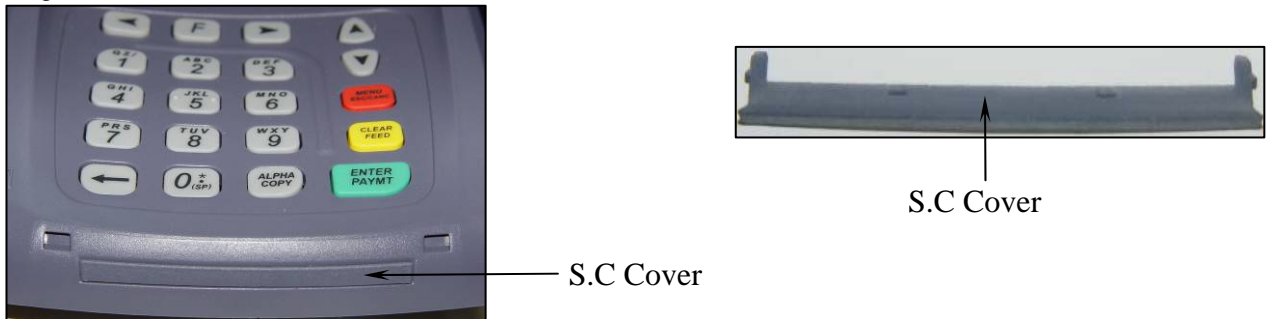