


**For the copier without any finisher**

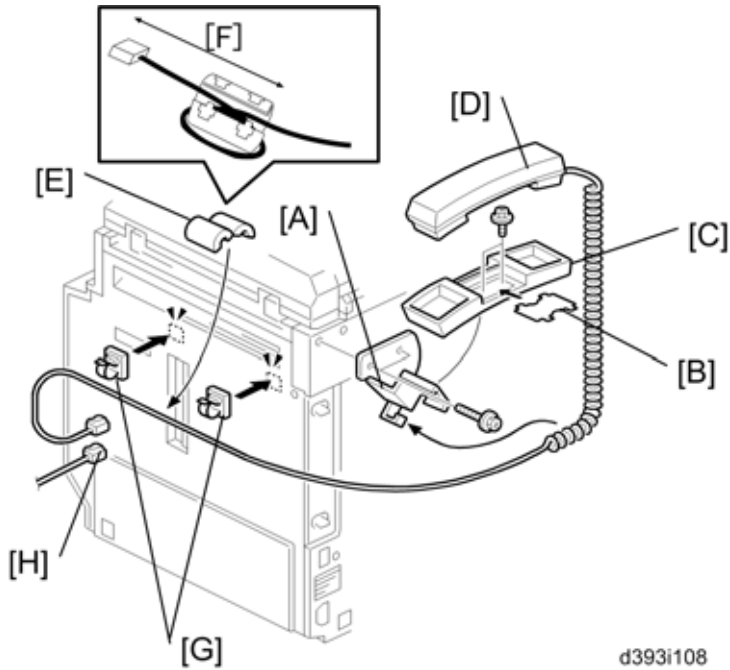

d393i108

1. Make two holes in the scanner left cover.
2. Attach the bracket [A] enclosed with the fax unit (⚙ x 2: M3 x 12) as shown.
3. Remove the label [B] from the handset cradle [C]. Attach the cradle [C] to the bracket [A] (⚙ x 2: M3 x 8), and then replace the label [B].
4. Install the handset [D] on the cradle [C].
5. Attach the ferrite core [E] to the cable. The length [F] must be 90 mm.
6. Attach the two clamps [G] as shown.
7. Line the cable [H] as shown (⚙ x 2).
8. Connect the cable [H] to the "TEL" jack at the rear of the machine.

**For the copier with a finisher**

