


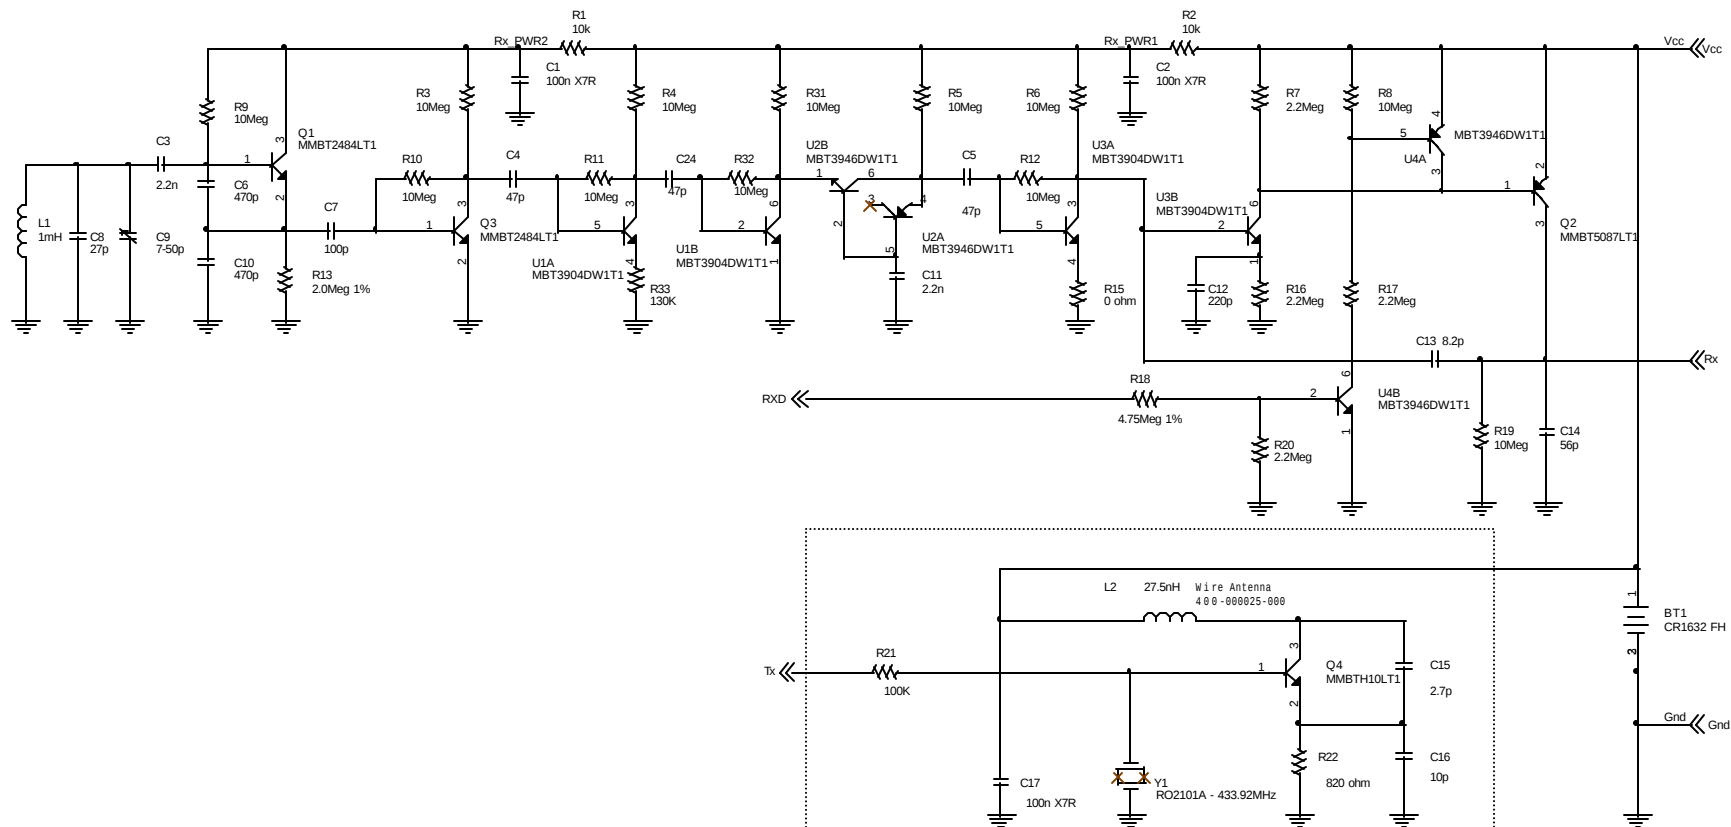

Tx Section
Antenna connections should be accomplished on the bottom side of the PCB, retaining existing trace geometry.
Antenna pads should exist on both sides of the board and utilize two vias each for mechanical strength. The pads must be open, i.e. without solder mask.

EXI Wireless Systems Confidential

Title Ptage2 - RF

Size B Document Number 911-000021-000

Rev 0.20

Date: Friday, September 22, 2000

Sheet 3 of 4