



DRAFT

**GARMIN**[®]

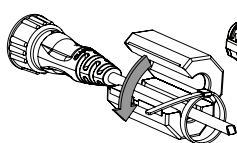

POWER

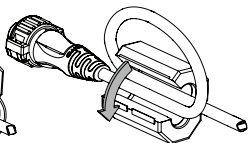

XDCR

Install one ferrite bead on the power cable. For devices with sonar, also install one bead on each transducer cable.

October 2021

Printed in Taiwan

190-02912-92_0A

