


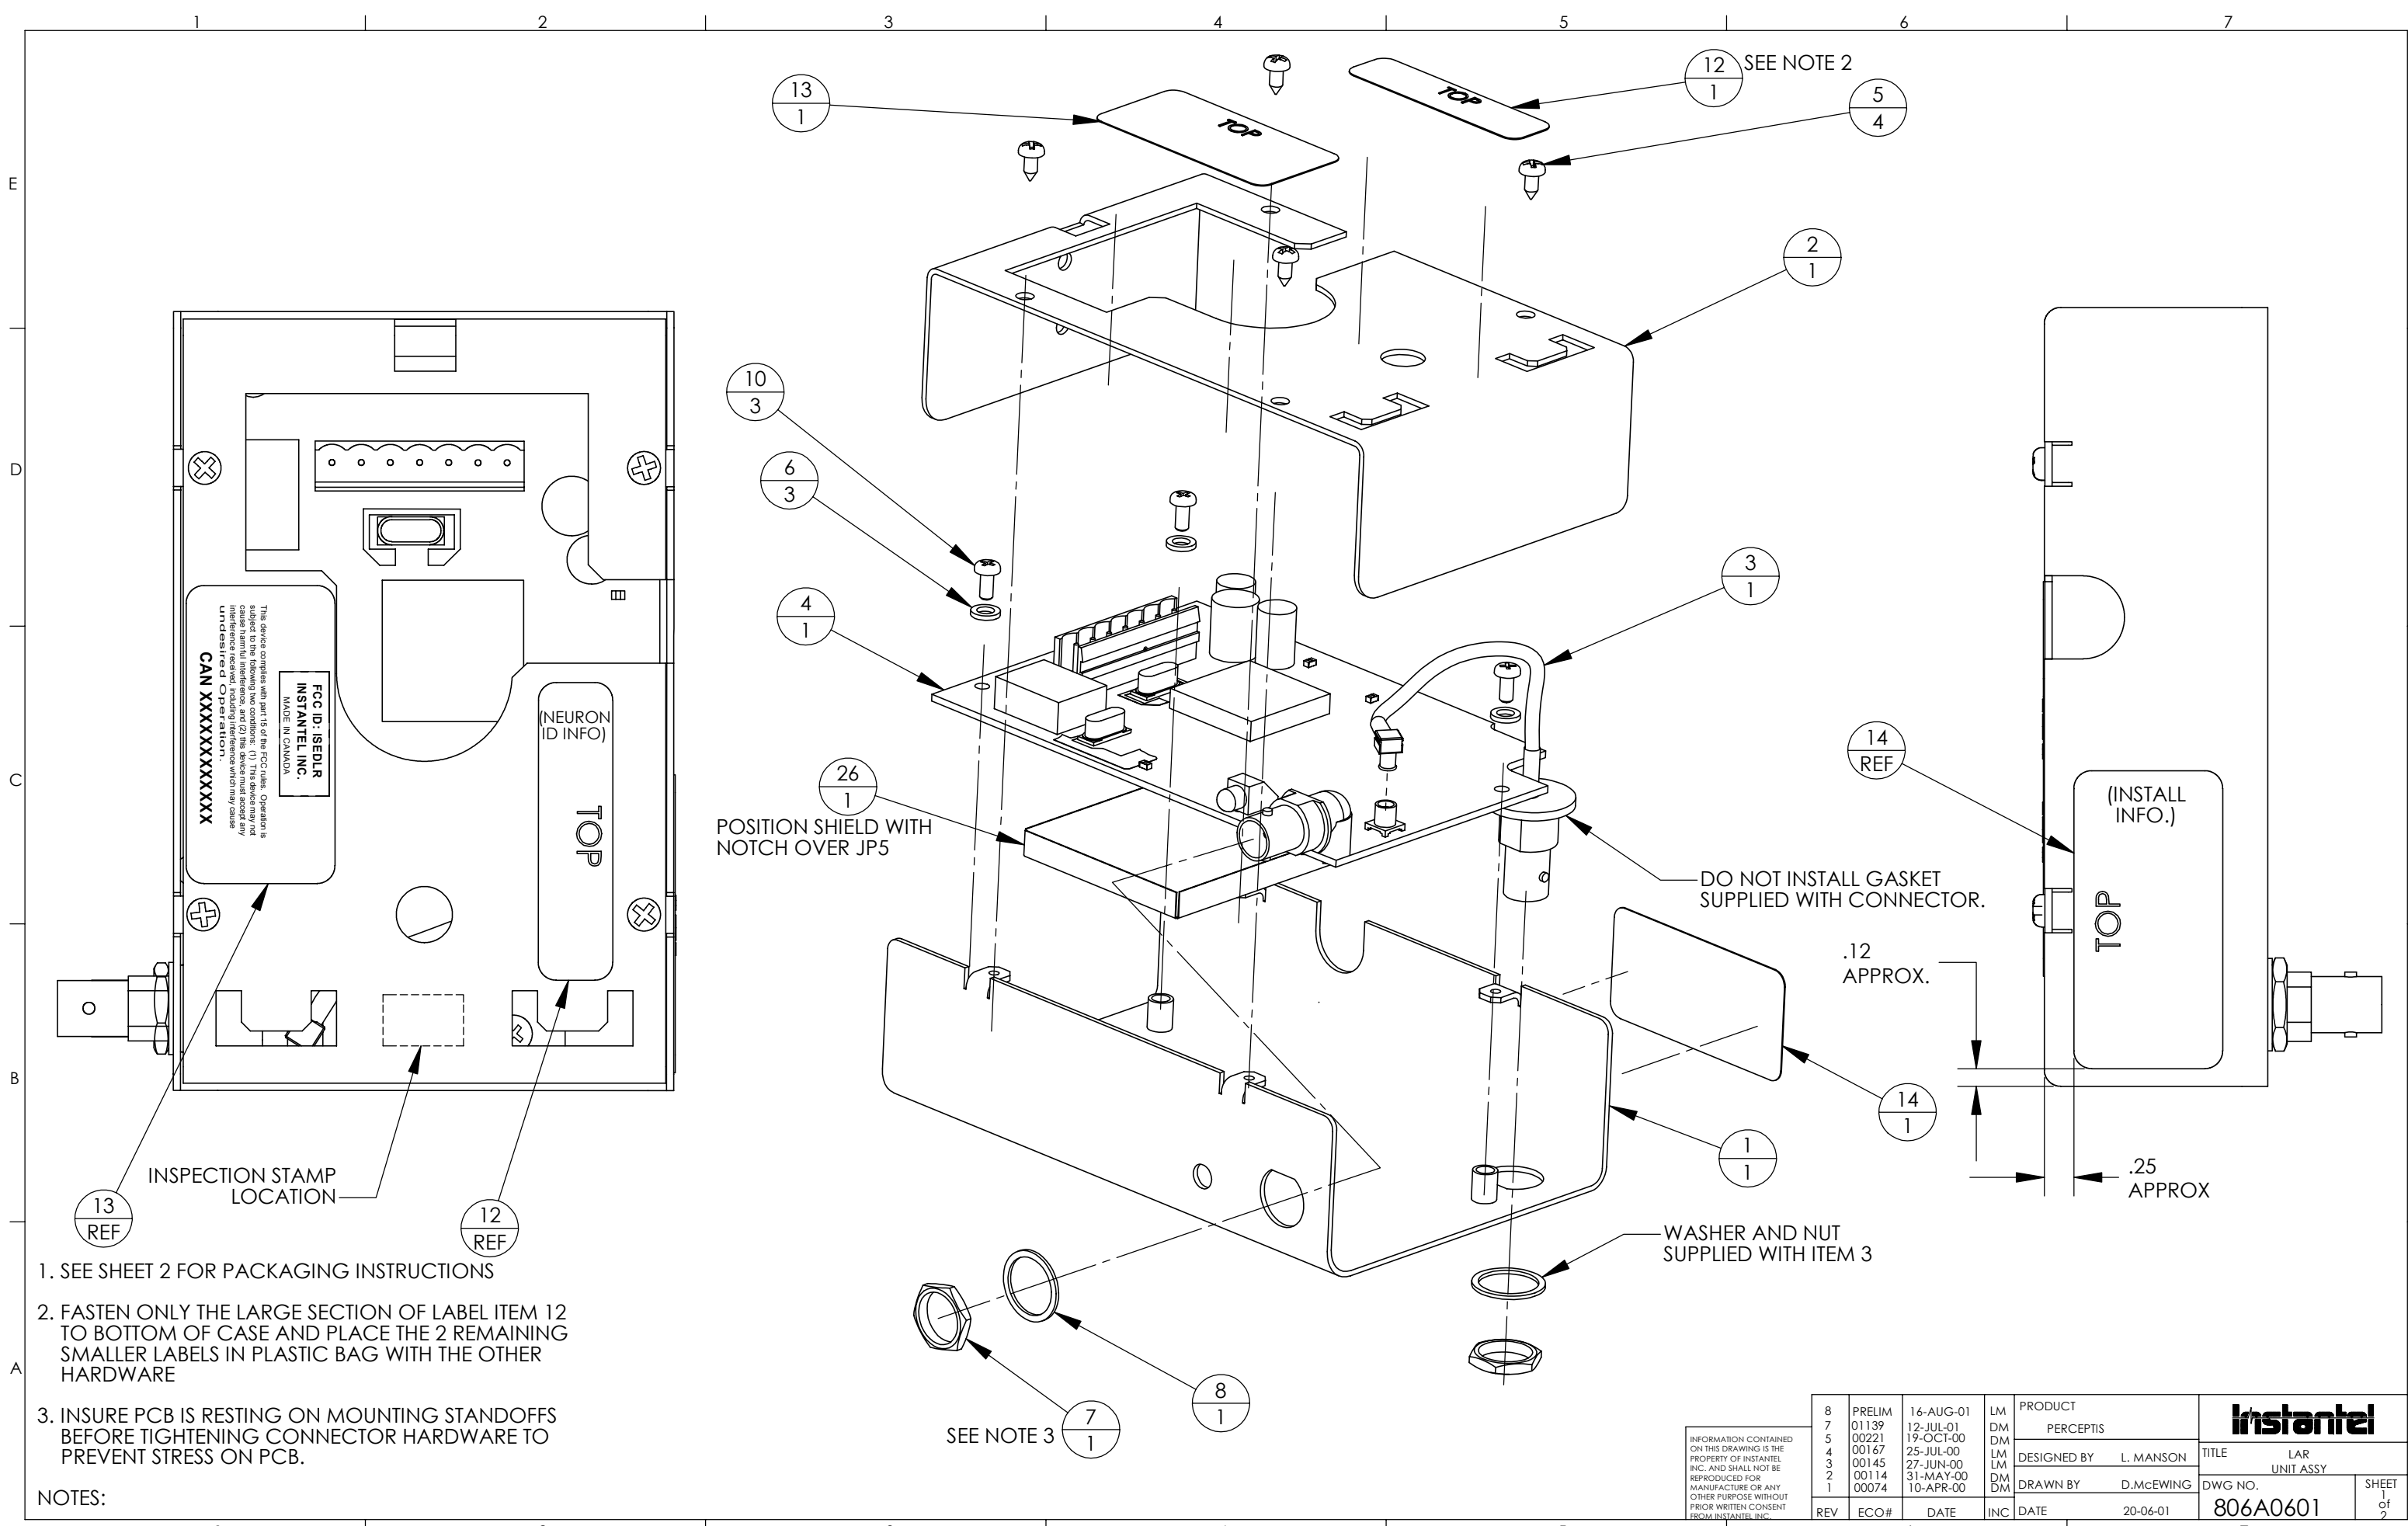

NOTES:

1. SEE SHEET 2 FOR PACKAGING INSTRUCTIONS
2. FASTEN ONLY THE LARGE SECTION OF LABEL ITEM 12 TO BOTTOM OF CASE AND PLACE THE 2 REMAINING SMALLER LABELS IN PLASTIC BAG WITH THE OTHER HARDWARE
3. INSURE PCB IS RESTING ON MOUNTING STANDOFFS BEFORE TIGHTENING CONNECTOR HARDWARE TO PREVENT STRESS ON PCB.

INFORMATION CONTAINED ON THIS DRAWING IS THE PROPERTY OF INSTANTEL INC. AND SHALL NOT BE REPRODUCED FOR MANUFACTURE OR ANY OTHER PURPOSE WITHOUT PRIOR WRITTEN CONSENT FROM INSTANTEL INC.

8	PRELIM	14-AUG-01	LM	PRODUCT	INSTANTEL
7	01139	12-JUL-01	DM	PERCEPTIS	
5	00221	19-OCT-00	DM	DESIGNED BY	L. MANSON
4	00167	25-JUL-00	LM	DRAWN BY	D.McEWING
3	00145	27-JUN-00	LM	DATE	20-06-01
2	00114	31-MAY-00	DM		
1	00074	10-APR-00	DM		
REV	ECO#	DATE	INC		

TITLE	LAR UNIT ASSY
DWG NO.	806A0601
SHEET	2